



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER ASPIRE E5-572G. You'll find the answers to all your questions on the ACER ASPIRE E5-572G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ACER ASPIRE E5-572G**  
**User guide ACER ASPIRE E5-572G**  
**Operating instructions ACER ASPIRE E5-572G**  
**Instructions for use ACER ASPIRE E5-572G**  
**Instruction manual ACER ASPIRE E5-572G**

### Technical Documentation of (EU) No 617/2013

Product type	Notebook computer
Product category	B
Manufacturer name, address	Acer Italy s.r.l., Via Lepetit, 40, 20020 Lainate (MI) Italy
Product model number	Aspire E5-572
Year of manufacture	2014
E <sub>rec</sub> allowance with capability adjustments when discrete graphics cards are disabled (from 1 July 2014)	52.8 kWh/year
E <sub>rec</sub> allowance with capability adjustments when discrete graphics cards are enabled (from 1 July 2014)	64.8 kWh/year
E <sub>rec</sub> allowance with capability adjustments when discrete graphics cards are disabled (from 1 January 2016)	40.8 kWh/year
E <sub>rec</sub> allowance with capability adjustments when discrete graphics cards are enabled (from 1 January 2016)	52.8 kWh/year
Whether all discrete graphics card are enabled during the test	No
Whether switchable graphics mode with UMA is driving the display during the test	Yes
E <sub>rec</sub> of highest power-demanding configuration	30.08 kWh/year
Idle state power demand	4.88 Watt
Sleep mode power demand	0.52 Watt
Sleep mode with WOL enabled power demand	0.48 Watt
Off mode power demand	0.32 Watt
Off mode with WOL enabled power	0.27 Watt
Maximum power demand	Not applicable
Internal power supply (IPS) efficiency at 10 %, 20 %, 50 % and 100 % of rated output power	Not applicable
External power supply's (EPS) average active efficiency	87.50%
Noise levels (the declared A-weighted sound power level, L <sub>WA</sub> ) of idle mode	2.6 B
Noise levels (the declared A-weighted sound power level, L <sub>WA</sub> ) of "HDD random seek" mode	2.7 B



[You're reading an excerpt. Click here to read official ACER ASPIRE E5-572G user guide](#)

<http://yourpdfguides.com/dref/5669319>

**Manual abstract:**

*Measurement methodology for ETEC EN 62623:2013 — Desktop and notebook computers — Measurement of energy consumption: 5. Measurement methodology for sleep mode Measurement methodology for off mode EN 62623:2013 — Desktop and notebook computers — Measurement of energy consumption: 5. @@@@Determination of the declared noise emission values. @@ installation and operating instructions; 6. @@@@ 15 Equipment category: personal computers and workstations. @@Sequence of steps for achieving a stable condition with respect to power demand Description of how sleep mode was selected or programmed EN 62623:2013 — Desktop and notebook computers — Measurement of energy Description of how off mode was selected consumption: or programmed 5. ENERGY STAR® Program Sequence of events required to reach the Requirements Product Specification for mode where the equipment automatically Computers, Eligibility Criteria Version 6. 0, changes to sleep mode Rev. @@.*



**[You're reading an excerpt. Click here to read official ACER ASPIRE E5-572G user guide](http://yourpdfguides.com/dref/5669319)**  
**<http://yourpdfguides.com/dref/5669319>**