



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER ASPIRE U5-620. You'll find the answers to all your questions on the ACER ASPIRE U5-620 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER ASPIRE U5-620
User guide ACER ASPIRE U5-620
Operating instructions ACER ASPIRE U5-620
Instructions for use ACER ASPIRE U5-620
Instruction manual ACER ASPIRE U5-620

Technical Documentation of (EU) No 617/2013

Product type	Integrated desktop computer	
	B	D
Product category	B D	
Manufacturer name, address	Acer Italy s.r.l., Via Lepetit, 40, 20020 Lainate (MI) Italy	
Product model number	Aspire AU5-620	
Year of manufacture	2014	
E _{rec} allowance with capability adjustments when discrete graphics cards are disabled (from 1 July 2014)	162 kWh/year	223 kWh/year
E _{rec} allowance with capability adjustments when discrete graphics cards are enabled (from 1 July 2014)	Not applicable	267 kWh/year
E _{rec} allowance with capability adjustments when discrete graphics cards are disabled (from 1 January 2016)	116 kWh/year	162 kWh/year
E _{rec} allowance with capability adjustments when discrete graphics cards are enabled (from 1 January 2016)	Not applicable	180 kWh/year
Whether all discrete graphics card are enabled during the test	No	Yes
Whether switchable graphics mode with UMA is driving the display during the test	Not applicable	No
E _{rec} of highest power-demanding configuration	42.43 kWh/year	73.78 kWh/year
Idle state power demand	11.26 Watt	20.12 Watt
Sleep mode power demand	2.07 Watt	2.98 Watt
Sleep mode with WOL enabled power demand	2.07 Watt	2.98 Watt
Off mode power demand	0.43 Watt	0.41 Watt
Off mode with WOL enabled power demand	0.72 Watt	0.73 Watt
Maximum power demand	Not applicable	Not applicable
Internal power supply (IPS) efficiency at 10 %, 20 %, 50 % and 100 % of rated output power	Not applicable	Not applicable
External power supply's (EPS) average active efficiency	87.94%	87.94%
Noise levels (the declared A-weighted sound power level, L _{WA}) of idle mode	3.1 B	3.1 B



[You're reading an excerpt. Click here to read official ACER ASPIRE U5-620 user guide](#)

<http://yourpdfguides.com/dref/5670452>

Manual abstract:

L, Via Lepetit, 40, 20020 Lainate (MI) Italy Aspire AU5-620 2014 162 kWh/year 223 kWh/year adjustments when discrete graphics cards Not applicable are enabled (from 1 July 2014) ETEC allowance with capability adjustments when discrete graphics cards are disabled (from 1 January 2016) ETEC allowance with capability 116 kWh/year 257 kWh/year 162 kWh/year adjustments when discrete graphics cards Not applicable are enabled (from 1 January 2016) Whether all discrete graphics card are No enabled during the test Whether switchable graphics mode with Not applicable UMA is driving the display during the test ETEC of highest power-demanding 42. 07 Watt Sleep mode with WOL enabled power 2. 07 Watt demand Off mode power demand 0. 43 Watt Off mode with WOL enabled power 0. 72 Watt demand Maximum power demand Not applicable Internal power supply (IPS) efficiency at 10 %, 20 %, 50 % and 100 % of rated Not applicable output power External power supply's (EPS) average 87. 1 B Noise levels (the declared A-weighted sound power level, LWAd) of "HDD random seek" mode Minimum number of loading cycles that the batteries can withstand Configuration of memory Configuration of internal storage Configuration of discrete television tuner Configuration of discrete audio card Configuration of discrete graphics cards Configuration of discrete graphics cards category The battery in this product cannot be easily replaced by users themselves For products with an integrated display, the total content of mercury is Not applicable 4G 1 piece 0 piece 0 piece 0 piece Not applicable Not applicable 0mg 3. 1 B Not applicable 4~16G 1 piece 0 piece 0 piece 1 piece G1 Not applicable 0mg 3. @@@@ @@@@ Determination of the declared noise emission values. @@ installation and operating instructions; 6. @@@@ 15
Equipment category: personal computers and workstations.
@@Sequence of steps for achieving a stable condition with respect to power demand Description of how sleep mode was selected or programmed EN 62623:2013 — Desktop and notebook computers — Measurement of energy Description of how off mode was selected consumption: or programmed 5. ENERGY STAR® Program Requirements Sequence of events required to reach the Product Specification for Computers, mode where the equipment automatically Eligibility Criteria Version 6. @@.



[You're reading an excerpt. Click here to read official ACER ASPIRE U5-620 user guide](http://yourpdfguides.com/dref/5670452)
<http://yourpdfguides.com/dref/5670452>