



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER ASPIRE Z1-621. You'll find the answers to all your questions on the ACER ASPIRE Z1-621 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER ASPIRE Z1-621
User guide ACER ASPIRE Z1-621
Operating instructions ACER ASPIRE Z1-621
Instructions for use ACER ASPIRE Z1-621
Instruction manual ACER ASPIRE Z1-621

Technical Documentation of (EU) No 617/2013

Product type	Integrated desktop computer
Product category	D
Manufacturer name, address	Acer Italy s.r.l., Via Lepetit, 40, 20020 Lainate (MI) Italy
Product model number	Aspire AZ 1-621
Year of manufacture	2014
E _{rec} allowance with capability adjustments when discrete graphics cards are disabled (from 1 July 2014)	211 kWh/year
E _{rec} allowance with capability adjustments when discrete graphics cards are enabled (from 1 July 2014)	Not applicable
E _{rec} allowance with capability adjustments when discrete graphics cards are disabled (from 1 January 2016)	150 kWh/year
E _{rec} allowance with capability adjustments when discrete graphics cards are enabled (from 1 January 2016)	Not applicable
Whether all discrete graphics card are enabled during the test	Not applicable
Whether switchable graphics mode with UMA is driving the display during the test	Not applicable
E _{rec} of highest power-demanding configuration	25.89 kWh/year
Idle state power demand	7 Watt
Sleep mode power demand	0.48 Watt
Sleep mode with WOL enabled power demand	0.48 Watt
Off mode power demand	0.24 Watt
Off mode with WOL enabled power demand	Not applicable
Maximum power demand	Not applicable
Internal power supply (IPS) efficiency at 10 %, 20 %, 60 % and 100 % of rated output power	Not applicable
External power supply's (EPS) average active efficiency	89.12%
Noise levels (the declared A-weighted sound power level, L _{WA}) of idle mode	2.97 B



[You're reading an excerpt. Click here to read official ACER ASPIRE Z1-621 user guide](#)

<http://yourpdfguides.com/dref/5740604>

Manual abstract:

@@@Power supplies — Determination of no-load power and average efficiency of active modes. @@Determination of the declared noise emission values. @@ installation and operating instructions; 6. @@@@ 15 Equipment category: personal computers and workstations. Measurement methodology for battery loading cycles Not applicable EN 62623:2013 — Desktop and notebook computers — Measurement of energy consumption: 5. @@@@.



[You're reading an excerpt. Click here to read official ACER ASPIRE Z1-621 user guide](#)
<http://yourpdfguides.com/dref/5740604>