



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER CHROMEBOOK C720P-29552G03AII. You'll find the answers to all your questions on the ACER CHROMEBOOK C720P-29552G03AII in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER CHROMEBOOK C720P-29552G03AII

User guide ACER CHROMEBOOK C720P-29552G03AII

Operating instructions ACER CHROMEBOOK C720P-29552G03AII

Instructions for use ACER CHROMEBOOK C720P-29552G03AII

Instruction manual ACER CHROMEBOOK C720P-29552G03AII



C720P Chromebook User's Manual



[You're reading an excerpt. Click here to read official ACER CHROMEBOOK C720P-29552G03AII user guide](http://yourpdfguides.com/dref/5513265)
<http://yourpdfguides.com/dref/5513265>

Manual abstract:

All Rights Reserved. @@@@ Select your country, click Register a product and follow the simple instructions. After we receive your product registration, you will be sent a confirmation email with important data that you should keep in a safe place. Obtaining Acer accessories We are happy to inform you that Acer's warranty extension program and notebook accessories are available online. Come and visit our online shop and find what you need at store.acer.com. The Acer store is being progressively rolled out, and, unfortunately may not be available in some regions. @@@@9 Left side view ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 9 Right side view ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

10 Bottom view.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 11 Environment .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 11 English Touchscreen Controls 12 How the Touchscreen Works ...

.....

.....

.....

.....

.....

..... 12 Touch Gestures.

.....

.....
.....

.....
.....
.....

.....
.....
.....

.. 12 Cleaning the screen

.....
.....
.....

.....
.....
.....

..... 13 Getting started 14 Turn on your Chromebook ..

.....
.....
.....

.....
.....
.....

.... 14 Select your language settings

.....
.....
.....

.....
.....
.....

14 Connect to a network

.....
.....
.....

.....
.....
.....

.... 14 Accept the Terms of Service .

.....
.....
.....

.....
.....
.....

... 14 Sign in to your Google Account.....

.....
.....
.....

.....
.....
.....

.. 14 Create a new Google Account.....

.....
.....
.....
.....

.... 15 Browse as a guest

.....
.....
.....

.....
.....
.....
.....

.... 15 Set your account picture.....

.....
.....
.....

.....
.....
.....

..... 15 The Chrome OS Desktop 16 Desktop overview

.....
.....
.....
.....

.....
.....
.....
.....

..... 16 Window controls

.....
.....
.....

.....
.....
.....
.....

..... 16 Launcher..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 17 Status area and settings.....

.....
.....
.....
.....

.....

.... 17 Apps 18 Managing apps.

.....
.....

.....
.....
.....

.....
.....
.....

..... 18 Installing apps in Chrome OS..

.....
.....
.....

. 18 Removing apps from Chrome OS

.....
.....
.....

.. 18 Customizing apps pinned to the launcher ...

.....
.....
.....

. 18 The Get Started app....

.....
.....
.....
.....
.....

.. 18 Google Drive ...

.....
.....
.....
.....
.....
.....
.....
.....

... 18 Table of contents Sync files from Downloads to Google Drive

.....
.....

.....18 Enable offline access to Google Drive files

.....
.....

...20 Gmail ..

.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.20 Composing an email

.....

.....

.....

.....

.....

...20 Google Docs ..

.....

.....

.....

.....

.....

.....

.....

.....

.20 Creating a new document

.....

.....

.....

.....

.....

.....

20 YouTube

.....

.....

.....

.....

.....

.....

.....

...20 Playing video or audio files ..

.....

.....

.....

.....

.....

.....21 Other Supported File Types.

.....

.....

.....

.....
.....
.....
.....

.....21 Chrome Web Store

.....
.....
.....

.....
.....
.....
.....

.....21 Installing new apps from the Chrome Web Store....

.....

.....21 English Settings 22 Changing the language settings

.....
.....
.....
.....

.....22 Changing the clock settings ..

.....
.....

.....
.....
.....
.....

.....23 Customizing appearance ..

.....
.....
.....

.....
.....
.....
.....

.....23 Customizing the wallpaper ...

.....
.....
.....

.....
.....
.....

.....23 Customizing the theme

.....
.....
.....
.....

.....
.....

.....23 Setting up a printer ..

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....24 Updating Chrome OS...

.....
.....
.....
.....
.....
.....
.....
.....

.24 Automatic update

.....
.....
.....
.....
.....
.....
.....

...24 Manual update

.....
.....
.....
.....
.....
.....
.....

.....24 Help Information for your safety and comfort 25 26 Online and offline help .

.....
.....
.....
.....
.....
.....
.....

..25 Safety instructions ...

.....
.....
.....
.....
.....
.....
.....

.26 Radio frequency interference.....

.....
.....
.....
.....

.....
...30 Medical devices .

.....
.....
.....
.....
.....

.....
.....
.....

.....31 Vehicles ...

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

..31 Potentially explosive environments.....

.....
.....
.....
.....

.....32 Emergency calls....

.....
.....
.....
.....
.....
.....
.....

.....
.....

....32 Disposal instructions .

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....32 Tips and information for comfortable use.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....

.36 LCD pixel statement.....

.....
.....
.....

.....
.....

.....37 Radio device regulatory notice..

.....
.....
.....

.....
.....

.....37 General .

.....
.....
.....

.....
.....
.....

.....
.....

38 European Union (EU).....

.....
.....
.....

.....
.....

38 The FCC RF safety requirement

.....
.....
.....

..... 39 Canada — Low-power license-exempt radio communication devices (RSS-210) ...

.....
.....

.....

.....

. 39 English 6 Your Acer Chromebook tour English Your Acer Chromebook tour Now that you are done setting it up, let us show you around your new Acer Chromebook. Front view 1 2 3 # Icon Item Description Web camera for video communication. A light next to the webcam indicates that the webcam is active. Displays computer output and supports touch input.

Indicates the computer's power status. Indicates the computer's battery status. 1. Charging: The light shows amber when the battery is charging. 2. Fully charged: The light shows blue when in AC mode. 1 Webcam 2 Touchscreen Power indicator 3 Battery indicator 7 Keyboard view English 1 4 5 2 3 # 1 2 Icon Item Light sensor Keyboard Description Detects the ambient light level. For entering data into your computer. Touch-sensitive pointing device which functions like a computer mouse. Pressing down anywhere on the pad functions like the left button of a mouse. Pressing down anywhere with two fingers functions like the right button of a mouse. Internal microphone for sound recording. Turns the computer on and off. 3 Touchpad / click button 4 5 Microphone Power key 8 Your Acer Chromebook tour English Function Keys The computer uses function keys or key combinations to access some hardware and software controls, such as screen brightness and volume. The dedicated function keys each have a specific function.

. Icon Function Previous Next Reload Full-screen Next window Brightness down Brightness up Mute Volume down Volume up Search Description Go to the previous page. Go to the next page. Reload the current page. Open the page in full-screen mode. Switch to the next window. Decreases the screen brightness. Increases the screen brightness. Turns off audio output. Decreases the volume.

Increases the volume. Search from the Apps panel. 9 Touchpad The built-in touchpad is a pointing device that senses movement on its surface. This means the cursor responds as you move your fingers across the surface of the touchpad. Action Click Right-click Scroll Gesture Press down on any part of the touchpad. Press the touchpad with two fingertips. Place two fingers on the touchpad and move them up and down to scroll vertically, left and right to scroll horizontally. Click the item you want to move with one finger. With a second finger, move the item. Release both fingers to drop the item.

English Drag and drop Left side view 1 # 1 Icon Item 2 3 4 Description Connects to an AC adapter. DC-in jack 2 HDMI port Supports high-definition digital video connections. Connects to USB devices. If a port is black it is USB 2.0 compatible, if it is blue it is also USB 3.0 compatible. Connects to audio devices (e.g., speakers, headphones), or a headset with microphone. 3 USB port 4 Headset/speaker jack 10 Your Acer Chromebook tour English Right side view 1 # Icon Item Description 2 3 1 SD™ card reader Accepts Secure Digital (SD™) cards.

Note: Push to remove/install the card. The card reader uses one card at a time. Connects to USB devices. If a port is black it is USB 2.0 compatible, if it is blue it is also USB 3.0 compatible. Connects to a Kensington-compatible computer security lock. Note: Wrap the computer security lock cable around an immovable object such as a table or handle of a locked drawer. Insert the lock into the notch and turn the key to secure the lock. Some keyless models are also available.

2 USB port Kensington lock slot 3 11 Bottom view English 1 # 1 Icon Item Speakers Description Left and right speakers deliver stereo audio output. Environment • Temperature: • Operating: 5 °C to 35 °C • Non-operating: -20 °C to 65 °C Humidity (non-condensing): • • Operating: 20% to 80% Non-operating: 20% to 80% • 12 Touchscreen Controls English Touchscreen Controls How the Touchscreen Works Your Chromebook's touchscreen interface is a touch sensitive surface that covers the entire display screen. The screen detects your contact when you touch it. You can use any of several fingertip motions, or 'gestures', to operate your Chromebook, instead of using the touchpad or an external pointing device such as a mouse. Touch Gestures You can enter commands and control things on the screen by touching it with one or more fingertips.

While the following examples show using your index finger, you can use any finger to execute gestures. Action . Touch Touch the screen where you want to click. Use this to select items or issue commands. Gesture Double Touch Quickly touch the same spot on the screen twice.

Double touch will select a block of text.



[You're reading an excerpt. Click here to read official ACER CHROMEBOOK C720P-29552G03AII user guide](http://yourpdfguides.com/dref/5513265)
<http://yourpdfguides.com/dref/5513265>

Long Press Touch and hold your fingertip on the screen for a moment. This displays a context menu, if available, for what you touch. For text or images, you'll then also be able to select cut, copy, and paste, as well as drag and drop selected items. 13 Action Swipe or Drag Briefly slide a fingertip on the screen to swipe. For more precise control, keep your finger on the screen to drag. Swipe up or down on a web page to scroll. Swipe left or right to navigate forward or backward in the browser history. Touch something you want to move and slide your fingertip to drag it to another location. Gesture English Swipe up from lower bezel Slide a fingertip upward from the bottom edge of the screen.

This toggles the autohide feature for the app shelf on and off. Pinch Open/Close Slide any two fingertips toward each other to zoom out, or apart to zoom in. This feature is available on supported web pages, for example, Google Maps. Cleaning the screen When you use the touchscreen, after a while to other devices, such as your smartphone or tablet. Files saved to the Downloads folder are saved to your local drive and are only accessible to your Chromebook. Note: You must be connected to the Internet to do the following Google Drive operations. Sync files from Downloads to Google Drive 19 1. In the apps list, click on the Files icon. English 2. If this your first time accessing your Google Drive, click on the Google Drive icon to enable access.

3. Once your Google Drive is enabled, select the files or folders you want to upload. 3. Click on Get themes. 4. You'll be taken to the Chrome Web Store, where you can find extra resources for the Chrome browser.

5. Once you find a theme that you'd like to try out, click Choose theme. 24 Settings English Setting up a printer You can use the Google Cloud Print service to send print requests to your printer. Not all printers are supported. To learn more about Google Cloud Print and how to set up your printer, connect to the Internet to access the more extensive online help from "Online and offline help" on page 25 and then search for Google Cloud Print.

Updating Chrome OS Automatic update Each time you turn on your Chromebook, it automatically checks for updates. When an update is available, this update icon (the status area. To apply the update:) will appear in 1. Click the status area in the lower-right corner, where your account picture appears. 2. Click Restart to update. 3. Your Chromebook will shutdown and automatically restart, with the update applied. Manual update To manually check for an update or check what version of Chrome OS you are using: 1. Click the status area in the lower-right corner, where your account picture appears.

2. Click on Settings. 3. In the new tab that opens, click on Help in the left column. 4. If any updates are available, they will be displayed on the page. Warning! Do not modify your Chromebook's hardware yourself. Doing so will cause the update function to no longer work. Please get in touch with your dealer or an authorized service center. Visit www.

acer.com to find an authorized service site. 25 Help Online and offline help Additional help is available both online and offline. Help covers basic troubleshooting as well as more detailed information about Chrome OS and using your Chromebook. English To access the help pages: 1.

Click the status area in the lower-right corner where your account picture appears. 2. Click on the question mark <?>. Note: If you are connected to the Internet, the more extensive online help will automatically open. Otherwise, the offline help will open.

26 Information for your safety and comfort Information for your safety and comfort Safety instructions Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product. English Turning the product off before cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. CAUTION for plug as disconnecting device

Observe the following guidelines when connecting and disconnecting power to the power supply unit: Install the power supply unit before connecting the power cord to the AC power outlet. Unplug the power cord before removing the power supply unit from the computer. If the system has multiple sources of power, disconnect power from the system by unplugging all power cords from the power supplies. CAUTION for Accessibility Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible.

When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet. CAUTION for bundled dummy cards (only for certain models) Your computer shipped with plastic dummies installed in the card slots. @@@@Do not place this product on an unstable cart, stand or table. If the 27 product falls, it could be seriously damaged. @@These openings must not be blocked or covered. @@@@Never spill liquid of any kind onto or into the product. @@@@3) Use the computer on a flat, hard surface, such as a desk. @@Keep them out of the reach of children.

@@@@Do not allow anything to rest on the power cord. @@@@@@@@@@@@@@@@@@The plug only fits in a grounded power outlet.

@@@@Do not insert the plug into a non-grounded power outlet. Contact your electrician for details. Warning! The grounding pin is a safety feature.

@@@@@@@@Refer all servicing to qualified service personnel. @@The product was exposed to rain or water.

The product has been dropped or the case has been damaged. @@@@Do not use it in a humid, wet or corrosive environment. @@@@Do not pierce, open or disassemble the battery. @@For safety reasons, and to prolong the lifetime of the battery, charging will not occur at temperatures below 0° C (32° F) or above 40° C (104° F). The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the operation time becomes noticeably shorter than normal, buy a new battery. Use only the approved batteries, and recharge your battery only with the approved chargers designated for this device. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental shortcircuiting can occur when a metallic object such as a coin, clip or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Shortcircuiting the terminals may damage the battery or the connecting object.

The capacity and lifetime of the battery will be reduced if the battery is left in hot or cold places, such as in a closed car in summer or winter. Always 30 Information for your safety and comfort try to keep the battery between 15° C and 25° C (59° F and 77° F).



[You're reading an excerpt. Click here to read official ACER CHROMEBOOK C720P-29552G03AI user guide](http://yourpdfguides.com/dref/5513265)
<http://yourpdfguides.com/dref/5513265>

A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is especially limited in temperatures well below freezing. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste. Wireless devices may be susceptible to interference from the battery, which could affect performance.

English Replacing the battery pack The notebook uses lithium batteries. Replace the battery with the same type as that which came bundled with your product. Use of another battery may present a risk of fire or explosion. Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire.

Keep them away from children. Follow local regulations when disposing of used batteries. Radio frequency interference Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your laptop under the following conditions. These devices may include, but are not limited to: wireless LAN (WLAN), Bluetooth and/or 3G. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger.

Use the device only in its normal operating positions. This device meets RF (Radio Frequency) exposure guidelines when used normally. It should not contain metal and you should position the device the above-stated distance from your body. To successfully transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. @@Parts of the device are magnetic. @@@@Pacemakers. @@@@Some digital wireless devices may interfere with some hearing aids.

@@For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added. Only qualified personnel should service the device, or install the device in a vehicle.

Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or 32 Information for your safety and comfort portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result. Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal. English Potentially explosive environments Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions.

Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders. Do not switch the notebook on when wireless phone use is prohibited or when it may cause interference or danger. Emergency calls Warning: You cannot make emergency calls through this device. To make an emergency call you shall dial out through your mobile phone or other telephone call system. Disposal instructions Do not throw this electronic device into the trash when discarding.

To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit www.acer-group.com/public/Sustainability/sustainability01.htm. 33 ENERGY STAR Acer's ENERGY STAR qualified products save your money by reducing energy cost and protecting the environment without sacrificing features or performance. Acer is proud to offer our customers products with the ENERGY STAR mark. What is ENERGY STAR? Products that are ENERGY STAR qualified use less energy and prevent greenhouse gas emissions by meeting strict energy efficiency guidelines set by the U.S. Environmental Protection Agency.

Acer is committed to offering products and services worldwide that help customers save money, conserve energy and improve the quality of our environment. The more energy we can save through higher energy efficiency, the more we reduce greenhouse gases and the risks of climate change. More information refers to www.energystar.gov or www.energystar.gov/powermanagement. Acer ENERGY STAR qualified products: (only for certain models) •••• Produce less heat and reduce cooling loads, and warmer climates. Automatically go into "display sleep" and "computer sleep" mode after 10 and 30 minutes of inactivity respectively. Wake the computer from sleep mode by pushing keyboard or moving mouse.

Computers will save more than 80% energy at "sleep" mode. English ENERGY STAR is only available for certain models and have the ENERGY STAR certification mark on the palm rest. ENERGY STAR and the ENERGY STAR mark are registered U.S. marks Tips and information for comfortable use Computer users may complain of eyestrain and headaches after prolonged use.

Users are also at risk of physical injury after long hours of working in front of a computer. Long work periods, bad posture, poor work habits, stress, inadequate working conditions, personal health and other factors greatly increase the risk of physical injury. Incorrect computer usage may lead to carpal tunnel syndrome, tendonitis, tenosynovitis or other musculoskeletal disorders. The following symptoms may appear in the hands, wrists, arms, shoulders, neck or back: ••Numbness, or a burning or tingling sensation. Aching, soreness or tenderness.

34 •••Pain, swelling or throbbing. Stiffness or tightness. Coldness or weakness. Information for your safety and comfort English If you have these symptoms, or any other recurring or persistent discomfort and/or pain related to computer use, consult a physician immediately and inform your company's health and safety department.



[You're reading an excerpt. Click here to read official ACER CHROMEBOOK C720P-29552G03AII user guide](http://yourpdfguides.com/dref/5513265)
<http://yourpdfguides.com/dref/5513265>

The following section provides tips for more comfortable computer use. Finding your comfort zone Find your comfort zone by adjusting the viewing angle of the monitor, using a footrest, or raising your sitting height to achieve maximum comfort. Observe the following tips: •••••Refrain from staying too long in one fixed posture. Avoid slouching forward and/or leaning backward. Stand up and walk around regularly to remove the strain on your leg muscles. Take short rests to relax your neck and shoulders.

Avoid tensing your muscles or shrugging your shoulders. Install the external display, keyboard and mouse properly and within comfortable reach. If you view your monitor more than your documents, place the display at the center of your desk to minimize neck strain. Taking care of your vision Long viewing hours, wearing incorrect glasses or contact lenses, glare, excessive room lighting, poorly focused screens, very small typefaces and low-contrast displays could stress your eyes. The following sections provide suggestions on how to reduce eyestrain. Eyes •••••Rest your eyes frequently. Give your eyes regular breaks by looking away from the monitor and focusing on a distant point. Blink frequently to keep your eyes from drying out. Keep your display clean. Keep your head at a higher level than the top edge of the display so your eyes point downward when looking at the middle of the display.

Display 35 •• Adjust the display brightness and/or contrast to a comfortable level for enhanced text readability and graphics clarity. Eliminate glare and reflections by: placing your display in such a way that the side faces the window or any light source •minimizing room light by using drapes, shades or blinds •using a task light •changing the display's viewing angle •using a glare-reduction filter •using a display visor, such as a piece of cardboard extended from the display's top front edge Avoid adjusting your display to an awkward viewing angle. Avoid looking at bright light sources for extended periods of time. •English ••Developing good work habits The following work habits make computer use more relaxing and productive: •••••Take short breaks regularly and often. Perform some stretching exercises.

Breathe fresh air as often as possible. Exercise regularly and maintain a healthy body. Warning! We do not recommend using the computer on a couch or bed. If this is unavoidable, work for only short periods, take breaks regularly, and do some stretching exercises. 36 Regulations and safety notices Regulations and safety notices FCC notice This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. @@@@• Increase the separation between the device and receiver. @@@@Operation with non-certified peripherals is likely to result in interference to radio and TV reception. Caution Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer. 37 Operation conditions This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. English Notice: Canadian users This Class B digital apparatus complies with Canadian ICES-003. Remarque à l'intention des utilisateurs canadiens Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Declaration of Conformity for EU countries Hereby, Acer, declares that this notebook PC series is in compliance with the essential requirements and other relevant provisions of Directive 1999/ 5/EC.

Compliant with Russian regulatory certification LCD pixel statement The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction. Radio device regulatory notice Note: Below regulatory information is for models with wireless LAN and / or Bluetooth only. 38 Regulations and safety notices English General To prevent radio interference to the licensed service, this device is intended to be operated indoors. @@@@This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use. Please see ec.europa.eu/enterprise/rte/implem.htm for the latest country list. 39 The FCC RF safety requirement The radiated output power of the wireless LAN Mini PCI Card and Bluetooth card is far below the FCC radio frequency exposure limits. Nevertheless, the notebook PC series shall be used in such a manner that the potential for human contact during normal operation is minimized as follows: 1. This device is restricted to indoor use due to its operation in the 5.15 to 5.25 GHz frequency range. FCC requires this product to be used indoors for the frequency range 5.15 to 5.25 GHz to reduce the potential for harmful interference to co-channel Mobile Satellite systems. 2.

High power radar is allocated as the primary user of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device. 3. An improper installation or unauthorized use may cause harmful interference to radio communications. Also any tampering of the internal antenna will void the FCC certification and your warranty. English Canada — Low-power license-exempt radio communication devices (RSS-210) Exposure of humans to RF fields (RSS-102) The computer employs low gain integral antennas that do not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website at www.hc-sc.gc.ca/rpb. This device complies with RSS210 of Industry Canada. This Class B digital apparatus complies with Canadian ICES-003, Issue 4, and RSS-210, No 4 (Dec 2000) and No 5 (Nov 2001). "To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing." Cet appareil numérique de la classe B est conforme à la norme NMB-003, No. 4, et CNR-210, No 4 (Dec 2000) et No 5 (Nov 2001).



[You're reading an excerpt. Click here to read official ACER](http://yourpdfguides.com/dref/5513265)

[CHROMEBOOK C720P-29552G03AII user guide](http://yourpdfguides.com/dref/5513265)

<http://yourpdfguides.com/dref/5513265>

« Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit être utilisé à l'intérieur et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal.

Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence. Caution: When using IEEE 802.11a wireless LAN, this product is restricted to indoor use due to its operation in the 5.15- to 5.25-GHz frequency range.

Industry Canada requires this product to be used indoors for the frequency range of 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference to co-channel mobile satellite systems. High power radar is allocated as the primary user of the 5.25 to 5.

35 GHz and 5.65 to 5.85-GHz bands. These radar stations can cause interference with and/or damage to this device. The maximum allowed antenna gain for use with this device is 6 dBi in order to comply with the E.I.R.P limit for the 5.25 to 5.35 and 5.

725 to 5.85 GHz frequency range in point-to-point operation. .



[You're reading an excerpt. Click here to read official ACER CHROMEBOOK C720P-29552G03AII user guide](http://yourpdfguides.com/dref/5513265)
<http://yourpdfguides.com/dref/5513265>