



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER LIQUID Z4. You'll find the answers to all your questions on the ACER LIQUID Z4 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER LIQUID Z4
User guide ACER LIQUID Z4
Operating instructions ACER LIQUID Z4
Instructions for use ACER LIQUID Z4
Instruction manual ACER LIQUID Z4

acer
explore beyond limits™

Liquid | Z4



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)
<http://yourpdfguides.com/dref/5586305>

Manual abstract:

.....
.....
.....
.....

..... 5 Getting to know your smartphone ..

.....
.....
.....

.....
.... 5 Inserting the SIM card and microSD card .

.....
.....

.....
.... 6 Installing or removing the battery .

.....
.....

.....
.....
.....

@ @

.....
.....
.....
.....

8 Locking your smartphone

.....
.....
.....

.....
.. 8 Navigating through menus and options ...

.....
.....

.....
.... 9 Using the touchscreen.

.....
.....

.....
.....
.....

..... 9 The Home screen .

.....
.....
.....
.....

.....
.....

. 11 Multitasking

.....
.....
.....
.....

..... 16 Acer Float ..

.....
.....
.....

.....
.....
.....
.....

. 16 AcerRAPID

.....
.....
.....

.....
.....
.....

... @@

.....
.....
.....

... @@

.....
.....
.....

... 19 Making a call ..

.....
.....
.....
.....

..... 19 The voice call screen .

.....
.....
.....

.....
.....
.....

... 21 Answering or declining a call

.....
.....
.....

.. 21 Ending a call

.....
.....
.....

.....
.....
.....

... 21 Messaging ----- 23 Creating a new message.

.....
.....

.....
.....
..... 23 *Replying to a message*

.....
.....
.....
.....
.....
.....
..... 23 *MMS messages* ..

.....
.....
.....
.....
.....
.....
..... 24 *Going online*-----26 *Browsing the internet* ...

.....
.....
.....
.....
.....
.....
..... 26 *Setting up your Google email*

.....
.....
.....
.....
.....
.....
..... 27 *Composing an email*

.....
.....
.....
.....
.....
.....
..... 27 *Setting up Email*

.....
.....
.....
.....
.....
.....
..... 27 *Maps, Navigation, Places and Latitude*

..... 29 *Using the Camera*-----30 *Camera icons and indicators*

.....
.....
.....
.....
.....
.....
..... 30 *Taking a photo.* ..

.....
.....
.....
.....
.....
.....
.....

... 32 Shooting a video	
.....	
.....	
.....	
.....	
.....	
.....	
. 33 Viewing photos and videos	
.....	
.....	
.....	
.....	
.....	
. 33 Geotagging	
.....	
.....	
.....	
.....	
.....	
.....	
... 33 Advanced settings ----- 34 Changing modes with Quick Mode	
.....	
.....	
.....	
..... 34 Putting your smartphone in Airplane mode ...	
.....	
.....	
.....	
..... 35 Restarting your phone	
.....	
.....	
.....	
.....	
..... 35 Adjusting settings .	
.....	
.....	
.....	
.....	
.....	
..... 35 Connecting to a PC	
.....	
.....	
.....	
.....	
. 39 Data usage wizard. ...	
.....	
.....	
.....	
.....	
..... 40 FM radio ...	
.....	

.....
.....
.....
.....
.....
.....
. . 41 Multimedia playback
.....
.....
.....
.....
..... 41 Restoring to factory settings
.....
.....
.....
.....
.....
.....
. @ @
.....
.....
.....
.....
. . 43 Using a Bluetooth headset
.....
.....
.....
.....
. . 43 Creating a new access point
.....
.....
.....
.....
. 43 Inserting a microSD card
.....
.....
.....
.....
. . . @ @
.....
.....
.....
.....
..... 44 Other sources of help
.....
.....
.....
.....
..... 45 Warnings and precautions
.....
.....
.....

.....
..... 45 Emergency calls .

.....
.....
.....

..... 47 Taking care of your smartphone ...

.....
.....
.....

... 48 Specifications

.....
.....
.....

... 49 Safety

.....
.....
.....

.... 51 Regulatory information .

.....
.....
.....
.....

.. @@Carefully unpack the box and remove the contents. @@1 Item Power button Description Press to turn the screen on/off or enter sleep mode; press and hold to turn the smartphone on or off. Connects to stereo headphones. 2 3.5 mm headphone jack 5 No. 3 4 Item LED indicator Touchscreen Description Indicates when the phone is connected as a media device. 4-inch, 800 x 480 pixel capacitive touchscreen to display data, phone content and enter information. Emits audio from your smartphone; suitable for holding to your ear.

Connects to a USB cable/charger. Increases or decreases the phone volume. Internal microphone. LED flash for camera. Auto-focus 5 MP camera for taking highresolution images.

Shortcut button to answer incoming calls. Long press to launch the camera app; short press to launch a designated app (default app is Google Play Music). 5 6 7 8 9 10 11 Phone speaker Micro USB connector Volume up/down buttons Microphone Flash Camera AcerRAPID button Inserting the SIM card and microSD card To take full advantage of your smartphone's telephony capabilities, you must install a SIM card. The SIM card holder is located at the top of the battery bay. Additionally, you may wish to increase your smartphone's storage by inserting a microSD card into the slot provided.

1. Insert your fingernail into the micro USB port between the battery cover and the phone. Unclip the cover with your fingernail and lift it off the phone. Insert the micro SIMs and the microSD card as illustrated. 2. Ensure that the micro SIMs and the microSD card are inserted all the way into their slots. MicroSD card SIM card 1 SIM card lock Your smartphone may come with a SIM card lock, i.e., you will only be able to use the SIM card provided by your network operator. To cancel the SIM lock, contact your network provider.

6 Installing or removing the battery Your smartphone uses a replaceable battery to provide power. It is packed separately from your smartphone and needs to be inserted and charged before you can use the smartphone. Installing the battery Insert your fingernail into the micro USB port between the battery cover and the phone. Unclip the cover with your fingernail and lift it off the phone. 1. Align the gold-colored connectors on the battery with the connectors at the top of the battery compartment. Replace the battery. 2. Replace the cover and push down until it clicks in place. Charging the battery For initial use, you need to charge your smartphone for eight hours.

After that, you can recharge the battery as needed. Connect the AC adapter cord to the micro USB connector on your smartphone. 7 Using your smartphone Turning on for the first time To turn on your smartphone for the first time, press and hold the Power button until the screen turns on. You will then be asked to configure some settings before you can use your smartphone. Follow the onscreen instructions to complete setup.

Sign in to or create a Google account If you have internet access, your smartphone allows you to synchronize information with a Google account. During the start-up process, you may create or sign in to your account, which will be used to synchronize your contact list, email, calendar and other information.



[You're reading an excerpt. Click here to read official ACER LIQUID
Z4 user guide](http://yourpdfguides.com/dref/5586305)
<http://yourpdfguides.com/dref/5586305>

If you do not yet have internet access, or do not want to use this feature, then tap Skip. Creating multiple Google accounts You can create and easily access multiple Google accounts. Open the Application menu and then tap Settings > Add account.

Entering your PIN When you install a SIM card for the first time, you may need to enter a PIN using the onscreen number pad. Important: Depending on your settings, you may be required to enter your PIN each time you switch on the phone function. Activating a new SIM card If you are using your SIM card for the first time, it may require activation. Contact your network operator for details on how to do this. Locking your smartphone If you will not use your smartphone for a while, press the Power button to lock access. This saves power and ensures your smartphone does not unintentionally use any services. Your smartphone will lock automatically if it is not used for one minute. 8 Waking your smartphone If the screen is off and the smartphone does not react to any taps on the screen or front panel buttons, then it has been locked and is in sleep mode. Press the Power button to wake your smartphone. Unlock your smartphone by sliding your finger horizontally across the screen (it works both ways).

The lock screen extends to either side of the screen, giving you room to add widgets for quick access. To view the extended lock screen, swipe in from the edge of the display. For additional security, you may set an unlock pattern or choose from several screen locks to access the phone. Open the Application menu and then tap Settings > Security > Screen lock. In Choose screen lock, options include: None, Slide, Face Unlock, Voice Unlock, Pattern, PIN and Password.

Note: If you forget your unlock pattern, please refer to "Unlock pattern" on page 45. Navigating through menus and options To navigate through menus and options, there are three buttons beneath this you want Search to search. > Settings Note: In order to search or browse the internet, you must be connected to a cellular data (if available) or wireless network. See "Going online" on page 26. Voice search If voice search is available, tap the microphone See "Voice search" on page 26.

and speak your search request. 11 The extended Home screen The Home screen extends to either side of the screen, giving you more room to add icons, widgets or features. To view the extended screen, slide your finger to the left or right. Personalizing the Home screen You may personalize your Home screen by adding or removing application shortcuts or widgets, and by changing the wallpaper. Tap and hold any open area on the Home screen.

From here, you can customize the extended Home screen. Click to add an extra panel to the extended Home screen or remove a panel by tapping, holding and dragging the selected panel to Remove. Adding and removing shortcuts and widgete signal strength, connection, battery status and the time. Icon Description Connected to GPRS mobile network Connected to EDGE mobile network Connected to 3G mobile network Connected to HSDPA network Bluetooth is connected Bluetooth is disconnected Icon Description Roaming Cellular signal strength Mobile data transferring Connected to a wireless network No wireless signal Airplane mode (Wireless connectivity disconnected. Please disable airplane mode before trying to make a call.

) USB tethering is activated Battery icons Icon Description Battery is very low Battery is low Battery is charging Icon Description Battery is partially drained Battery is full 15 Multitasking You can have multiple apps open at the same time. Tap the Recent button to see recently opened apps. To open a new app, tap the Home button to return to the Home screen, then start the new app. To prolong battery life, it is better to close an app when you've finished using it. You can do this three ways: 1. Press the Back key until the app is closed 2. Tap the Menu icon and select Exit (if available) 3. Press the Recent button and swipe the icon off the screen. Acer Float Tap the Recent button for the Float menu at the bottom. Acer Float allows you to open an app as a "floating" window, which can be moved around within the display.

You may add up to four Float apps to the Float menu. You can also edit your Float menu by tapping on the settings icon and adding/removing Float apps. Float apps include: Float Browser, Float Buttons, Float Calculator, Float Camera, Float Dialer, Float Maps, Float Notes, Float Stopwatch and Float Text. Widgets can also be added to the Float menu by tapping on the Widgets tab. AcerRAPID The AcerRAPID button is located directly below the camera. Long press the AcerRAPID button to launch the camera app. While the camera app is open, push the AcerRAPID button to take a picture. Long press to take four continuous pictures. 16 Short press the AcerRAPID button to launch the Google Play Music app. To change the app for the short press function, open the Application menu and tap Settings > AcerRAPID > Short press and choose an app.

Tap the ON/OFF switch to enable or disable AcerRAPID. The AcerRAPID button also allows you to answer incoming calls quickly without needing to touch the screen. To accept an incoming call, press the AcerRAPID button. Note: Only Short press function can be changed. Long press for Camera can be disabled, but can't be changed.

17 Managing contacts Managing your contacts Your smartphone features an address book that allows you to save contacts to your phone's internal memory, your SIM card, or your Google account. From the Home screen tap Phone and tap to view your contacts. If you don't have any contacts stored on your phone, you can import contacts from your Google account, SIM, or SD card. You can also add a new contact by tapping to add a contact, to search for a contact, or tap the Menu icon to open the menu. Adding a contact Tap to add a new contact.

If you have a barcode scanner app, you may also scan a person's profile barcode to add the person to your contact list or group. To create a contact, first choose where you want to store the contact's information. You will then be asked to enter the contact's information, such as name, address, and phone number. You may scroll down the page and tap Add another field to add things such as: ••••IM addresses Add any personal notes about the contact Phonetic name Link a website To assign an image to your contact, tap the silhouette and select whether to take a photo or select an image from your smartphone's picture gallery. When done, click Done at the top of the screen. Tapping on the contacts name will bring up their profile. Tap while viewing a contact's profile for a variety of options related to that contact. Tip: You may also create a contact from an already dialed or received number, see "Saving a dialed number to contacts" on page 22. 18 Making calls This chapter shows you how to make phone calls, and the various options available to you during your call.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

Before making a call Check that the phone function is on before you make a call.

You can confirm the phone status from the Notification area. Note: Status and notification icon colors may vary. Icon Description Not connected to the network: You are unable to make a call. Connected to the network: You may make a call. Airplane mode: Wireless connectivity disconnected (Wi-Fi, Bluetooth, 2G and 3G). Please disable airplane mode before trying to make a call. Making a call Note: The phone function needs to be enabled before the call can be connected (see "Before making a call" on page 19). 1. From the Home screen tap Phone . If it's not already visible, search for the phone app in the Application menu.

2. Enter the number you wish to dial. If the contact you need is displayed, simply tap the contact name to make a call. 3. Tap call at the bottom of the screen to make the . 4. To end the call, tap Dialing a number from Call log Your call history can be viewed by tapping the Call log tab at the top of the screen. It displays recent received, dialed, and missed calls. Tap the phone icon next to a contact to redial.

To view details of the call, tap the number or contact's name. While viewing the details of a call, tap the trash icon to remove that call from the call log or tap the Menu icon for other options to edit number before making a call. Viewing missed calls Missed call notifications are displayed in the following three areas: 1. The Notification area with the missed call icon . Open the Notification area and tap the missed call notification to display the missed call details. (the number in the box is the number of missed calls). Tap 2. By the Phone icon Phone from either the Home screen or the Application menu to directly display the missed call details. 3. In the Call log, tap the missed calls tab to display the missed call details.

Making a call to one of your contacts Calling a contact from the People tab 1. Tap the People tab at the top of the screen to view your contacts. 2. Tap on a contact to call them. Dialing an international number When dialing international numbers, there is no need to enter the international direct dialing prefix ('00' etc.) before the country code. Simply tap and hold 0+ on the onscreen number pad until + appears onscreen. Warning: International call rates can vary greatly depending on the country you are calling and your network provider. We suggest you check all call rates with your network provider, to avoid excessive phone bills. If you are using your smartphone abroad, roaming charges will apply.

Consult your network provider for roaming rates specific to the country you are visiting before you leave. 20 The voice call screen The voice call screen displays after you have dialed a phone number and after you have accepted a phone call. The screen displays the number/contact you are talking to, the call duration and voice call options. You can minimize the call window to appear as a small movable icon. box instead of a whole screen by tapping the You can set this "floating" dialog box as the default voice call screen.

To do so, tap Float Caller . , tap Settings and enable Answering or declining a call When you have an incoming call, the number will be shown on the screen. Tap the phone icon and slide your finger across the screen to answer or reject the call. To reject the call with a text message, slide your finger up to the icon and select a message. If the Float Caller option is enabled, the number will be shown as a "floating window".

To answer or reject a call with Float Caller, tap the appropriate icon. Ending a call To end a call, tap from the voice call screen. 21 Voice call options Icon Description Access the keypad while a call is in progress. Speakerphone. Mute a call. Place the call on hold. Add another call. Saving a dialed number to contacts You can save a number you have dialed to your contacts for future use. .You will then 1.

Select the number from the Call log tab, and tap on the contact be asked if you want to add the number to your contacts. 2. Tap OK. 3. Tap Create new contact and select how to complete the action. See "Adding a contact" on page 18. Conference calls If you have one call on hold and another on line, you can combine both calls to create a conference call. After the first call is established, tap to start the conference call. and tap Add call 22 Messaging This chapter shows you how to set up and use the Phone messages, Social messages and Social events functions of your smartphone. All SMS and MMS messages are accessed via Messaging.

Messaging automatically arranges received and sent messages into threads. To access Messaging tap on the Home screen. Creating a new message You can use your phone to compose Phone (SMS and MMS) messages. Tap to compose a new message. Tap the Type name or number field and enter the recipient's phone number or name.

Suggested contacts will be displayed in a drop-down list below the text field. To select a suggested contact, tap the contact's name. To add several contacts, tap to display your People list. Once you've selected the desired contacts, tap OK. Enter your message in Type text message field.

When finished, tap to send. Note: SMS messages may be up to 160 characters long. If your message is longer than 160 characters, it will be sent as multiple linked messages. Most phones will automatically join the linked messages to present the recipient with a single long message, however, some older phones do not have this ability. Tap the Menu icon to see what options are available when creating a new message. The options change depending on the status of the message. Option Insert contact Add subject Discard Description Add a contact to the recipients list. Add a subject to the message. Discard the message. Insert quick text Insert pre-defined text content.

Replying to a message When a new text message arrives, a message screen displays showing you the message and enabling you to quickly reply. To reply later, tap Close. To view the message and all previous messages from the sender, tap View. 23 Message notifications appear in two places: the Notification area and the message icon at the bottom of the phone displays the number of unread text messages. Tap Messaging on the Home screen to view the message list or open the Notification area to see a summary of the message. Tap the summary to open the message list. To reply to an SMS or MMS message, open the message from the message list. Enter your text in the text box labeled Type text message. Tap the Menu icon to see available options. Option Select message Add shortcut Insert quick text Insert contact Add subject Add to contacts Chat settings Description Perform various actions to multiple messages from this contact.

Puts a link on the Home screen to that contact's messages. Insert pre-defined text content. Add a contact to the recipients list. Add a subject to the message. Add the other contact to your contacts list.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)
<http://yourpdfguides.com/dref/5586305>

Modify various messaging settings. MMS messages MMS messages are similar to text messages but also allow you to attach multimedia files such as pictures, audio or video clips. Each MMS message can be up to 300 KB in size. Note: You need to set up an MMS profile before you can send MMS messages.

Normally, your smartphone will set up the profile for you based on information retrieved from your provider.

Tip: Ask your network provider for the necessary information if you need to manually set up the MMS profile. 24 Receiving MMS messages When a new MMS message arrives, a message icon appears at the top of the screen and a notification message is displayed. Note: Downloads can take a long time, depending on your connection quality. If you reply or open another application, the download will be stopped. Important: You may be charged to download message content, especially if you are roaming. Please contact your provider if you have any questions. 1. Open Messaging to view a summary of the message. 2. Tap the message to view the content.

3. Tap Download to download the message content. 4. To reply to the message, enter your text in the text box labeled Type text message and tap the Send icon. Simple text replies will be sent as SMS messages. If you wish to attach multimedia and/or other content, tap . You will be presented with a menu of options. 5. When you have finished composing the message, tap the Send icon. 25 Going online Browsing the internet In order to browse the internet with your smartphone, you must be connected to a data or wireless network.

Using the browser To start browsing, open the Application menu and tap Chrome. To open a new website, tap the address box at the top of the page. Enter the address using the keyboard and tap Go. You can zoom in or out of pages by pinching or reverse pinching. To navigate forward and backward in your browser's history, view your bookmarks, adjust browser settings, and perform other tasks, tap the Menu icon.

Chrome enables you to open multiple at the top of any webpage pages. Tap to display all of your open tabs (tap again to close). Tap a tab from the list to open it. To open a new tab, tap New tab. The number in the icon represents the number of open tabs.

Voice search Note: Voice search is available only in some regions. With voice actions, you can send text messages, place calls, send emails, find directions to establishments, automatically call establishments, search the internet and even send a note to yourself using your voice. Open Voice Search from the Application menu, or tap the Home screen. from 26 Setting up your Google email 1. Make sure your smartphone is connected to a data or Wi-Fi connection.

2. From the Application menu tap Gmail. If you did not enter your Gmail account address and password when you first started your phone, follow the onscreen instructions. Composing an email 1. Make sure your smartphone is connected to a data or Wi-Fi connection.

2. From the Application menu tap Gmail. 3. Tap the Compose icon . 4. Enter the recipient's email address, the subject and message. 5. When you are finished composing your message, tap . Setting up Email Your smartphone enables you to access your email. Most popular ISPs can be set up in two steps.

In the Application menu, tap Email to start setting up your email account. If necessary, enter your email address and tap Manual setup to enter the parameters manually. Tap Next to finish the setup process. Google Play Note: Google Play may not be available in all countries and regions. Note: You must activate a Google account before using Google Play.

The first time you access Google Play, you will need to read and accept the Terms of Service. Tap Play Store from the Application menu to open Google Play. Here you can obtain a variety of add-on programs and apps to enhance the functionality of your smartphone. Note: The contents and design of Google Play varies by region. For example, in some regions, you can also browse for and purchase movies, books, magazines, or music.

Updates may add new categories or change how to navigate Google Play at any time. 27 You can browse the store by category or tap the search icon to search for a specific app. Once you have selected an app, tap the Install button to download and install the app. You will be told which services (contact information, wireless access, GPS, etc.) the app requires access in order to function correctly. If none of these services seem unusual, tap Accept & download to proceed with the installation. You may keep track of the download progress from both the app's page and the smartphone's Notification area. Important: Some apps may require payment before you can download them. You will need to have a Google Checkout account in order to pay for these apps, or a credit card number associated with your Google account. Using downloaded apps Once you've downloaded and installed an app, you may find it in the APPS or WIDGETS sections of the Application menu.

28 Certain apps provide both an application icon and widget, or only provide a widget (with no application icon). See "Personalizing the Home screen" on page 12. Uninstalling downloaded apps To uninstall an app, go to Settings from the Application menu and select Apps. Tap the app you wish to uninstall, tap Uninstall and confirm. Maps, Navigation, Places and Latitude Get easy-to-follow directions using Google Maps, view real-time traffic condition and navigate by using spoken, turn-by-turn driving instructions with Navigation, view where your friends are and places of interest and local businesses on Google Maps using Places and Latitude. Important: Google Maps does not have information about every location. Using the map Tap Maps in the Applications menu. Drag the map with your finger to move the map around. To zoom in or out: 1. Double tap a location on the map to zoom in on the location, and tap once to zoom out, or 2.

Touch an area with two fingers at once and spread them apart to zoom in, and pinch them together to zoom out. Important: Not all zoom levels are available for all locations. 29 Using the Camera Your smartphone features a digital camera mounted on the rear. This section will take you through all the steps in taking photos and videos with your smartphone. To activate the camera, tap Camera on the Home screen, or open the Applications menu and tap Camera. Camera icons and indicators Camera quick mode Camera zoom Camcorder Settings Flash Shutter Previous picture/video Camera quick modes Located at the top of the screen is the camera quick mode menu where you can select a variety of different shooting modes. Swipe the camera quick mode menu to the left or right to navigate the selections. Icon Mode Smile shot mode HDR mode Normal mode Icon Mode Panorama mode Presentation mode 30 The camera window provides controls on either side of the image. Pinch the screen to zoom in and reverse pinch to zoom out. Tap to take a picture.

Tap the Previous picture/ to open video thumbnail to open the gallery.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

Tap the Settings menu. Settings menus General You may adjust the following: • Turn GPS info on or off: Stores GPS information in the image information. • Exposure: Over- or under-exposes the image. • Color effect: Applies a color effect to the image. ••• None Sepia Sepia Blue •• Mono Negative • Scene mode: Adjusts photo parameters for a particular environment. ••• Auto Portrait Sports •• Night Landscape • White balance: Compensates for different lighting environments. ••• Auto Daylight Cloudy ••• Incandescent Fluorescent Tungsten • Image properties: Adjusts the Saturation, Brightness and Contrast. • Anti-flicker: Set the anti-flicker to Auto, Off, 50 Hz or 60 Hz. • Storage: Set the storage to Internal storage or SD card.

Camera You may adjust the following: • Turn Zero shutter delay on or off: Takes the photo immediately when you tap the shutter icon. • Turn Face detection on or off: The camera automatically detects faces and focuses on them. • Set the Self timer: Options are Off, 2 seconds or 10 seconds. 31 • Continuous shot: Set the maximum number of photos taken in a single burst. • Picture size: Set the picture resolution. • Preview size: Set the picture preview to Full screen or Standard (4:3). Camcorder You may adjust the following: •••• Turn the Microphone on or off. Set the Audio mode. Set the Time lapse interval. Set the Video quality.

Taking a photo 1. Ensure you have adjusted the settings described above. 2. Frame your subject and steady your smartphone. 3.

Zoom in or out as needed. 4. Tap to take a picture. Taking a panoramic photo Panoramic mode allows you to take a series of up to nine photos that the camera application will 'stitch' together to make a single extended image. 1.

To take a panoramic photo, slide the menu bar at the top and select panoramic capture mode . 2. Align the camera to take a photo of one end of the panoramic scene (the furthest left, right, top or bottom). 3. Tap the Shutter icon to take the first image; then smoothly turn the camera to the left or right to take the next image of the scene. • Keep the blue arrow aligned with the dotted arrow as you move the camera. Your smartphone will automatically capture an image along the length of your shot. Note: If your photo needs fewer than nine images, tap the tick icon to stop the selection process and process the captured images. The camera application will process the images and save a single extended image to your smartphone's gallery. Note: Panoramic images work best with static outdoor scenes.

Objects too close to the camera or with large straight edges may confuse the detection process. 32 Shooting a video 1. Frame your subject and steady your smartphone and zoom in or out as needed. 2. Tap to start taking a video. The icon will turn red to indicate that recording is in progress. Tap the icon again to stop recording. Supported formats Type Image Video Formats JPEG, GIF, PNG, BMP MPEG-4, H.263, H.264 Viewing photos and videos After you have taken your photo or video, it is automatically saved.

Once you have taken a photo or video, you can view it in Gallery by tapping the Previous picture/ video thumbnail. Alternatively, open the Applications menu and tap Gallery. From Gallery, you can share the file directly using various services. Note: Share options vary depending on the file type. You may also edit photos you have taken by tapping the menu icon in the upper right-hand corner, then tap Edit.

Geotagging Geotagging allows you to store the location where a photo or video was taken right in the photo or video itself. For the geotag to display, pictures must be taken with GPS location info turned on. 33 Advanced settings Changing modes with Quick Mode Your smartphone contains an app called Quick Mode that makes adjusting the user experience for different people very easy. From the Application menu, tap Quick Mode. The first time you enter Quick Mode, you'll need to enter a PIN.

Note: The default PIN is "1111". Several user mode options will display. Follow the onscreen instructions to display your new easy-to-use mode. To change modes or revert back to default mode, tap Settings (in some modes simply represented by the gear icon). Enter your PIN number. Navigate to and tap Mode Switcher. To revert back to the phone's default mode, tap Default Mode; otherwise, choose another mode to use. 34 Putting your smartphone in Airplane mode You can enter Airplane mode (also known as flight mode) to turn off telephone, wireless, and Bluetooth functions and use your smartphone as a handheld device during a flight. Check with your airline to make sure this is permitted onboard. Switch your smartphone off during takeoff and landing as it may interfere with aircraft electronic systems.

Turning Airplane mode on or off 1. Open the Notification area. 2. Tap -ORI. Press and hold the Power button until you get the phone options menu. 2. Tap Airplane mode to switch it ON or OFF. Note: When Airplane mode is active, the Notification area. @ @ 1. Press and hold the Power button until you get the phone options menu.

2. Tap Restart. @ @ Item Wi-Fi Bluetooth Description Turn the Wi-Fi function on or off. @ @ @ @ @ VPN: Set up and manage Virtual Private Networks. @ @ Mobile networks: Set your options for connecting to mobile networks.

@ @ @ @ @ @ @ @ @ @ To connect to a device, tap the device in the list of available devices. @ @ @ @ @ @ 1. @ @ 2. @ @ 3. Open the Application menu and then tap Settings > More.

. @ @ 1. Open the Application menu and then tap Settings > More... > Tethering & portable hotspot. Turn Wi-Fi hotspot ON. Tap Wi-Fi hotspot > Set up Wi-Fi hotspot. 2. @ @ Tap Save to finish.

@ @ > Mobile networks to adjust your network settings. @ @ However, you may prefer to manually select a network. This may be a good idea when roaming. @ @ @ @ @ @ @ @ @ @ Tap Phone from the Home screen. @ @ @ @ Adjust the Ringtone, Notifications, Alarm volumes. Sets the default voice calls ringtone for your SIM. Set your phone's default notification sound. Play tones when using dial pad. Play sounds when touching certain UI elements. Play sound when locking and unlocking the screen.

@ @ @ @ @ @ @ @ @ @ Enable rotation of the screen when device is tilted. Adjust screen brightness. Choose various screen saver visuals for when the phone is docked, charging, or both. Change the default font size for the UI. Adjust the delay before the screen automatically turns off.

Turn on to find nearby wireless displays. Connecting to a PC If you wish to transfer information between your phone and your computer, you can connect your phone to a PC using the supplied USB cable. @ @ @ @ Open the Notification area, and tap Connected as media device to configure the USB options. You will now be able to see your phone as a drive in your computer's file explorer. Note: After turning on USB storage, you will not be able to access the files in applications such as Gallery or Music.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

39 Synchronization You can sync your calendar, email and contacts on your phone and never worry about losing them again. Sync in real time or adjust it as you please. In the Application menu, tap Settings. Under ACCOUNTS, tap the appropriate account and again under ACCOUNTS tap that account's email address to access the synchronization settings. To add a new account, tap Add account. Select the type of account (Corporate, Email, Facebook, or Google) and then follow the onscreen instructions. Google Sync In Google, you can set synchronization for Browser, Calendar, Contacts, Gmail, and Google Photos. In your Google account's synchronization settings menu, tap the checkmark next to the item you would like to have auto-sync. Tap again to uncheck any for manual synchronization. To manually synchronize an item, make sure the item is checked, tap the Menu icon and then tap Sync now.

Note: You need a Google account to sync your calendar and appointments. Data usage wizard The Data usage wizard monitors and logs all of your data usage and data consumption. You can access the Data usage by tapping on the Data usage wizard from the Home screen. By checking the Data usage, you can determine which apps were used and how much data was used on any given day. **40 FM radio** The FM radio allows you to listen to your favorite stations while on the move. Headphones must be inserted to the 3.5 mm jack as it functions as an antenna. You can access the radio by tapping FM Radio from the Application menu. Tap the back icon to turn the radio off. **Multimedia playback** Your smartphone comes supplied with a variety of programs that you can use to enjoy multimedia content.

Adjusting the volume Adjust the volume of your phone using the Volume button on the side of the phone. Alternatively, you can set the Ringtone, Notifications, and Alarms volume by opening the Application menu and tapping Settings > Sound > Volumes. **Setting the date and time** To set the date and time, open the Application menu and tap Settings > Date & time. Tip: If you travel frequently or live in an area that uses daylight saving time, activate Automatic date & time from this menu. This will enable your smartphone to set the date and time based on information it receives from the network.

Setting alarms There are two predefined alarms on your phone by default. Tap Clock in the Application menu, and then tap the alarm icon in the bottom-left to edit alarm settings. You may: ••••• Turn the alarm on or off. Set the alarm time. Set which days to repeat the alarm.

Set a ringtone. Enable or disable vibrate. Give it a label. Changing language and text options Set your location and language input preferences by opening the Application menu and going to Settings > Language & input. **41 Closing an application** To close an active app, in the Application menu tap Settings > Apps. @@@@1. 2. 3. 4. In the Application menu tap Settings > Apps.

Swipe over to the Downloaded tab. Find the app in the list and tap on it. Tap the Uninstall button and then tap OK Warning!

@@@@@@@@@@@@@@@@@@@@@@• To answer an incoming call, press the button on the microphone. • Adjust the volume using the volume up/down button on the smartphone. • End the call by pressing the button again. Using a Bluetooth headset Your smartphone's Bluetooth functions make it fully compatible with all Bluetooth headsets. This allows you to use the unit handsfree when making calls, without the inconvenience of wires. **Creating a new access point** When you need to add another GPRS/3G/EDGE connection on your phone, obtain the access point name and settings (including username and password if required) from your wireless service provider. 1. Open the Application menu and tap Settings > More. .. > Mobile networks > Access Point Names, and select an operator. 2. Tap the Menu icon and then tap New APN. 3. Enter the APN settings. Tap an item to adjust it. 4. When you have finished, tap the Menu icon and then tap Save.

Important: Some providers and countries do not allow the use of a smartphone as a modem over HSDPA. Please check with your provider before attempting to do so. **Inserting a microSD card** Your smartphone features a memory expansion slot that accepts a microSD card to expand memory and storage capacity.

Please refer to "Charging the battery" on page 7 for instructions on installing a microSD card. **43 Appendix FAQ and troubleshooting** This section lists frequently asked questions that may arise during the use of your smartphone, and gives easy answers and solutions to these questions. **Aspect Audio Question** Why is there no sound coming from the device? Answer If the headset is plugged into the device, the speaker is automatically shut off. Disconnect the headset. Check that the device volume setting is not muted. Check that the volume control is not at its lowest setting. **Multimedia files** Why can't I view my video files? Why can't I play my music files? System information and performance Power How do I check the OS version of my device? I can't turn on the device.

You may be trying to view a video that is not supported. Refer to "Multimedia" on page 74. You may be trying to play a file that is not supported. Refer to "Multimedia" on page 74. Tap Settings > About phone to check the OS version (Build number) and other hardware and software information. The battery power may be depleted. Recharge the device. Refer to "Charging the battery" on page 7 for more information. To check the ROM status, tap Settings > Storage. To check RAM status, tap Settings > Apps > RUNNING.

RAM / ROM How do I check the RAM and ROM memory status? Internal storage My device's available Uninstall apps to increase available internal storage is full storage. See "Uninstalling an app" on or almost full. page 42. **44 Aspect Unlock pattern Question** I forgot my unlock pattern. Answer After a certain number of wrong entries, you will be presented with an option to reset your pattern.

Tap Forgot pattern? and enter your google account username and password. Note: You must have an active Google account on the smartphone. Alternatively, you restore your smartphone to factory settings. See "Restoring to factory settings" on page 42. **Heat** The phone heats up when charging or making long duration calls.

It is normal for the phone to heat up when charging. When charging is complete, it will return to its normal temperature. It is also normal for the phone to heat up during long periods of use, such as watching a video or a long phone conversation. Other sources of help For information on: Refer to: Up-to-date information regarding your www.acer.com smartphone mobile.acer.com Service enquiries www.acer.com/support Warnings and precautions ••• Do not use this product near water.

Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.



[You're reading an excerpt. Click here to read official ACER LIQUID](http://yourpdfguides.com/dref/5586305)

[Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product. To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface. Never use this product when engaging in sporting activities, exercising, or in any vibrating environment which may cause a short circuit or damage, and even a risk of explosion from the battery pack.

••• 45 CAUTION when listening to music To protect your hearing, follow these instructions. ••••• Increase the volume gradually until you can hear clearly and comfortably. Do not increase the volume level after your ears have adjusted. Do not listen to music at high volumes for extended periods. Do not increase the volume to block out noisy surroundings.

Decrease the volume if you can't hear people speaking near you. Additional safety information Your device and its enhancements may contain small parts. Keep them out of the reach of small children. Operating environment Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your smartphone device under the following conditions. These devices may include, but are not limited to: wireless LAN (WLAN), Bluetooth and/or 3G.

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. To successfully transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with hearing aids should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased. Medical devices Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF transmissions. Pacemakers. Pacemaker manufacturers recommend that a minimum separation of 15.3 cm (6") be maintained between wireless devices and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following: •• Always keep the device more than 15.3 cm (6") from the pacemaker. Not carry the device near your pacemaker when the device is switched on. If you suspect interference, switch off your device, and move it.

Hearing aids. Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider. 46 Vehicles RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force.

Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result. Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal. Potentially explosive environments Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress.

Areas with a potentially explosive atmospheres are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders. Follow any restrictions. Do not use the device where blasting is in progress. Emergency calls Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies. If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information. When making an emergency call, give all the necessary information as accurately as possible.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so. 47 Taking care of your smartphone 1. DO take care not to scratch the screen of your smartphone. Keep the screen clean.

When working with your smartphone, use your finger or fingernail. Never use an actual pen or pencil or other sharp object on the screen surface. 2. DO NOT expose your smartphone to rain or moisture. Do not let water enter the circuitry through the front panel buttons or expansion slots.

In general, treat your smartphone as you would a mobile phone or other small electronic device. 3. DO be careful not to drop your smartphone or subject it to any strong impact. Do not place your smartphone in your back pocket. 4. DO NOT expose your smartphone to extreme temperatures. For example, do not leave your smartphone on the dashboard of a car on a hot day or when temperatures are below freezing point. Also, keep it away from heaters and other sources of heat. 5. DO NOT use or store your smartphone in any location that is dusty, damp or wet.

6. DO use a soft, damp cloth to clean your smartphone. If the surface of the screen becomes soiled, clean it with a soft cloth moistened with diluted window-cleaning solution. 7. DO NOT press down on the screen with force, otherwise you may crack the screen. 48 Specifications Performance • MT6572 1.3 GHz dual-core processor • System memory: • 512 MB of RAM 4 GB of ROM • Android operating system Display • 4" TN TFT LCD, capacitive touchscreen • 800 x 480 WVGA resolution Multimedia Formats supported: Type Audio playback Ringtone Video recording Video playback Formats MP3, AMR, WMA MP3, MIDI, iMelody, WAVE, WMA 3GP, MPEG-4, H.263, H.264 3GP, MPEG-4, H.263, H.

264, WMV USB connector • Micro USB connector • USB client • DC power-in (5 V, 1 A) Connectivity • • • • • Bluetooth 4.0 with EDR IEEE Wi-Fi 802.11b/g/n GSM 850 / 900 / 1800 / 1900 MHz UMTS 900 / 2100 MHz HSUPA / HSDPA / GPRS / EDGE GPS aGPS Camera • Auto-focus 5 MP rear camera with LED flash Note: Specification varies depending on region and configuration. Expansion • microSD memory card slot (up to 32 GB) 49 Battery • Rechargeable / replaceable Li-polymer battery Note: Length of battery operation will depend on power consumption which is based on system resource use. For example, constantly using the backlight or using power-demanding applications will shorten battery life between charges.

Dimensions Height Width Thickness Weight 124 mm 64 mm 9.7 mm 122 g (with battery) 50 Safety Battery information Do not use this product in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 °C (140 °F). Failure to follow these guidelines may cause the battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery.

If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 °C/32 °F) or high (over 45 °C/ 113 °F) temperatures. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery. Use only manufacturer approved batteries, and recharge your battery only with manufacturer approved chargers designated for this device. Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to the AC charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. These look like metal strips on the battery. This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object. Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15 °C and 25 °C (59 °F and 77 °F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Battery performance is particularly limited in temperatures well below freezing. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible.

Do not dispose as household waste. Disposal and recycling information Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from 51 Electrical and Electronics Equipment (WEEE) regulations, visit www.acergroup.com/public/Sustainability

It is compliant with EEE regulations. Regulatory information RoHS compliance This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011, on the restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment and its amendments. Prevention of hearing loss A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur. Note: For France, mobile headphones or earphones for this device have been tested to comply with the Sound Pressure requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1. Caution: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time. 52 Wireless operation channels for different domains N. America Japan Europe ETSI 2.412-2.462 GHz 2.

412-2.484 GHz 2.412-2.472 GHz Ch01 through Ch11 Ch01 through Ch14 Ch01 through Ch13 List of National Codes This equipment may be operated in the following countries: Country Austria Belgium Cyprus Czech Republic Denmark Estonia Finland France Germany Greece Hungary Ireland Italy Latvia Lithuania Luxembourg ISO 3166 2 letter code AT BE CY CZ DK EE FI FR DE GR HU IE IT LV LT LU Malta Netherlands Poland Portugal Slovakia Slovenia Spain Sweden United Kingdom Iceland Liechtenstein Norway Switzerland Bulgaria Romania Turkey Country ISO 3166 2 letter code MT NL PL PT SK SI ES SE GB IS LI NO CH BG RO TR Certificate Information (SAR) This device meets the EU requirements (1999/519/EC) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.



[You're reading an excerpt. Click here to read official ACER LIQUID](http://yourpdfguides.com/dref/5586305)

[Z4 user guide](http://yourpdfguides.com/dref/5586305)

<http://yourpdfguides.com/dref/5586305>

The limits are part of extensive recommendations for the protection of the general public. These recommendations have been developed and checked by independent scientific organizations through regular and thorough evaluations of scientific studies. To guarantee the safety of all persons, regardless of age and health, the limits include a significant safety buffer. Before radio devices can be put in circulation, their agreement with European laws or limits must be confirmed; only then may the CE symbol be applied. 53 The unit of measurement for the European Council's recommended limit for mobile telephones is the "Specific Absorption Rate" (SAR). This SAR limit is 2.

0 W/kg, averaged over 10 g of body tissue. It meets the requirements of the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and was included in the European Standard EN 50360 for mobile radio devices. The SAR regulation for mobile telephones is in line with European Standard EN 62209-1. The maximum SAR value is calculated at the highest output level in all frequency bands of the mobile telephone. For body worn operation, this phone (EU model) has been tested and meets the ICNIRP exposure guidelines, and was included in the European Standard EN 62311 and EN 62209-2 for use with accessories that contain no metal and that position the handset a minimum of 1.

5 cm from the body. Use of other accessories may not ensure compliance with ICNIRP exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on. During use, the actual SAR level is usually much lower than the maximum value, because the mobile telephone works in different output levels.

It only transmits with as much output as is required to reach the network. In general the following applies: The closer you are to a base station, the lower the transmission output of your mobile telephone. The tested SAR of this device is as follows: NCC Head (W/kg) 0.453 CE Head (W/kg) 0.716 Body (W/kg) 0.760 Certification logos To view the certification logos on your device: tap Settings > About phone > Legal information > Certification logo. 54 Battery warning ATTENZIONE! Rischio di esplosione della batteria se sostituita in modo errato. Sostituire la batteria con un'una di tipo uguale o equivalente consigliata dalla fabbrica. Non disperdere le batterie nell'ambiente. VORSICHT! Explosionsgefahr bei unsachgemäßen Austausch der Batterie.

Ersatz nur durch denselben oder einem vom Hersteller empfohlenem ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers. ADVARSEL! Lithiumbatteri - Eksplosjonsfare ved feilagtig håndtering. Utskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren. VARNING! Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion. VAROITUS! Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.

Hävittä käytetty paristo valmistajan ohjeiden mukaisesti. ATTENTION! Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. ADVARSEL! Eksplosjonsfare ved feilaktig skifte av batteri.

Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner. 55 Acer Incorporated Date: July 12, 2013 Declaration of Conformity We, Acer Incorporated, of 8F., No. 88, Sec.

1, Xintai 5th Rd., Xizhi Dist, New Taipei City, 22181, Taiwan Declare under sole responsibility that the product: Model: Z160 Description: Smart Handheld To which this declaration relates, is in conformity with the following standards and/or other normative documents: •••••••••• EN 301 511 V9.0.2 EN 301 908-1 V5.2.1; EN 301 908-2 V5.2.1 EN 300 328 V1.7.1 EN 300 440-1 V1.

6.1; EN 300 440-2 V1.4.1 EN 301 489-1 V1.9.2; EN 301 489-3 V1.4.1; EN 301 489-7 V1.3.1 EN 301 489-17 V2.

2.1; EN 301 489-24 V1.5.1 EN 55022:2010/AC:2011 Class B; EN 55024:2010 EN 55013:2001/A1:2003/A2:2006; EN 55020:2007/A11:2011 EN 60950-1:2006+A11:2009+A1:2010+A12:2011 EN 50332-1:2000; EN 50332-2:2003 EN 50360:2001/A1:2012; EN 62311:2008; EN 62209-1:2006; EN 62209-2:2010; EN 62479:2010 EN 50581:2012 We hereby declare that the above named product is in conformance to all the essential requirements of the RoHS Directive 2011/65/EU and R&TTE Directive (1999/5/EC) issued by the Commission of the European Community. The conformity assessment procedure referred to in Article 10 and detailed in Annex [IV] of directive 1999/5/ EC has been followed related to Articles: • R&TTE Article 3.

1 (a) Health and Safety • R&TTE Article 3.1 (b) EMC • R&TTE Article 3.2 Spectrum Usage with the involvement of the following Notified Body: CETECOM, Untertuerkheimer Str. 6 - 10 66117 Saarbruecken Identification mark: 0682 (Notified Body) CE The technical documentation relevant to the above equipment will be held at: Acer Incorporated 8F., No.

88, Sec. 1, Xintai 5th Rd., Xizhi Dist, New Taipei City, 22181, Taiwan Authorized person: Name: Harriot SL Lee For the addresses/telephone numbers of Acer service centers, please refer to the warranty card. 56 End User License Agreement IMPORTANT-READ CAREFULLY: THIS END USER LICENSE AGREEMENT ("AGREEMENT") IS A LEGAL AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR A SINGLE ENTITY), AND ACER INC. INCLUDING ITS SUBSIDIARIES ("ACER") FOR THE SOFTWARE (WHETHER PROVIDED BY ACER OR BY ACER'S LICENSORS OR SUPPLIERS) THAT ACCOMPANIES THIS AGREEMENT, INCLUDING ANY ASSOCIATED MEDIA, PRINTED MATERIALS AND RELATED USER ELECTRONIC DOCUMENTATION WHICH MAY BE BRANDED "ACER" ("SOFTWARE"). AGREEMENTS RELATING TO ANY OTHER PRODUCT OR TOPIC ARE NEITHER INTENDED NOR SHOULD THEY BE IMPLIED. BY INSTALLING THE ACCOMPANYING SOFTWARE OR ANY PORTION THEREOF, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ALL OF THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT CONTINUE THE INSTALLATION PROCESS AND IMMEDIATELY DELETE ALL INSTALLED FILES, IF ANY, OF THE ACCOMPANYING SOFTWARE FROM YOUR PHONE. IF YOU DO NOT HAVE A VALIDLY-LICENSED COPY OF THE APPLICABLE SOFTWARE, YOU ARE NOT AUTHORIZED TO INSTALL, COPY OR OTHERWISE USE THE SOFTWARE, AND HAVE NO RIGHTS UNDER THIS AGREEMENT. The Software is protected by U.

S. and international copyright laws and conventions as well as other intellectual property laws and treaties.



[You're reading an excerpt. Click here to read official ACER LIQUID Z4 user guide](#)
<http://yourpdfguides.com/dref/5586305>