



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ACER LIQUID Z5 DUO. You'll find the answers to all your questions on the ACER LIQUID Z5 DUO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ACER LIQUID Z5 DUO
User guide ACER LIQUID Z5 DUO
Operating instructions ACER LIQUID Z5 DUO
Instructions for use ACER LIQUID Z5 DUO
Instruction manual ACER LIQUID Z5 DUO

acer
explore beyond limits™

Liquid | Z5



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)
<http://yourpdfguides.com/dref/5527484>

Manual abstract:

.....
.....
.....
.....

..... 5 Getting to know your smartphone ..

.....
.....
.....

..... 5 Installing a SIM or microSD card .

.....
.....

.....
.....
.....

. @ @

.....
.....
.....
.....

. 9 Locking your smartphone

.....
.....
.....

... 9 Navigating through menus and options . .

.....
.....

..... 10 Using the touchscreen.

.....
.....

.....
.....
.....

..... 11 The Home screen . .

.....
.....
.....
.....

13 Multitasking

.....
.....
.....
.....

..... 18 Acer shortcuts . . .

.....
.....
.....

.....
.....
.....
..... 19 Acer Float ...

.....
.....
.....
.....

.....
.....
.....
..... 19 AcerRAPID

.....
.....
.....
.....

.....
..... @ @

.....
.....
..... @ @

.....
.....
.....
.....

..... 22 Making a call ...
.....
.....
.....

.....
.....
.....

..... 22 The voice call screen ..

.....
.....
.....
.....

.....
... 24 Answering or declining a call ..
.....
.....

.....
.....
.....

... 24 Ending a call

.....
.....
.....
.....

.....
.....

.....
.....
.....

..... 26 *Replying to a message*

.....
.....
.....

..... 27 *MMS messages* ..

.....
.....
.....

.....
.....
.....

..... 27 *Going online*-----29 *Browsing the internet* . . .

.....
.....
.....

.. 29 *Setting up your Google email* . . .

.....
.....

.....
.....
.....

30 *Composing an email*

.....
.....
.....

..... 30 *Setting up Email*

.....
.....
.....

.....
.....
.....

... 30 *Maps, Navigation, Places and Latitude*

.....
.....
.....

..... 32 3 *Using the Camera*-----33 *Camera icons and indicators*

.....
.....
.....

... 33 *Taking a photo.*

.....
.....
.....

.....
.....
.....
... 35 Shooting a video

.....
.....
.....
. 35 Viewing photos and videos

.....
.....
.....
. 36 Geotagging

... 36 Advanced settings ----- 37 Changing modes with Quick Mode ..

.....
.....
.....
.. 37 Putting your smartphone in Airplane mode ...

.....
.....
.....
38 Restarting your phone

.....
.....
.....
..... 38 Adjusting settings .

.....
.....
.....
. 38 Connecting to a PC

.....
.....
.....
.. 43 Data usage wizard.

.....
.....
.....

.....
... 44 FM radio .

.....

.....

.....

.....

.....

.....
... 45 Multimedia playback ..

.....

.....

.....

.....

.....

..... 45 Restoring to factory settings ..

.....

.....

.....

.....

..... @@ ..

.....

.....

.....

.....

.....

.....

... 47 Using a Bluetooth headset

.....

.....

.....

.....

... 47 Creating a new access point

.....

.....

.....

... 47 Inserting a microSD card ...

.....

.....

.....

.....

.....

..... @@

.....

.....

.....

.....

..... 51 Other sources of help

.....

.....

.....

.....

.....

... 52 Warnings and precautions .

.....
.....
.....
.....

52 Emergency calls

.....
.....
.....

.....
.....
... 54 Taking care of your smartphone ..

.....
.....
.....

.... 55 Specifications

.....
.....
.....

.... 56 Safety ..

.....
.....
.....
.....

58 Regulatory information

.....
.....
.....

... @@ Carefully unpack the box and remove the contents. @@ 1 2 Item Dual SIM cover 3.5 mm headphone jack Description Insert a SIM and/or micro SIM into the slots. Connects to stereo headphones. 5 No. 3 Item Power button Description Press to turn the screen on/off or enter sleep mode; press and hold to turn the smartphone on or off. Detects proximity to automatically adjust screen brightness or turn the screen on/off.

Emits audio from your smartphone; suitable for holding to your ear. Useful for taking self portrait images. 5-inch, 854 x 480 pixel capacitive touchscreen to display data, phone content and enter information. Connects to a USB cable/charger. Insert a microSD card into the slot. Increases or decreases the phone volume. LED flash for camera. 5 MP camera for taking high-resolution images. Internal microphone. Shortcut button to answer incoming calls and end calls. Long press to launch the camera app; short press to launch a designated app (default app is Google Play Music). 4 5 6 7 Proximity sensor Phone speakers

Front-facing camera Touchscreen 8 9 10 11 12 13 14 Micro USB connector microSD card slot Volume up/down buttons Flash Camera Microphone AcerRAPID button Installing a SIM or microSD card To take full advantage of your smartphone's telephony capabilities, you must install a SIM card. The SIM card holder is located at the top of the battery bay. Your new phone has two SIM card holders, you may install one or two SIM cards. Additionally, you may wish to increase your smartphone's storage by inserting a microSD card into the slot provided 1.

Insert your fingernail and flip the microSD card cover open and insert the microSD card as illustrated. 6 2. Ensure that the microSD card is inserted all the way into the card slot and secure the microSD card cover. SIM1 SIM2 (optional) 3. Insert your fingernail and flip the SIM cover up.

Insert the SIM card and/or micro SIM card into the appropriate slots as illustrated. 4. Ensure that the SIM card and/or micro SIM card are inserted all the way and secure the SIM cover. 7 SIM card lock Your smartphone may come with a SIM card lock, i.e., you will only be able to use the SIM card provided by your network operator. To cancel the SIM lock, contact your network provider. Charging the battery For initial use, you need to charge your smartphone for eight hours. After that, you can recharge the battery as needed. Connect the AC adapter cord to the micro USB connector on your smartphone.

8 Using your smartphone Turning on for the first time To turn on your smartphone for the first time, press and hold the Power button until the screen turns on. You will then be asked to configure some settings before you can use your smartphone. Follow the onscreen instructions to complete setup. Sign in to or create a Google account If you have internet access, your smartphone allows you to synchronize information with a Google account. During the start-up

process, you may create or sign in to your account, which will be used to synchronize your contact list, email, calendar and other information. If you do not yet have internet access, or do not want to use this feature, then tap Skip. Creating multiple Google accounts You can create and easily access multiple Google accounts.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)

<http://yourpdfguides.com/dref/5527484>

Open the Application menu and then tap Settings > Add account. Entering your PIN When you install a SIM card for the first time, you may need to enter a PIN using the onscreen number pad. Important: Depending on your settings, you may be required to enter your PIN each time you switch on the phone function.

Activating a new SIM card If you are using your SIM card for the first time, it may require activation. Contact your network operator for details on how to do this. Locking your smartphone If you will not use your smartphone for a while, press the Power button to lock access. This saves power and ensures your smartphone does not unintentionally use any services. Your smartphone will lock automatically if it is not used for one minute.

9 Waking your smartphone If the screen is off and the smartphone does not react to any taps on the screen or front panel buttons, then it has been locked and is in sleep mode. Press the Power button to wake your smartphone. Unlock your smartphone by sliding your finger horizontally across the screen (it works both ways). The lock screen extends to either side of the screen, giving you room to add widgets for quick access. To view the extended lock screen, swipe in from the edge of the display.

Note: If you access the extended lock screen by accident while trying to unlock the screen, you can disable it by tapping the lock icon at the bottom of the screen. Then, unlock your smartphone as described above. For additional security, you may set an unlock pattern, a set of dots that must be touched in the correct order to access the phone. Open the Application menu and then tap Settings > Security > Screen lock. Note: If you forget your unlock pattern, please refer to "Unlock pattern" on page 5 see "Status and notification area" on page 16") and tap Choose input method. Text assistance The Swype keyboard has various features that assist you to enter correct text. In the Application menu, tap Settings > Language & input and then tap the Settings icon to the right of Swype. You can also tap and hold the Swype key you can enable or disable the following: Function Settings My Words Languages Gestures Help Updates Description Change your text input preferences. Adjust settings and check words added you your personal dictionary. Set the language used by the keyboard.

A list and description of the various Swype gestures. Learn how to use the Swype keyboard. Check for application and dictionary updates. . From here 12 Predictive text Both Swype and Google keyboards provide predictive text input for the browser. As you tap the letters of a word, a selection of words are displayed above the keyboard that continue the sequence of letters tapped, or are a closehe dock. Dragging the new app to an existing dock icon will create a folder for both icons. To remove an icon from the dock, tap and hold the icon to select it. Either drag the icon to a different location outside the dock or to Remove at the top of the screen. Changing the wallpaper Tap and hold any open area on the Home screen.

Tap Wallpaper to change the lock screen and home wallpaper. You can choose from images stored in the Gallery, standard wallpapers, Live Wallpapers featuring animated or interactive backgrounds, or Video Wallpapers enabling you to use videos as your background. Managing the lock screen Tap and hold any open area on the Home screen. Use the various settings to personalize the lock screen by enabling/disabling notifications on the lock screen and setting wallpaper images. 15 Changing home screen settings Tap and hold any open area on the Home screen.

Use the various settings to personalize the home screen such as changing the transition effect when scrolling to different screens. The Application menu Note: All images are for reference only. The apps installed on your device can be different from the apps shown in illustrations. To access the Application menu, tap in the center of the dock on the Home screen. Apps are displayed in alphabetical order.

Swipe the page to the left or right to see more apps. When you are on the last page of apps, swipe to the left to see downloaded apps on your phone, or tap DOWNLOADS at the top of the page. Swipe to the left to see widgets available on your phone, or tap WIDGETS at the top of the page. To quickly jump to apps or widgets, tap APPS, DOWNLOADS or WIDGETS at the top of the Application menu. Tap the Play Store icon to open Google Play to view and purchase apps and/or digital media. Status and notification area The Notification area is at the top of the screen. This area contains a variety of icons to inform you of your phone's status. The left side of the Notification area displays event icons that indicate a new event (such as a new message). Drag the Notification area down the screen to view more information about new events. Tap Tap to clear the notification area.

to adjust commonly used settings 16 Connection icons Note: Connection icons appear in different colors if you have two SIMs inserted. The icons on the right side indicate signal strength, connection, battery status and the time. Icon Description Connected to GPRS mobile network Connected to EDGE mobile network Connected to 3G mobile network Connected to HSDPA network Bluetooth is on Bluetooth connected Icon Description Roaming Cellular signal strength Mobile data transferring Connected to a wireless network No signal Airplane mode (Wireless connectivity disconnected. Please disable airplane mode before trying to make a call.) USB tethering is activated USB and wireless tethering are activated Wireless tethering is activated Battery icons Icon Description Battery is very low Battery is low Battery is charging Icon Description Battery is partially drained Battery is full Notification icons Note: Notification icons appear in different colors if you have two SIMs inserted. Icon Description Alarm is set Speakerphone is on Icon Description SIM card is invalid or not installed Vibrate mode 17 Icon Description New Gmail message New/unread SMS/MMS Problem with sending SMS/MMS New Google Hangouts message New voicemail Upcoming event Syncing data Warning, open the notification area for more information SD card or USB storage is full An open wireless network is available Phone is connected to PC via USB Carrier data use threshold exceeded Connected to or disconnected from virtual private network (VPN) Icon Description Ringer is silenced Phone microphone is off Application update available System update available Missed call Song is playing More notifications GPS is on Receiving location data from GPS Uploading data Downloading data Download finished Multitasking You can have multiple apps open at the same time. Tap the Recent button to see recently opened apps. To open a new app, tap the Home button to return to the Home screen, then start the new app. To prolong battery life, it is better to close an app when you've finished using it. You can do this three ways: 1.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)
<http://yourpdfguides.com/dref/5527484>

Press the Back key until the app is closed 2. Tap the Menu icon and select Exit (if available) 3. Press the Recent button and swipe the icon off the screen. 18 Acer shortcuts Tap and hold the Recent button to launch a shortcut list to your favorite apps. To and tap on an empty slot to open the add an existing app to the shortcut list, tap Choose an app shortcut list.

To remove a shortcut app, drag the app to Remove. Acer Float Tap and hold the Recent button to launch the Acer Float application list. Acer Float allows you to open the camera app, maps app, calculator app or notes app as a "floating" window. The "floating" windows can be moved around in the display.

Note: Only one Acer Float app can be open at a time.

If a second Acer Float app is opened, the first Acer Float app will close. 19 AcerRAPID The AcerRAPID button is located directly below the camera. Long press the AcerRAPID button to launch the camera app. While the camera app is open, push the AcerRAPID button to take a picture. Long press to take four continuous pictures. Short press the AcerRAPID button to launch the Google Play Music app. To change the app for the short press function, open the Application menu and tap Settings > AcerRAPID > Short press and choose an app. The AcerRAPID button also allows you to answer incoming calls and end calls quickly without needing to touch the screen. To accept an incoming call, press the AcerRAPID button. When finished, press the AcerRAPID button to end the call.

Note: Only the short press function can be changed. The long press function is fixed as the camera app and can't be changed. 20 Managing contacts Managing your contacts Your smartphone features an address book that allows you to save contacts to your phone's internal memory, either one of your SIM cards, or your Google account. From the Home screen tap Phone and tap to view your contacts. If you don't have any contacts stored on your phone, you can import contacts from your Google account, SIM, or SD card. You can also add a new contact by tapping to add a contact, to search for a contact, or tap the Menu icon to open the menu. Adding a contact Tap to add a new contact. If you have a barcode scanner app, you may also scan a person's profile barcode to add the person to your contact list or group. To create a contact, first choose where you want to store the contact's information. You will then be asked to enter the contact's information, such as name, address, and phone number.

You may scroll down the page and tap Add another field to add things such as: •••IM addresses Add any personal notes about the contact Phonetic name Link a website To assign an image to your contact, tap the silhouette and select whether to take a photo or select an image from your smartphone's picture gallery. When done, click Done at the top of the screen. Tapping on the contacts name will bring up their profile. Tap while viewing a contact's profile for a variety of options related to that contact. Tip: You may also create a contact from an already dialed or received number, see "Saving a dialed number to contacts" on page 25.

21 Making calls This chapter shows you how to make phone calls, and the various options available to you during your call. Before making a call Check that the phone function is on before you make a call. You can confirm the phone status from the Notification area. Note: Status and notification icon colors may vary. Icon Description Not connected to the network: You are unable to make a call.

Connected to the network: You may make a call. Airplane mode: Wireless connectivity disconnected (Wi-Fi, Bluetooth, 2G and 3G). Please disable airplane mode before trying to make a call. Making a call Note: The phone function needs to be enabled before the call can be connected (see "Before making a call" on page 22). Note: When two SIMs are inserted and their Voice call settings are set to Always ask (see "Managing your SIM cards" on page 48), you must choose which SIM to use each time before making a call by tapping on the carrier name. 1. From the Home screen tap Phone . If it's not already visible, search for the phone app in the Application menu. 2. Enter the number you wish to dial.

If the contact you need is displayed, simply tap the contact name to make a call. 3. Tap call. at the bottom of the screen to make the . 4. To end the call, tap 22 Dialing a number from Call log Your call history can be viewed by tapping the Call log tab at the top of the screen. It displays recent received, dialed, and missed calls. Tap the phone icon next to a contact to redial. To view details of the call, tap the number or contact's name. While viewing the details of a call, tap the trash icon to remove that call from the call log or tap the Menu icon for other options to edit number before making a call.

Viewing missed calls Missed call notifications are displayed in the following three areas: 1. The Notification area with the missed call icon . Open the Notification area and tap the missed call notification to display the missed call details. (the number in the box is the number of missed calls). Tap 2.

By the Phone icon Phone from either the Home screen or the Application menu to directly display the missed call details. 3. In the Call log, tap the missed calls tab to display the missed call details. Making a call to one of your contacts Calling a contact from the People tab 1. Tap the People tab at the top of the screen to view your contacts.

2. Tap on a contact to call them. Dialing an international number When dialing international numbers, there is no need to enter the international direct dialing prefix ('00' etc.) before the country code. Simply tap and hold 0+ on the onscreen number pad until + appears onscreen. Warning: International call rates can vary greatly depending on the country you are calling and your network provider. We suggest you check all call 23 rates with your network provider, to avoid excessive phone bills. If you are using your smartphone abroad, roaming charges will apply. Consult your network provider for roaming rates specific to the country you are visiting before you leave. The voice call screen The voice call screen displays after you have dialed a phone number and after you have accepted a phone call.

The screen displays the number/contact you are talking to, the call duration and voice call options. You can minimize the call window to appear as a small movable icon. box instead of a whole screen by tapping the You can set this "floating" dialog box as the default voice call screen. To do so, open the Notification area, tap and then tap the FLOAT CALLER button . , Answering or declining a call When you have an incoming call, the number will be shown on the screen. Tap and slide your finger across the screen to answer or reject the call. To reject the call icon and select a message. If the with a text message, slide your finger up to the Float Caller option is enabled, the number will be shown as a "floating window".



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)

<http://yourpdfguides.com/dref/5527484>

To answer or reject a call with Float Coller, tap the appropriate icon. Ending a call To end a call, tap from the voice call screen.

24 Voice call options Icon Description Access the keypad while a call is in progress. Speakerphone. Mute a call. Place the call on hold. Add another call. Saving a dialed number to contacts You can save a number you have dialed to your contacts for future use. You will then 1. Select the number from the Call log tab, and tap on the contact be asked if you want to add the number to your contacts. 2.

Tap OK. 3. Tap Create new contact and select how to complete the action. See "Adding a contact" on page 21. Conference calls If you have one call on hold and another on line, you can combine both calls to create a conference call. After the first call is established, tap and tap Add call to start the conference call.

25 Messaging This chapter shows you how to set up and use the Phone messages, Social messages and Social events functions of your smartphone. All SMS and MMS messages are accessed via Messaging. Messaging automatically arranges received and sent messages into threads. To access Messaging tap on the Home screen.

Note: When two SIMs are inserted and their Messaging settings are set to Always ask (see "Managing your SIM cards" on page 48), you must choose which SIM to use each time before sending the message by tapping on the carrier name. Creating a new message You can use your phone to compose Phone (SMS and MMS) messages. Tap to compose a new message. Tap the Type name or number field and enter the recipient's phone number or name. Suggested contacts will be displayed in a drop-down list below the text field. To select a suggested contact, tap the contact's name. To add to display your People list.

Once several contacts, tap you've selected the desired contacts, tap OK. Enter your message in Type text message field. When finished, tap to send.

Note: SMS messages may be up to 160 characters long. If your message is longer than 160 characters, it will be sent as multiple linked messages. Most phones will automatically join the linked messages to present the recipient with a single long message, however, some older phones do not have this ability.

Tap the Menu icon to see what options are available when creating a new message. The options change depending on the status of the message.

Option Insert contact Add subject Discard Description Add a contact to the recipients list. Add a subject to the message. Discard the message. Insert quick text Insert pre-defined text content. 26 Replying to a message When a new text message arrives, a message screen displays showing you the message and enabling you to quickly reply.

To reply later, tap Close. To view the message and all previous messages from the sender, tap View. Message notifications appear in two places: the Notification area and the message icon at the bottom of the phone displays the number of unread text messages. Tap Messaging on the Home screen to view the message list or open the Notification area to see a summary of the message. Tap the summary to open the message list. To reply to an SMS or MMS message, open the message from the message list. Enter your text in the text box labeled Type text message. Tap the Menu icon to see available options.

Option Select message Add shortcut Insert quick text Insert contact Add subject Add to contacts Chat settings Description Perform various actions to multiple messages from this contact. Puts a link on the Home screen to that contact's messages.

Insert pre-defined text content. Add a contact to the recipients list. Add a subject to the message. Add the other contact to your contacts list. Modify various messaging settings. MMS messages MMS messages are similar to text messages but also allow you to attach multimedia files such as pictures, audio or video clips. Each MMS message can be up to 300 KB in size. Note: You need to set up an MMS profile before you can send MMS messages. Normally, your smartphone will set up the profile for you based on information retrieved from your provider. Tip: Ask your network provider for the necessary information if you need to manually set up the MMS profile.

27 Receiving MMS messages When a new MMS message arrives, a message icon appears at the top of the screen and a notification message is displayed.

Note: Downloads can take a long time, depending on your connection quality. If you reply or open another application, the download will be stopped.

Important: You may be charged to download message content, especially if you are roaming. Please contact your provider if you have any questions.

1. Open Messaging to view a summary of the message. 2. Tap the message to view the content. 3.

Tap Download to download the message content. 4. To reply to the message, enter your text in the text box labeled Type text message and tap the Send icon. Simple text replies will be sent as SMS messages. If you wish to attach multimedia and/or other content, tap . You will be presented with a menu of options. 5.

When you have finished composing the message, tap the Send icon. 28 Going online Browsing the internet In order to browse the internet with your smartphone, you must be connected to a data or wireless network. Using the browser To start browsing, open the Application menu and tap Chrome.

To open a new website, tap the address box at the top of the page. Enter the address using the keyboard and tap Go. You can zoom in or out of pages by pinching or reverse pinching. To navigate forward and backward in your browser's history, view your bookmarks, adjust browser settings, and perform other tasks, tap the Menu icon. Chrome enables you to open multiple at the top of any webpage pages. Tap to display all of your open tabs (tap again to close). Tap a tab from the list to open it. To open a new tab, tap New tab. The number in the icon represents the number of open tabs. Voice search Note: Voice search is available only in some regions.

With voice actions, you can send text messages, place calls, send emails, find directions to establishments, automatically call establishments, search the internet and even send a note to yourself using your voice. Open Voice Search from the Application menu, or tap the Home screen. from 29 Setting up your Google email 1. Make sure your smartphone is connected to a data or Wi-Fi connection. 2.

From the Application menu tap Gmail. If you did not enter your Gmail account address and password when you first started your phone, follow the onscreen instructions. Composing an email 1. Make sure your smartphone is connected to a data or Wi-Fi connection. 2.

From the Application menu tap Gmail. 3. Tap the Menu icon and then Compose. 4. Enter the recipient's email address, the subject and message. 5. When you are finished composing your message, tap . Setting up Email Your smartphone enables you to access your email. Most popular ISPs can be set up in two steps. In the Application menu, tap Email to start setting up your email account.



[You're reading an excerpt. Click here to read official ACER LIQUID](http://yourpdfguides.com/dref/5527484)

[Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)

<http://yourpdfguides.com/dref/5527484>

If necessary, enter your email address and tap *Manual setup* to enter the parameters manually. Tap *Next* to finish the setup process. *Google Play Note:* Google Play may not be available in all countries and regions. Note: You must activate a Google account before using Google Play. The first time you access Google Play, you will need to read and accept the *Terms of Service*. Tap *Play Store* from the *Application menu* to open Google Play. Here you can obtain a variety of add-on programs and apps to enhance the functionality of your smartphone. Note: The contents and design of Google Play varies by region. For example, in some regions, you can also browse for and purchase movies, books, magazines, or music. Updates may add new categories or change how to navigate Google Play at any time.

30 You can browse the store by category or tap the search icon to search for a specific app. Once you have selected an app, tap the *Install* button to download and install the app. You will be told which services (contact information, wireless access, GPS, etc.) the app requires access in order to function correctly. If none of these services seem unusual, tap *Accept & download* to proceed with the installation.

You may keep track of the download progress from both the app's page and the smartphone's *Notification* area. Important: Some apps may require payment before you can download them. You will need to have a *Google Checkout* account in order to pay for these apps, or a credit card number associated with your *Google* account. Using downloaded apps Once you've downloaded and installed an app, you may find it in the *APPS*, *DOWNLOADS* or *WIDGETS* sections of the *Application menu*. Certain apps provide both an application icon and widget, or only provide a widget (with no application icon).

See "Personalizing the Home screen" on page 14. 31 Uninstalling downloaded apps To uninstall an app, go to *Settings* from the *Application menu* and select *Apps*. Tap the app you wish to uninstall, tap *Uninstall* and confirm. *Maps*, *Navigation*, *Places* and *Latitude* Get easy-to-follow directions using *Google Maps*, view real-time traffic condition and navigate by using spoken, turn-by-turn driving instructions with *Navigation*, view where your friends are and places of interest and local businesses on *Google Maps* using *Places* and *Latitude*. Important: *Google Maps* does not have information about every location. Using the map Tap *Maps* in the *Applications menu*. Drag the map with your finger to move the map around. To zoom in or out: 1. Double tap a location on the map to zoom in on the location, and tap once to zoom out, or 2. Touch an area with two fingers at once and spread them apart to zoom in, and pinch them together to zoom out.

Important: Not all zoom levels are available for all locations. 32 Using the Camera Your smartphone features a digital camera mounted on the rear. This section will take you through all the steps in taking photos and videos with your smartphone. To activate the camera, tap *Camera* on the *Home screen*, or open the *Applications menu* and tap *Camera*. Camera icons and indicators Smile shot Panorama Normal mode Listed capacity* HDR Camera zoom Camcorder Settings Flash Front-facing camera Shutter Previous picture/video *The listed capacity is the approximate number of images that can be taken at the current resolution. The camera window provides controls on either side of the image. Pinch the screen to zoom in and reverse pinch to zoom out. Tap to take a picture. Tap the *Previous picture/* to open video thumbnail to open the gallery. Tap the *Settings menu*.

33 Settings menus General You may adjust the following: • Turn GPS info on or off: Stores GPS information in the image information. • Exposure: Over- or under-exposes the image. • Color effect: Applies a color effect to the image. •••None Mono Sepia ••Negative Sepia Blue •Scene mode: Adjusts photo parameters for a particular environment. •••Auto Portrait Sports •••Night Landscape Sunset •White balance: Compensates for different lighting environments.

•••Auto Incandescent Daylight •••Fluorescent Cloudy Tungsten •Image properties: Adjusts the Saturation, Brightness, and Contrast. •Anti-flicker: Set the anti-flicker to Off, 50 Hz, or 60 Hz. Camera You may adjust the following: •Turn Zero shutter delay on or off: Takes the photo immediately when you tap the shutter icon. •Turn Face detection on or off: The camera automatically detects faces and focuses on them. •Set the Self timer: Options are Off, 2 seconds or 10 seconds.

•Continuous shot: Set the maximum number of photos taken in a single burst. •Picture size: Set the picture resolution. Camcorder You may adjust the following: •Turn the Microphone on or off. •Set the Audio mode. •Set the Time lapse interval. 34 •Set the Video quality. Taking a photo 1. Ensure you have adjusted the settings described above. 2. Frame your subject and steady your smartphone.

3. Zoom in or out as needed. 4. Tap to take a picture. Taking a panoramic photo Panoramic mode allows you to take a series of up to nine photos that the camera application will 'stitch' together to make a single extended image. 1. To take a panoramic photo, select panoramic capture mode . 2. Align the camera to take a photo of one end of the panoramic scene (the furthest left, right, top or bottom). 3.

Tap the *Shutter icon* to take the first image; then smoothly turn the camera to the left or right to take the next image of the scene. •Keep the blue arrow aligned with the dotted arrow as you move the camera. Your smartphone will automatically capture an image along the length of your shot. Note: If your photo needs fewer than nine images, tap the tick icon to stop the selection process and process the captured images. The camera application will process the images and save a single extended image to your smartphone's gallery.

Note: Panoramic images work best with static outdoor scenes. Objects too close to the camera or with large straight edges may confuse the detection process. Shooting a video 1. Frame your subject and steady your smartphone and zoom in or out as needed. 2.

Tap to start taking a video. The icon will turn red to indicate that recording is in progress. Tap the icon again to stop recording. Supported formats Type Image Video Formats JPEG, GIF, PNG, BMP MPEG-4, H.263, H.264 35 Viewing photos and videos After you have taken your photo or video, it is automatically saved. Once you have taken a photo or video, you can view it in *Gallery* by tapping the *Previous picture/* video thumbnail. Alternatively, open the *Applications menu* and tap *Gallery*. From *Gallery* you can share the file directly using various services. Note: Share options vary depending on the file type.

You may also edit photos you have taken by tapping the menu icon in the upper right-hand corner, then tap *Edit*.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)
<http://yourpdfguides.com/dref/5527484>

Geotagging Geotagging allows you to store the location where a photo or video was taken right in the photo or video itself. For the geotag to display, pictures must be taken with GPS location info turned on. 36 **Advanced settings Changing modes with Quick Mode** Your smartphone contains an app called Quick Mode that makes adjusting the user experience for different people very easy. From the Home screen, tap Quick Mode. The first time you enter Quick Mode, you'll need to enter a PIN. Note: The default PIN is "1111". Several user mode options will display. Follow the onscreen instructions to display your new easy-to-use mode. To change modes or revert back to default mode, tap Settings (in some modes simply represented by the gear icon). Enter your PIN number. Navigate to and tap Mode Switcher. To revert back to the phone's default mode, tap Default Mode; otherwise, choose another mode to use. 37 **Putting your smartphone in Airplane mode** You can enter Airplane mode (also known as flight mode) to turn off telephone, wireless, and Bluetooth functions and use your smartphone as a handheld device during a flight. Check with your airline to make sure this is permitted onboard. Switch your smartphone off during takeoff and landing as it may interfere with aircraft electronic systems. Turning Airplane mode on or off 1. Open the Notification area. 2. Tap and then tap AIRPLANE MODE.

-ORI. Press and hold the Power button until you get the phone options menu. 2. Tap Airplane mode to switch it ON or OFF. Note: When Airplane mode is active, the Notification area. icon will be displayed in the Restarting your phone You can restart (reboot) your phone if you find apps are not responding. 1. Press and hold the Power button until you get the phone options menu. 2. Tap Restart.

@@@Roaming: Set options for your phone when outside your normal network. @@@@Turn the Bluetooth function on or off. View an estimate of the mobile data used on each SIM. @@Access additional connection settings: Airplane mode: Disable all wireless connections so you can safely use this device onboard an aircraft. VPN: Set up and manage Virtual Private Networks. Tethering & portable hotspot: Share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot. Mobile networks: Set your options for connecting to mobile networks. @@@@1. @@2. @@3.

Open the Application menu and then tap Settings > More.. @@1. Open the Application menu and then tap Settings > More.. > Tethering & portable hotspot. Turn Wi-Fi hotspot ON.Tap Wi-Fi hotspot > Set up Wi-Fi hotspot. 2. @@@Tap Save to finish. @@@> Mobile networks to adjust your network settings. @@@However, you may prefer to manually select a network. This may be a good idea when roaming. Open the Application menu and tap Settings > More... @@@@Tap Phone from the Home screen. @@@Item Vibrate Volumes Description Vibrates the device for incoming calls. Adjust the Ringtone, Notifications, Alarm volumes.

41 **Item SIM1 ringtone SIM2 ringtone (optional) Default notification sound Dial pad touch tones Touch sounds Screen lock sound Vibrate on touch** Description Sets the default voice calls ringtone for SIM 1. To see which SIM card slot is SIM 1, see "SIM card lock" on page 8. Sets the default voice calls ringtone for SIM 2. To see which SIM card slot is SIM 2, see "SIM card lock" on page 8. Set your phone's default notification sound. Play tones when using dial pad. Play sounds when touching certain UI elements. Play sound when locking and unlocking the screen. Vibrate when pressing soft keys and on certain UI interactions. Audio profiles To choose between four predefined profiles, in the Application menu tap Settings > Audio profiles and choose one. Item General Silent Meeting Outdoor Description Ring and vibrate Silent only Vibrate only Loudest ring and vibrate DTS Sound To adjust your phone's DTS audio settings, in the Application menu tap Settings > DTS Sound. Tap DTS Sound to enable and adjust the Treble, Bass, Music EQ and Video EQ. Tap DTS Sound to uncheck and disable. Display To adjust your phone's display settings, in the Application menu tap Settings > Display. Item Lock screen notifications Description Enables notifications to display on the lock screen.

42 **Item Wallpaper Auto-rotate screen Brightness Daydream Font size Sleep** Description Change the Home screen's wallpaper. Enable rotation of the screen when device is tilted. Adjust screen brightness. Choose various screen saver visuals for when the phone is docked, charging, or both. Change the default font size for the UI.

Adjust the delay before the screen automatically turns off. Connecting to a PC If you wish to transfer information between your phone and your computer, you can connect your phone to a PC using the supplied USB cable. @@@@Open the Notification area, and tap Connected as media device to configure the USB options. You will now be able to see your phone as a drive in your computer's file explorer. Note: After turning on USB storage, you will not be able to access the files in applications such as Gallery or Music. 43 **Synchronization** You can sync your calendar, email and contacts on your phone and never worry about losing them again. Sync in real time or adjust it as you please. In the Application menu, tap Settings. Under ACCOUNTS, tap the appropriate account and again under ACCOUNTS tap that account's email address to access the synchronization settings. To add a new account, tap Add account.

Select the type of account (Corporate, Email, Facebook, or Google) and then follow the onscreen instructions. Google Sync In Google, you can set synchronization for Browser, Calendar, Contacts, Gmail, and Google Photos. In your Google account's synchronizaton settings menu, tap the checkmark next to the item you would like to have auto-sync. Tap again to uncheck any for manual synchronization. To manually synchronize an item, make sure the item is checked, tap the Menu icon and then tap Sync now. Note: You need a Google account to sync your calendar and appointments. Data usage wizard The Data usage wizard monitors and logs all of your data usage and data consumption. You can access the Data usage by tapping on the Data usage wizard from the Home screen. By checking the Data usage, you can determine which apps were used and how much data was used on any given day. 44 **FM radio** The FM radio allows you to listen to your favorite stations while on the move.

@@@@@Set the alarm time. Set which days to repeat the alarm. Set a ringtone. Enable or disable vibrate. @@@@@1. 2. 3. 4. In the Application menu tap Settings > Apps. Swipe over to the Downloaded tab. Find the app in the list and tap on it. Tap the Uninstall button and then tap OK Warning! You should only remove programs if you are familiar with the Android operating system. Restoring to factory settings You may perform a clean boot to restore your smartphone to the factory settings.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)

Note: Before performing a clean boot, ensure that your smartphone is not locked. Press any key or tap the screen to see if the phone responds. Warning! You should only perform a clean boot when all other options have failed to restore your smartphone to an operational state. Warning! This will erase all your personal information, any contacts stored on your phone and any programs you installed. If your phone is responding to screen input, then open Settings from the Application menu. Tap Backup & reset > Factory data reset > Reset phone and then Erase everything to format your phone. 46 Accessories and tips This chapter shows you how to use accessories with your smartphone, as well as provide useful tips for when you are using your smartphone.

Using the headset Your smartphone is compatible with headsets with built-in microphone for handsfree use when making calls. To use the headset, plug it into the 3.5 mm headphone jack at the top of the phone. When the headset is plugged in, all audio is routed to the headset, and the speakers are turned off. • To answer an incoming call, press the button on the microphone. • Adjust the volume using the volume up/down button on the smartphone. • End the call by pressing the button again. Using a Bluetooth headset Your smartphone's Bluetooth functions make it fully compatible with all Bluetooth headsets. This allows you to use the unit handsfree when making calls, without the inconvenience of wires. Creating a new access point When you need to add another GPRS/3G/EDGE connection on your phone, obtain the access point name and settings (including username and password if required) from your wireless service provider.

- 1. Open the Application menu and tap Settings > More... > Mobile networks > Access Point Names, and select an operator.*
- 2. Tap the Menu icon and then tap New APN. 3. Enter the APN settings. Tap an item to adjust it.*

4. When you have finished, tap the Menu icon and then tap Save. Important: Some providers and countries do not allow the use of a smartphone as a modem over HSDPA. Please check with your provider before attempting to do so. Inserting a microSD card Your smartphone features a memory expansion slot that accepts a microSD card to expand memory and storage capacity. Please refer to "SIM card lock" on page 8 for instructions on installing a microSD card. 47 Managing your SIM cards If your phone detects a new SIM card, you will be asked to confirm the preferred SIM to use for each action. It indicates the following information: 1. The color used for each SIM card and its network name. 2.

The preferred SIM for outgoing calls. 3. The preferred SIM for sending messages. 4. The preferred SIM for 3G data. Tap Change to edit these settings from the SIM Management screen. You can also access the SIM Management functions by opening the Application menu and tapping Settings > SIM management.

SIM management Open the Application menu and tap Settings > SIM management. From this screen, you can: 1. Enable or disable each SIM.

- 2. Configure each SIM's name, phone number, display numbers, and assign a color to each SIM (allowing you to quickly and easily recognize which SIM is active). 3. Set the default SIM for voice calls, messaging, and data connection. 4.*

General settings for each SIM. 48 Selecting which SIM to use when making a call If you have set Voice call to Always ask, you will be asked which SIM to use each time you make a call. Enter the number, then tap you want to use. . A dialog opens; tap the SIM Selecting which SIM to use when sending a text message If you have set Messaging to Always ask, you will be asked which SIM to use each time you send a text message.

Enter the message and recipient information, then tap Send. A dialog opens; tap the SIM to use and the message will be sent. Identifying calls Whenever you receive a call, the caller's number will be shown using the color defined for the SIM that the call is being received on. You will also be shown the name of the SIM receiving the call. In the call log, the name of the SIM will be shown beneath the number of the call --whether the call was missed, answered or was an outgoing call -- in the color you defined for that SIM. 49 Limitations when using two SIMs When SIM1 is: •••• In a call Ringing Sending or receiving a message • Using a data connection • SIM2 cannot: •• Dial out Receive a call (caller will get a "number not available" message) Send or receive a message Use a data connection Note: If you are using data on one SIM and you make or receive a call, or send or receive a text message on the other SIM, the first SIM's data connection will be temporarily halted. 50 Appendix FAQ and troubleshooting This section lists frequently asked questions that may arise during the use of your smartphone, and gives easy answers and solutions to these questions. Aspect Audio Question Why is there no sound coming from the device? Answer If the headset is plugged into the device, the speaker is automatically shut off. Disconnect the headset. Check that the device volume setting is not muted.

Check that the volume control is not at its lowest setting. Multimedia files Why can't I view my video files? Why can't I play my music files? System information and performance Power How do I check the OS version of my device? I can't turn on the device. How do I check the RAM and ROM memory status? You may be trying to view a video that is not supported. Refer to "Multimedia" on page 56. You may be trying to play a file that is not supported. Refer to "Multimedia" on page 56. Tap Settings > About phone to check the OS version (Build number) and other hardware and software information. The battery power may be depleted. Recharge the device. Refer to "SIM card lock" on page 8 for more information.

To check the ROM status, tap Settings > Storage. To check RAM status, tap Settings > Apps > RUNNING. RAM / ROM Internal storage My device's available Uninstall apps to increase available internal storage is full storage. See "Uninstalling an app" on or almost full. page 46.

51 Aspect Unlock pattern Question I forgot my unlock pattern. Answer After a certain number of wrong entries, you will be presented with an option to reset your pattern. Tap Forgot pattern? and enter your google account username and password. Note: You must have an active Google account on the smartphone. Alternatively, you restore your smartphone to factory settings.

See "Restoring to factory settings" on page 46. Heat The phone heats up when charging or making long duration calls. It is normal for the phone to heat up when charging. When charging is complete, it will return to its normal temperature. It is also normal for the phone to heat up during long periods of use, such as watching a video or a long phone conversation. Other sources of help For information on: Refer to: Up-to-date information regarding your www.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)

<http://yourpdfguides.com/dref/5527484>

acer.com/support Warnings and precautions ••• Do not use this product near water. Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged. Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.

To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface. Never use this product when engaging in sporting activities, exercising, or in any vibrating environment which may cause a short circuit or damage, and even a risk of explosion from the battery pack. ••• 52 CAUTION when listening to music To protect your hearing, follow these instructions. ••••• Increase the volume gradually until you can hear clearly and comfortably. Do not increase the volume level after your ears have adjusted.

Do not listen to music at high volumes for extended periods. Do not increase the volume to block out noisy surroundings. Decrease the volume if you can't hear people speaking near you. Additional safety information Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your smartphone device under the following conditions. These devices may include, but are not limited to: wireless LAN (WLAN), Bluetooth and/or 3G. Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. To successfully transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with hearing aids should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF transmissions. Pacemakers. Pacemaker manufacturers recommend that a minimum separation of 15.3 cm (6") be maintained between wireless devices and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following: •• Always keep the device more than 15.3 cm (6") from the pacemaker.

Not carry the device near your pacemaker when the device is switched on. If you suspect interference, switch off your device, and move it. Hearing aids. Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

53 Vehicles RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added. Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result. Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal. Potentially explosive environments Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmospheres are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders. Follow any restrictions. Do not use the device where blasting is in progress. Emergency calls Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies. If certain features are in use, you may first need to turn those features off before you can make an emergency call.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)
<http://yourpdfguides.com/dref/5527484>

Consult this guide or your service provider for more information. When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so. 54

Taking care of your smartphone 1.

DO take care not to scratch the screen of your smartphone. Keep the screen clean. When working with your smartphone, use your finger or fingernail. Never use an actual pen or pencil or other sharp object on the screen surface. 2.

DO NOT expose your smartphone to rain or moisture. Do not let water enter the circuitry through the front panel buttons or expansion slots. In general, treat your smartphone as you would a mobile phone or other small electronic device. 3. DO be careful not to drop your smartphone or subject it to any strong impact. Do not place your smartphone in your back pocket. 4. DO NOT expose your smartphone to extreme temperatures. For example, do not leave your smartphone on the dashboard of a car on a hot day or when temperatures are below freezing point. Also, keep it away from heaters and other sources of heat.

5. DO NOT use or store your smartphone in any location that is dusty, damp or wet. 6. DO use a soft, damp cloth to clean your smartphone. If the surface of the screen becomes soiled, clean it with a soft cloth moistened with diluted window-cleaning solution. 7. DO NOT press down on the screen with force, otherwise you may crack the screen. 55 Specifications Performance •MT6572 1.3 GHz dual-core processor •System memory: ••512 MB or 1 GB (optional) of RAM 4 GB of ROM •Android operating system Display •5" FWVGA LCD, capacitive touchscreen •854 x 480 resolution Multimedia Formats supported: Type Audio playback Ringtone Video recording Video playback Formats MP3, AMR, WMA MP3, MIDI, iMelody, WAVE, WMA 3GP, MPEG-4, H.263, H.264 3GP, MPEG-4, H.263, H.264, WMV USB connector •Micro USB connector •USB client •DC power-in (5 V, 1 A) Connectivity ••••••Bluetooth 4.0 with EDR IEEE Wi-Fi 802.11b/g/n GSM 850 / 900 / 1800 / 1900 MHz UMTS 900 / 2100 MHz HSPA / HSDPA / GPRS / EDGE GPS aGPS Camera •Auto-focus 5 MP rear camera with LED flash •Fixed-focus 0.

3 MP front camera Note: Specification varies depending on region and configuration. 56 Expansion •microSD memory card slot (up to 32 GB) Battery •Rechargeable / non-replaceable Li-polymer battery Note: Length of battery operation will depend on power consumption which is based on system resource use. For example, constantly using the backlight or using power-demanding applications will shorten battery life between charges. Dimensions Height Width Thickness Weight 145.5 mm 73.

5 mm 8.8 mm 147 g (with battery) 57 Safety Battery information Do not use this product in a humid, wet and/or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60 °C (140 °F). Failure to follow these guidelines may cause the battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at low (below 0 °C/32 °F) or high (over 45 °C/ 113 °F) temperatures. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery.

Use only manufacturer approved batteries, and recharge your battery only with manufacturer approved chargers designated for this device. Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to the AC charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. These look like metal strips on the battery.

This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object. Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15 °C and 25 °C (59 °F and 77 °F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Battery performance is particularly limited in temperatures well below freezing. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible.

Do not dispose as household waste. Disposal and recycling information Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from 58 Electrical and Electronics Equipment (WEEE) regulations, visit www.acergroup.com/public/Sustainability It is compliant with EEE regulations. Regulatory information RoHS compliance This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011, on the restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment and its amendments. Prevention of hearing loss A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur. Note: For France, mobile headphones or earphones for this device have been tested to comply with the Sound Pressure requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

Caution: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time. 59 Wireless operation channels for different domains N. America Japan Europe ETSI 2.412-2.462 GHz 2.412-2.484 GHz 2.412-2.472 GHz Ch01 through Ch11 Ch01 through Ch14 Ch01 through Ch13 List of National Codes This equipment may be operated in the following countries: Country Austria Belgium Cyprus Czech Republic Denmark Estonia Finland France Germany Greece Hungary Ireland Italy Latvia Lithuania Luxembourg ISO 3166 2 letter code AT BE CY CZ DK EE FI FR DE GR HU IE IT LV LT LU Malta Netherlands Poland Portugal Slovakia Slovenia Spain Sweden United Kingdom Iceland Liechtenstein Norway Switzerland Bulgaria Romania Turkey Country ISO 3166 2 letter code MT NL PL PT SK SI ES SE GB IS LI NO CH BG RO TR Certificate Information (SAR) This device meets the EU requirements (1999/519/EC) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.



[You're reading an excerpt. Click here to read official ACER LIQUID Z5 DUO user guide](http://yourpdfguides.com/dref/5527484)
<http://yourpdfguides.com/dref/5527484>