



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX 49332I-MN. You'll find the answers to all your questions on the AEG-ELECTROLUX 49332I-MN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX 49332I-MN**  
**User guide AEG-ELECTROLUX 49332I-MN**  
**Operating instructions AEG-ELECTROLUX 49332I-MN**  
**Instructions for use AEG-ELECTROLUX 49332I-MN**  
**Instruction manual AEG-ELECTROLUX 49332I-MN**

49332I-MN

EN COOKER

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX 49332I-MN user guide](http://yourpdfguides.com/dref/3855068)  
<http://yourpdfguides.com/dref/3855068>

#### Manual abstract:

General information and tips Environmental information Subject to change without notice 4 Safety information SAFETY INFORMATION Before the installation and use, read this manual carefully: · For your own safety and the safety of your property · For the protection of the environment · For the correct operation of the appliance. Always keep these instructions with the appliance also if you move or sell it. The manufacturer is not responsible if incorrect installation or use results in damage. Children and vulnerable people safety · This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance. · Keep all packaging away from children. There is the risk of suffocation or physical injury. @@There is the risk of injury or other permanent disability. @@@@There is the risk of injury and damage to the appliance. · Do not let the appliance stay unattended during operation.

@@Contact an approved service centre. This is to prevent the risks of structural damage or physical injury. · Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.

· Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee. · Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical or gas safety rules etc.).

· Be careful when you move the appliance. The appliance is heavy. Always use safety gloves. Do not pull the appliance by the handle. · Make sure that the appliance is disconnected from the power supply during the installation (if applicable). · Keep the minimum distances to the other appliances and units. · Do not put the appliance on a base. Safety information 5 Electrical connection · Only an approved electrician can install and connect the appliance. Contact an approved service centre. This is to prevent the risks of structural damage or physical injury.

· The appliance must be earthed. · Make sure that the electrical data on the rating plate agree with your domestic power supply. · Information on the voltage is on the rating plate. · You must have the correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors. · The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm. · The shock protection parts must be fixed in such a way that they cannot be undone without tools. · Always use a correctly installed shockproof socket. · When you connect electrical appliances to mains sockets, do not let cables touch or come near the hot appliance door. · Do not use multi-way plugs, connectors and extension cables.

There is a risk of fire. · Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance. · Make sure that the mains connection is accessible after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug (if applicable).

· Do not replace or change the mains cable. Contact the service centre. Use · Only use the appliance for domestic cooking tasks. Do not use the appliance for commercial and industrial use. This is to prevent physical injury to persons or prevent damage to property.

· Always monitor the appliance during operation. · Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is a risk of burns. · Do not use this appliance if it is in contact with water. Do not operate the appliance with wet hands. · Do not use the appliance as a work surface or storage surface. · The cooking surface of the appliance becomes hot during use. There is a risk of burns. Do not put metallic objects, for example cutlery or saucepans lids, on the surface, as they can become hot.

· The interior of the appliance becomes hot during use. There is a risk of burns. Use gloves when you insert or remove the accessories or pots. · Open the door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire. · Do not let sparks or open flames come near the appliance when you open the door. 6 Safety information · Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance. There is a risk of explosion or fire. · Set the cooking zones to "off" after each use.

· Do not use the cooking zones with empty cookware or without cookware · Do not let cookware boil dry. This can cause damage to the cookware and hob surface. · If an object or cookware falls on the hob surface, the surface can be damaged. · Do not put hot cookware near to the control panel because the heat can cause a damage to the appliance. · Be careful when you remove or install the accessories to prevent damage to the appliance enamel.

· Cookware made of cast iron, cast aluminium or with damaged bottoms can scratch the hob surface if you move them on the surface. · Discoloration of the enamel has no effect on the performance of the appliance. · To prevent damage or discoloration to the enamel: do not put any objects directly on the appliance floor and do not cover it with aluminium foil; do not put hot water directly into the appliance; do not keep moist dishes and food in the appliance after you finish the cooking. · Do not apply pressure on the open door. · Do not put flammable materials in the compartment below the oven. Keep there only heat-resistant accessories (if applicable). · Do not cover oven steam outlets. They are at the rear side of the top surface (if applicable). · If there is a crack on the surface, disconnect the power supply. There is a risk of electric shock. · Do not put heat-conducting materials (e.g. thin metal mesh or metal-plated heat conductors) under the cookware. Excessive heat reflection can damage the cooking surface. · If you have an implanted pacemaker, you must keep your upper body a minimum of 30 cm away from the induction cooking zones while they operate.

· Do not use the appliance during a power cut. Care and cleaning · Before maintenance, make sure that the appliance is cold.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX 49332I-MN user guide](http://yourpdfguides.com/dref/3855068)  
<http://yourpdfguides.com/dref/3855068>

There is a risk of burns. There is a risk that the glass panels can break. · Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire. · Regular cleaning prevents the surface material from deteriorating. · For your personal safety and the safety of your property, only clean the appliance with water and soap. Do not use flammable products or products that can cause corrosion. · Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers.

Safety information 7 · If you use an oven spray, follow the instructions from the manufacturer. Do not spray anything on the heating elements and the thermostat sensor (if applicable). · Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter. · When the door glass panels are damaged they become weak and can break.

You must replace them. Contact the service centre. · Be careful when you remove the door from the appliance. The door is heavy. · Bulb lamps used in this appliance are special lamps selected for household appliances use only.

They cannot be used for the full or partial illumination of a household room. · If it becomes necessary to replace the lamp use one of the same power and specifically designed for household appliances only. · Disconnect the appliance from the power supply before the replacement of the oven lamp. There is the risk of electrical shock. Cool down the appliance. There is a risk of burns. · Do not clean catalytic enamel. Service centre · Only an approved engineer can repair or work on the appliance. Contact an approved service centre. · Use only original spare parts.

Disposal of the appliance · To prevent the risk of physical injury or damage: Disconnect the appliance from the power supply. Cut off the mains cable and discard it. Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is a risk of suffocation. 8 Product description PRODUCT DESCRIPTION General overview 1 2 3 4 5 2 5 4 3 2 1 3 7 2 1 3 6 4 5 7 1 2 3 4 5 6 7 Hob Grill Oven lamp Shelf support Bottom heat Fan and heating element Shelf positions Cooking surface layout 1 2 3 4 7 6 5 1 Induction cooking zone 2300 W, with the Power function 3200 W 2 Steam outlet 3 Induction cooking zone 2300 W, with the Power function 3200 W 4 Induction cooking zone 2300 W, with Power function 3200 W 5 Oven control panel 6 Hob control panel 7 Induction cooking zone 2300 W, with the Power function 3200 W Accessories · Oven shelf For cookware, cake tins, roasts.

Before first use · Deep roasting pan To bake and roast or as pan to collect fat. · The roasting pan grid To put in the deep roasting pan. 9 BEFORE FIRST USE WARNING! Refer to "Safety information" chapter. Initial Cleaning · Remove all parts from the appliance.

· Clean the appliance before first use. CAUTION! Do not use abrasive cleaning agents! This can damage the surface. Refer to chapter "Care and Cleaning". Setting the time The oven only operates after time set. When you connect the appliance to the electrical supply or in case of a power cut, the Time function indicator flashes automatically.

To set the current time use the or button. After approximately 5 seconds, the flashing stops and the display shows the time of day set. You can only change the Time of day · the switch-on lock is not on · none of the clock functions Duration · no oven function is set. if : or End is set Pre-heating 1. Set function and maximum temperature.

2. Let the appliance operate without the food for approximinutes). When the indicator of the cooking zone flashes slower, the time counts down. · Stopping the timer: select the cooking zone with and touch to switch off the timer. The remaining time counts backwards to 00 . The indicator of the cooking zone goes out. · Checking the remaining time: select the cooking zone with . The indicator of the cooking zone flashes faster. Display shows the remaining time. When the time elapses, the sound operates and 00 flashes.

The cooking zone switches off. · Stopping the sound: touch You can use the timer as a minute minder while cooking zones do not operate. Touch . Touch or to select the time. When the time elapses, the sound operates and 00 flashes Starting the STOP+GO The function sets all cooking zones that operate to a keep warm setting. to start this function. The symbol comes on. · Touch to stop this function. The heat setting that you set before comes on. · Touch does not stop the timer function.

Hob - Daily Use locks the control bars. 13 Locking / unlocking the control panel You can lock the control panel, but not . It prevents an acte, gelatine Solidify: fluffy omelettes, baked eggs Time as required 5-25 min 10-40 min Cover Mix occasionally Cook with a lid on Add at least twice as much liquid as rice, stir milk dishes part way through Add a few tablespoons of liquid Use max. ¼ l water for 750 g of potatoes Up to 3 l liquid plus ingredients Turn halfway through Hints Simmer rice and milkbased dishes, heat- 25-50 ing up ready-cooked meals min Steam vegetables, fish, meat Steam potatoes Cook larger quantities of food, stews and soups Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts Heavy fry, hash browns, loin steaks, steaks 20-45 min 20-60 min 60-150 min as required 5-15 min 3-4 4-5 4-5 6-7 7-8 9 Turn halfway through Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips The Power function is suitable for heating large quantities of water. HOB - CARE AND CLEANING WARNING! Refer to "Safety information" chapter.

Clean the appliance after each use. Always use cookware with clean bottom. Scratches or dark stains on the glass ceramic have no effect on how the appliance operates. 16 Oven - Control panel To remove the dirt: 1. Remove immediately:melted plastic, plastic foil, and food with sugar.

If not, the dirt can cause damage to the appliance. Use a special scraper for the glass . Put the scraper on the glass surface at an acute angle and move the blade on the surface . @@Use a special cleaning agent for glass ceramic or stainless steel. 2. Clean the appliance with a moist cloth and some detergent. 3.

@@To activate or deactivate the oven. To switch between top and main oven. To set an oven function or programme.

To move between the oven functions and clock functions. @@Shows the function. Shows the Lamp/Defrost function is active. Shows the heat setting. Shows the temperature and the time in minutes. Shows that keep warm function is active.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX 49332I-MN user guide](#)

<http://yourpdfguides.com/dref/3855068>



*resistant ovenware to roast (please read the instructions of the manufacturer).*



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX 49332I-MN user guide](http://yourpdfguides.com/dref/3855068)  
<http://yourpdfguides.com/dref/3855068>





oven capacity 900 mm 596 mm 600 mm 40 l 74 l Location of the appliance You can install your freestanding appliance with cabinets on one or two sides and in the corner. Minimum distances B A A Dimension A B mm 2 685 Levelling Use small feet on the bottom of appliance to set same level of cooker top surface with other surfaces Environment concerns 43 The anti-tilt protection CAUTION! You must install the anti-tilt protection (A+B). If you do not install it the appliance can tilt.

Before you install anti-tilt protection, adjust the appliance to the correct height. The anti-tilt protection has two parts (A+B). You can find the anti-tilt protection (B) on the right or left side of the rear wall of the appliance (See fig.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX 49332I-MN user guide](#)

<http://yourpdfguides.com/dref/3855068>

1). You must install the anti-tilt protection (A) on the wall.

The distance of the hole of the anti-tilt protection (A) from the floor is about 816 mm. Make sure you install the anti-tilt protection (A) at the correct height.

Screw it into the solid material or use applicable reinforcement. Check that the anti-tilt protection fits minimum 20 mm into the hole in rear wall of the appliance (B) when you push the appliance (See fig. 2). Put the appliance in the middle of the space between the cupboards. @@@@This appliance is supplied without a main plug and a main cable. Applicable cable types : H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F, H05 V2V2-F (T90), H05 BB-F ENVIRONMENT CONCERNS The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. 44 GREAT BRITAIN & IRELAND - Guarantee/Customer Service Packaging material The packaging material is environmentally-friendly and recyclable. @@@@Electrolux Service Force Centre must undertake all service work under this guarantee · Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Exclusions · Damage, calls resulting from transport, improper use, neglect, light bulbs, removable parts of glass, plastic. · Costs for calls to put right appliance which is improperly installed, calls to appliances outside United Kingdom. · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. · Products of Electrolux manufacturer that are not marketed by Electrolux Service and Spare Parts. Please contact your local Service Force Centre: 08445 616 616 (Call will be routed to Service Force Centre covering your postcode area). For address of local Service Force Centre and further information, please visit: [www.serviceforce.co.uk](http://www.serviceforce.co.uk)

Before calling out an engineer, please ensure you have read the details under the heading "What to do if...

". When you contact the Service Force Centre you will need to give the following details: Your name, address and postcode, your telephone number, clear concise details of the fault, model and serial number of the appliance (found on the rating plate), the purchase date. Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls. Customer Care. Please contact our Customer Care Department: Electrolux Major Appliances, Addington Way, Luton, Bedfordshire, LU4 9QQ or visit our website at [www.electrolux.co.uk](http://www.electrolux.co.uk)

45 Customer Care Department, Electrolux AEG-Electrolux Zanussi-Electrolux Tel: (Calls may be recorded for training purposes) 08445 613 613 08445 611 611 08445 612 612 For Customer Service in The Republic of Ireland please contact us at the address below: Electrolux Group (Irl) Ltd, Long Mile Road, Dublin 12, Republic of Ireland Tel: +353 (0)1 4090751, Email: [service.eid@electrolux.ie](mailto:service.eid@electrolux.ie) GB European Guarantee: This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed, the appliance guarantee will move with you subject to the following qualifications: · The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance. · The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances. · The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. · The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e.

is not used for commercial purposes. · The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law. WWW.ELECTROLUX.COM

Albania +35 5 4 261 450 +32 2 363 04 44 +420 261302111 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovická 3, Praha 4, 140 21 Sjællandsgade 2, 7000 Fredericia Fürther Str. 246, 90429 Nürnberg Pärnu mnt. 153, 11624 Tallinn Carretera M-300, Km.

29,900 Alcalá de Henares Madrid 46 France Great Britain Hellas Hrvatska Ireland Italia Latvija Lietuva Luxembourg Magyarország Nederland Norge Österreich Polska Portugal Romania Schweiz - Suisse - Svizzera Slovenija Slovensko 08 44 62 26 53 +44 8445 616 616 +30 23 10 56 19 70 +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +371 67313626 +370 5 278 06 03 +352 42 431 301 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731 +421 (02) 32141334 [www.electrolux.fr](http://www.electrolux.fr) Addington Way, Luton, Bedfordshire LU4 9QQ 4, Linnou Str., 54627 Thessaloniki Slavovska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr.

Barona iela 130/2, LV-1012, Riga Ozo 10a, LT-08200 Vilnius Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsébet királyné útja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Risløkkvn. 2, 0508 Oslo Herziggasse 9, 1230 Wien ul. Kolejowa 5/7, Warszawa Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 -2774-518 Paço de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mägenwil Gerbiceva ulica 98, 1000 Ljubljana Electrolux Slovakia s.r.

o., Electrolux Domáce spotrebice SK, Seberíniho 1, 821 03 Bratislava Electrolux Service, S:1 Göransgatan 143, S-105 45 Stockholm Tarlabai caddesi no : 35 Taksim stanbul 129090 , , 16, "" 04074 , , 2, "" Suomi Sverige Türkiye [www.electrolux.fi](http://www.electrolux.fi) +46 (0)771 76 76 76 +90 21 22 93 10 25 +7 495 937 7837 +380 44 586 20 60 47 [www.aeg.com/shop/892933934-B-102011](http://www.aeg.com/shop/892933934-B-102011) .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX 49332I-MN user guide](http://yourpdfguides.com/dref/3855068)  
<http://yourpdfguides.com/dref/3855068>