




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX AIR MAX. You'll find the answers to all your questions on the AEG-ELECTROLUX AIR MAX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX AIR MAX
User guide AEG-ELECTROLUX AIR MAX
Operating instructions AEG-ELECTROLUX AIR MAX
Instructions for use AEG-ELECTROLUX AIR MAX
Instruction manual AEG-ELECTROLUX AIR MAX

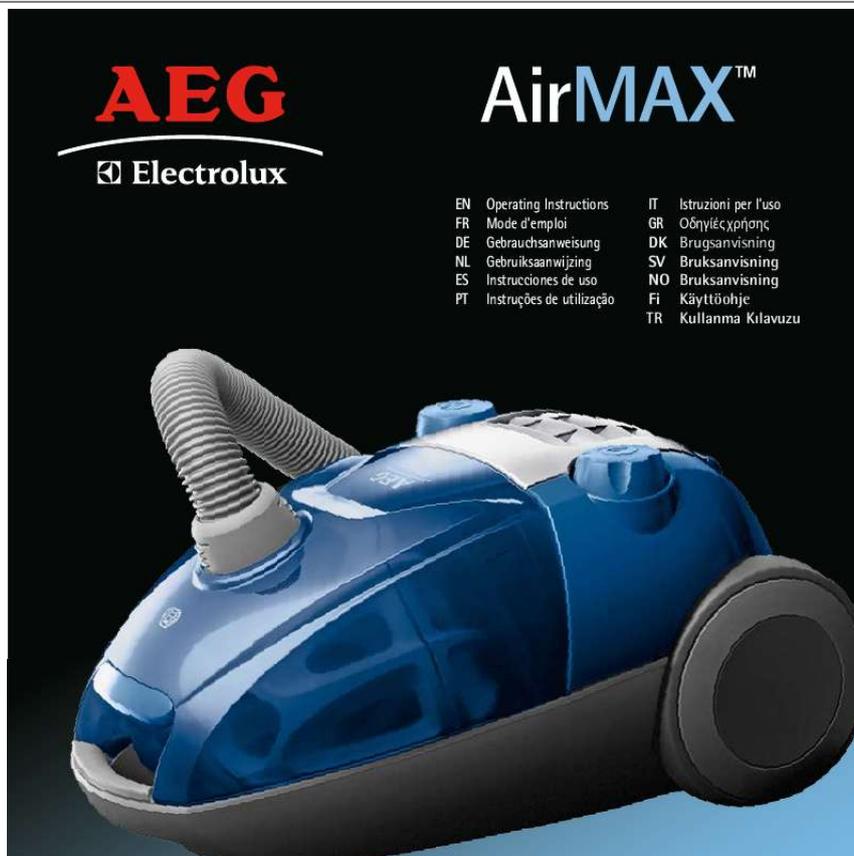

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX AIR MAX user guide](http://yourpdfguides.com/dref/3659823)
<http://yourpdfguides.com/dref/3659823>

Manual abstract:

@@ Disconnect the plug from the mains before cleaning or maintenance of the vacuum cleaner. Be sure to keep the vacuum cleaner in a dry place.
@@@ Do not attempt to force the cover shut. When housing shows visible signs of damage. Fine dust, for example from plaster, concrete, flour, hot or cold ashes. The above may cause serious damage to the motor damage which is not covered by the warranty. Open the front cover on the machine and check that the dust bag s-bag and the motor filter are in place. (See also Replacement of filter) 13 Open the back lid on the machine and check that the exhaust filter* is in place. @@@@ 18b* Suction power can also be adjusted by using the suction control on the hose handle. Use the nozzles as follows: Carpets: Use the combination floor nozzle with the lever in position (20).

Hard floors: Use the combination floor nozzle with the lever in position (21). Note: Do not use the turbo nozzle on skin rugs or carpet fringes. to avoid damaging the carpet , do not keep the nozzle stationary whilst the brush is rotating. @@@@ read with the nozzle lifted up. @@@@ Never use the vacuum cleaner without filter.

@@ 34 Pull the filter holder upwards until coming away from the groove. @@@@ 36 37 Open the back lid and lift out the filter. Insert a new filter and close the lid. In such cases, disconnect from mains and allow to cool for 20-30 minutes. Use a cleaning strip or similar to clear the tubes and hose.

Hose handle could be dismantled from hose if cleaning is needed. it may also be possible to remove the obstruction in the hose by squeezing it. @@@@ Be sure to frequently clean the combination floor nozzle. 42* Press each wheel-hub and draw away the wheels. Remove dust-balls, hair or other objects that may be entangled. @@@@ By snipping them away with scissors. Use the hose handle to clean the nozzle. 45a Disconnect the nozzle from the vacuum cleaner tube and remove entangled threads , etc. By snipping them away with scissors. Use the hose handle to clean the nozzle.

45b In case the turbo nozzle stops working, open the cleaning lid and remove any objects that obstructs the turbine to rotate freely. If so, replace it with a new one. Electrolux does not accept liability for defects arising from neglect, misuse or accident. This product is designed with the environment in mind and all plastic parts are marked for recycling purposes. For further information please visit our website: www.electrolux.com. @@@@ Accessories can also be purchased from <http://www.electrolux.com>. @@@@ Close attention is necessary when used near children. The appliance is not intended for use by young children and infirm persons without supervision. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX AIR MAX user guide](http://www.electrolux.com)
<http://yourpdfguides.com/dref/3659823>