



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX B3101-5-M. You'll find the answers to all your questions on the AEG-ELECTROLUX B3101-5-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX B3101-5-M
User guide AEG-ELECTROLUX B3101-5-M
Operating instructions AEG-ELECTROLUX B3101-5-M
Instructions for use AEG-ELECTROLUX B3101-5-M
Instruction manual AEG-ELECTROLUX B3101-5-M

B3101-5

User manual

Built-In Electric Oven



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX B3101-5-M user guide](http://yourpdfguides.com/dref/2624484)
<http://yourpdfguides.com/dref/2624484>

Manual abstract:

We wish you much joy with your new appliance. Contents Operating Instructions Safety instructions Description of the Appliance General Overview Control Panel Oven Features Oven accessories Before Using for the first time Setting and changing the time Initial Cleaning Using the Oven Switching the Oven On and Off Oven Functions Inserting the Oven Shelf and the Baking Tray Clock Functions Uses, Tables and Tips Baking Roasting Grill sizes Defrosting Drying Making preserves 3 3 4 4 5 5 6 6 6 7 8 8 9 10 11 16 16 21 23 24 24 25 Cleaning and Care Outside of the appliance Oven interior Accessories Shelf Support Rails Oven Lighting Oven Ceiling Oven door Oven door glass What to do if ... Disposal Installation Instructions Safety information for the installer Guarantee/Customer Service Service 26 26 26 26 27 28 29 31 34 35 36 36 39 43 The following symbols are used in this user manual: 1 3 2 Important information concerning your personal safety and information on how to avoid damaging the appliance. General information and tips Environmental information Operating Instructions 3 Operating Instructions 1 Safety instructions Electrical safety This appliance must be only connected by a registered electrician. In the event of a fault or damage to the appliance: Take the fuses out or switch off. Repairs to the appliance must only be carried out by qualified service engineers. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer. Child Safety Never leave children unsupervised when the appliance is in use. Safety whilst using People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person. This appliance is intended to be used for cooking, roasting and baking food in the home. Take care when connecting electric appliances to sockets nearby. Do not allow connecting leads to come into contact with or to catch beneath the hot oven door.

Warning: Risk of burns! The interior of the oven becomes hot during use. Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door. 3 Information on acrylamides According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides.

Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much. How to avoid damage to the appliance Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel. Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray. Do not put any strain on the oven door when open. Never pour water directly into the oven when it is hot. This could cause damage to or discolouration of the enamel. Rough handling, especially around the edges of the front panel, can cause the glass to break. Do not store any flammable materials inside the oven.

These could ignite when the oven is switched on. 4 Description of the Appliance Do not store any moist foods inside the oven. This could damage the oven enamel. After switching off the cooling fan, do not keep uncovered dishes in the oven. Moisture may condense in the oven interior or on the glass doors and may get into the units. 3 Note on enamel coating Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law. Description of the Appliance General Overview Control panel Door handle Full glass door Description of the Appliance 5 Control Panel Oven Power Indicator Temperature Pilot Light Time display Clock function buttons Oven Functions Temperature selector Oven Features Top heat and heating elements Shelf positions Oven lighting Fan Bottom Heat Oven shelf runners, removable 6 Before Using for the first time Inside of door You will find the shelf position number on the inside of the oven door. Oven accessories Oven shelf For cookware, cake tins, roasts and grilled foods. Baking tray For cakes and biscuits.

Before Using for the first time Setting and changing the time 3 The oven only operates when the time has been set. When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time of day flashes automatically. 1. To change a time that has already been set, press the Selection button repeatedly until the function indicator Time of day flashes. Before Using for the first time 7 2. Using the or button, set the current time. After approx. 5 seconds, the flashing stops and the clock displays the time set. The appliance is now ready to use. 3 The time can only be changed if no automatic function (Duration or End) has been set.

Initial Cleaning Before using the oven for the first time you should clean it thoroughly. 1 3 Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged. To clean metal fronts use commercially available cleaning agents. 1. Turn the oven function switch to oven lighting . 2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid. 3. Then wash out the oven with warm water and washing-up liquid, and dry. 4.

Wipe the front of the appliance with a damp cloth. 8 Using the Oven Using the Oven 3 The oven is equipped with retractable buttons for "Oven functions" and "Temperature selection". To use, press the relevant button. The button then sticks out. Switching the Oven On and Off Oven Power Indicator Temperature Pilot Light Oven Functions Temperature selector 1. Turn the oven functions dial to the desired function. 2. Turn the temperature selector to the desired temperature. The power indicator is lit as long as the oven is in operation. The temperature pilot light is lit as long as the oven is heating up. 3. To turn the oven off, turn the oven functions dial and the temperature selector to the Off position. 3 Cooling fan The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Using the Oven 9 Oven Functions The oven has the following functions: Oven function Light Fan-assisted circulation Conventional Base heat Defrost Single grill Dual grill Rothitherm Application Using this function you can light up the oven interior, e.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX B3101-5-M user guide](http://yourpdfguides.com/dref/2624484)
<http://yourpdfguides.com/dref/2624484>

180-200 180-200 160-170 160-170 180-200 180-200 160-170 0:45-1:00 0:25-0:40 0:15-0:30 0:15-0:30 0:40-0:60 0:30-1:00 0:30-1:00 Uses, Tables and Tips 21 Frozen ready meals table Food to be cooked Frozen pizza Chips1) (300-600 g) Baguettes Oven function Conventional Shelf position 3 Temperature C as per manufacturer's instructions 200-220 as per manufacturer's instructions as per manufacturer's instructions Time as per manufacturer's instructions as per manufacturer's instructions as per manufacturer's instructions Rothitherm 3 Conventional 3 Fruit flans Conventional 3

1) Comments: Turn chips 2 or 3 times during cooking Roasting Oven function: Conventional or Rothitherm Ovenware for roasting Any heat-resistant ovenware is suitable to use for roasting.

(Please read the manufacturer's instructions.) For all lean meats, we recommend roasting these in a roasting tin or dish with a lid. The meat will be more succulent. All types of meat, that can be browned or have crackling, can be roasted in a roasting tin or dish without a lid. 3 Tips on using the Roasting Table

The information given in the following table is for guidance only.

We recommend cooking meat and fish weighing 1kg or more in the oven. To prevent meat juices or fat from burning onto the ovenware, we recommend adding some liquid. If required, turn the roast (after 1/2 - 2/3 of the cooking time). @@ This will give better roasting results. @@ of thickness per cm. of thickness per cm. @@@@ @@@@ For grilling, place the shelf in the recommended shelf position. @@ The grilling times are guidelines.

@@@@ 10-12 mins. 8-10 mins.

6-7 mins. 10-12 mins. 4-6 mins. 6-8 mins. 2nd side 6-8 mins. 6-10 mins. 6-8 mins. 5-6 mins. 10-12 mins. 3-5 mins.

@@@@@@@@@@@@@@@@ Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars. The jars should all be filled to the same level and clamped shut. @@ Pour approx. @@@@ Warning: For safety reasons, do not clean the appliance with steam blasters or highpressure cleaners.

Attention: Do not use any corrosive cleaning fluids, sharp objects or stain removers. Do not clean the glass oven door with abrasive fluids or metal scrapers, which could scratch the surface. The glass could crack and shatter. Outside of the appliance Wipe the front of the appliance with a soft cloth and a solution of hot water and washing up liquid. For metal fronts, use normal commercially available cleaning agents.

Please do not use scouring agents and abrasive sponges. Oven interior Clean the appliance after each use. In this way, dirt is easier to clean off and is not allowed to burn on. 1. For cleaning, turn the oven light on. 2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry. 3 1 Clean stubborn dirt with a special oven cleaner. Important: If using an oven spray, please follow the manufacturer's instructions exactly. Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.

) after each use and dry well. Soak briefly to make them easier to clean. Accessories Shelf Support Rails The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls. Removing the shelf support rails First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2). Cleaning and Care 27 Fitting the shelf support rails 3 Important! The rounded ends of the guide rails must be pointing forwards! To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2). Oven Lighting 1 3 Warning: Risk of electric shock! Prior to changing the oven light bulb: Switch off the oven! Disconnect from the electricity supply. Place a cloth on the oven floor to protect the oven light and glass cover. Changing the oven light bulb/cleaning the glass cover 1. Remove the glass cover by turning it anticlockwise and then clean it. 2.

If necessary: replace with 25 watt, 230 V, 300 C heat-resistant oven lighting. 3. Refit the glass cover. 28 Cleaning and Care Oven Ceiling The upper heating element can be folded down to make it easier to clean the oven ceiling. Folding down the heating element 1 Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt! 1.

Remove the side shelf support rails. 2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven. 3. The heating element will now fold down.

Caution: Do not use force to press the heating element down! The heating element might break. Cleaning the oven ceiling 1 Repositioning the heating element 1. Move the heating element back up towards the oven ceiling. 2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug. 3. Settle it onto the support. 4. Insert shelf support rail. 1 Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.

Cleaning and Care 29 Oven door For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges. Removing the oven door from its hinges 1. Open the oven door as far as it will go. 2. Undo the clamping levers (A) on both door hinges fully. 3. Close the oven door as far as the first position (approx. 45). 4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (Take care: It is heavy) 3 Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

30 Cleaning and Care Hanging the oven door back on its hinges 1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45. Position the recesses on the bottom of the oven door on the hinges on the oven. Let the door slide down as far as it will go. 2. Open the oven door as far as it will go. 3. Fold up the clamping levers (A) on both door hinges back into their original positions. 4.

Close the oven door. Cleaning and Care 31 Oven door glass The oven door is fitted with three panels of glass mounted one behind the other. The inner panels can be removed for cleaning. 1 Important! Rough handling, especially around the edges of the front panel, can cause the glass to break. Removing the door glass panels 1. Open the oven door as far as it will go. 2. Undo the clamping levers (A) on both door hinges fully 3. Close the oven door as far as the first position (approx. 45).

4. Take hold of the door trim(B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards. 5. Take hold of the door glass panels on their upper edge one after the other and take them out of the guide by pulling them upwards.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX B3101-5-M user guide](http://yourpdfguides.com/dref/2624484)
<http://yourpdfguides.com/dref/2624484>

32 *Cleaning and Care* Cleaning the door glass panels Clean the door glass panels thoroughly with a solution of water and washing up liquid. Then dry them carefully Putting the door glass panels back. 1. From above insert the door glass panels at an angle into the door profile at the bottom edge of the door one after the other and lower them.

3 Insert the smaller panel first, then the larger panel. 2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door 3 On the open side of the door trim (B) there is a guide bar (C). This must be pushed between the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

Cleaning and Care 33 3. Open the oven door as far as it will go. 4. Fold up the clamping levers (A) on both door hinges back into their original positions 5. Close the oven door.

34 *What to do if ... What to do if ... Problem* The oven does not heat up *Possible cause* The oven is not switched on The clock is not set *Remedy* Switch the oven on Set the current time on the clock The required settings have not been set Check the settings been set The house wiring fuse (in the fuse box) has tripped Check the fuse If the fuses trip several times, please call a qualified electrician Replace the oven bulb The oven lighting is not operating The oven light bulb is faulty If you are unable to remedy the problem by following the above suggestions, please contact your local Service Force Centre. 1 3 3 Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs. If the appliance has been operated incorrectly, the engineer's visit will be chargeable, even during the warranty period.

Advice on cookers with metal fronts: Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up. Disposal 35 Disposal 2 2 Packaging material The packaging materials are environmentally friendly and can be recycled.

The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities. @@@@To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance. 36 Installation Instructions Installation Instructions 1 Attention: The new appliance may only be installed and connected by a registered expert.

Please comply with this. If you do not, any damage resulting is not covered by the warranty.

1 Safety information for the installer The electrical installation is to be set up so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation. Suitable separation devices include e.g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors. Anti-shock protection must be provided by the installation.

The built-in unit must meet the stability requirements of DIN 68930. Built-in ovens and built-in cooking surfaces are fitted with special connection systems.

For safety reasons, they must only be combined with appliances from the same manufacturer. Installation Instructions 37 38 Installation Instructions Guarantee/Customer Service 39 Guarantee/Customer Service European Guarantee This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications: The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.

The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances. The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user. The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes. The appliance is installed in accordance with all relevant regulations in force within your new country of residence. The provisions of this European Guarantee do not affect any of the rights granted to you by law. 40 Guarantee/Customer Service www.electrolux.com p Albania Belgique/Belgi/

Belgien esk republika Danmark Deutschland Eesti Espaa France Great Britain Hellas Hrvatska Ireland Italia Latvija Lithuania Luxembourg Magyarorsz g Nederland Norge sterreich Polska Portugal Romania Schweiz/Suisse/ Svizzera Slovenija Slovensko Suomi Sverige t +35 5 4 261 450 +32 2 363 04 44 +420 2 61 12 61 12 +45 70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.

electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 +385 1 63 23 338 +353 1 40 90 753 +39 (0) 434 558500 +37 17 84 59 34 +3702780607 +352 42 431 301 +36 1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731 +421 2 43 33 43 22 www.electrolux.fi +46 (0)771 76 76 76 b Rr. Pjeter Bogdani Nr. 7 Tirane Bergensesteenweg 719, 1502 Lembeek Budjovick 3, Praha 4, 140 21 Sjllandsgade 2, 7000 Fredericia Frther Strae 246, 90429 Nrnberg Mustame tee 24, 10621 Tallinn Carretera M-300, Km. 29,900 Alcal de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4 Limnou Str., 54627 Thessaloniki Slavonska avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Zirmn 67, LT-09001 Vilnius Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsbet kirlyn tja 87 Vennootsweg 1, 2404 CG Alphen aan den Rijn Risikkn.

2, 0508 Oslo Herziggasse 9, 1230 Wien ul. Kolejowa 5/7, Warszawa Quinta da Fonte - Edificio Goncalves Zarco - Q 35 2774 - 518 Pao de Arcos Str. Garii Progresului 2, S4, 040671 RO Industriestrasse 10, CH-5506 Mgenwil Electrolux Ljubljana d.o.o.

Gerbieva 98, 1000 Ljubljana Electrolux Slovakia s.r.o., Electrolux Domce spotrebie SK, Seberniho 1, 821 03 Bratislava Electrolux Service, S:t Gransgatan 143, S-105 45 Stockholm Guarantee/Customer Service 41 p Trkiye t +90 21 22 93 10 25 +7 495 937 7837 +380 44 586 20 60 b Tarlaba caddesi no : 35 Taksim Istanbul 129090 , , 16, ,, " 04074 , , 2a, ,, " 42 Service 43 Service In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if.

.."). If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX B3101-5-M user guide](#)

<http://yourpdfguides.com/dref/2624484>

In order to be able to assist you quickly, we require the following information: Model description Product number (PNC) Serial number (S No.) (for numbers see rating plate) Type of fault Any error messages displayed by the appliance So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here: Model description: PNC: S No:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 387 997 209-A-150509-01 Subject to change without notice www.electrolux.com .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX B3101-5-M user guide](http://yourpdfguides.com/dref/2624484)

<http://yourpdfguides.com/dref/2624484>