



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX BP5013001M. You'll find the answers to all your questions on the AEG-ELECTROLUX BP5013001M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX BP5013001M
User guide AEG-ELECTROLUX BP5013001M
Operating instructions AEG-ELECTROLUX BP5013001M
Instructions for use AEG-ELECTROLUX BP5013001M
Instruction manual AEG-ELECTROLUX BP5013001M

BP5013001

EN OVEN

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>

Manual abstract:

General information and tips Environmental information Subject to change without notice 4 Safety information SAFETY INFORMATION Before the installation and use, read this manual carefully: · For your personal safety and the safety of your property · For the respect of the environment · For the correct operation of the appliance. Always keep these instructions with the appliance also if you move or sell it. The manufacturer is not responsible if incorrect installation or use results in damage. Children and vulnerable people safety · This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance. · Keep all packaging away from children. There is the risk of suffocation or physical injury. @@There is the risk of injury or other permanent disability. @@@There is the risk of injury and damage to the appliance. · Do not let the appliance stay unattended during operation.

@@Contact an approved service centre. This is to prevent the risks of structural damage or physical injury. · Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.

· Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee. · Make sure that the appliance is disconnected from the power supply during the installation. · Be careful when you move the appliance.

The appliance is heavy. Always use safety gloves. Do not lift the appliance by the handle. · The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm. · You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors. Safety information 5 · Before the installation, make sure that the kitchen cabinet has the recess dimensions applicable. · Make sure that the appliance is installed below and adjacent safe structures. · Keep the minimum distances to the other appliances and units. · The appliance cannot be positioned on a base.

· Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer. Electrical connection · The appliance must be earthed. · Make sure that the electrical data on the rating plate agree with your domestic power supply. · Information on the voltage is on the rating plate. · Always use a correctly installed shockproof socket. · Do not use multi-way plugs, connectors and extension cables. There is the risk of fire. · Do not replace or change the mains cable. Contact the service centre.

· Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug if applicable. Use · The appliance is only for domestic use. Do not use the appliance for commercial and industrial use. · Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property. · Do not use the appliance as a work surface or storage surface. · The interior of the appliance becomes hot during use. There is the risk of burns.

Do not touch the heating elements in the appliance. Use gloves when you insert or remove the accessories or pots. · Be careful when you remove or install the accessories to prevent damage to the oven enamel. · Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns. · To prevent damage or discoloration to the enamel: Do not put any objects directly on the appliance floor and do not cover it with aluminium foil. Do not put water directly into the hot appliance. Do not keep moist dishes and food in the appliance after you finish the cooking. · Discoloration of the enamel has no effect on the performance of the appliance so it is not a defect in the sense of the warranty law.

· Do not apply pressure on the open door. 6 Safety information · Always close the appliance door when you cook, even while grilling. Care and cleaning · Before maintenance, switch off the appliance and disconnect the appliance from the power supply. · Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break. · Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire. · Regular cleaning prevents the surface material from deteriorating · Use a deep baking tray for very moist cakes to prevent that fruit juices cause stains that can be permanent. · For your personal safety and the safety of your property, only clean the appliance with water and a soap.

Do not use flammable products or products that can cause corrosion. · Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers · If you use an oven spray, follow the instructions from the manufacturer. · Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter. · When the door glass panels are damaged they become weak and can break.

You must replace them. Contact the service centre. · Be careful when you remove the door from the appliance. The door is heavy! · Do not clean catalytic enamel (if applicable). Risk of fire · Open the door carefully.

The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire. · Do not let sparks or open flames come near the appliance when you open the door. · Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance. Pyrolytic cleaning · Do not leave the appliance unattended during Pyrolytic cleaning. · Do not try to open the door and do not cut the power supply during Pyrolytic cleaning. · Keep children away during pyrolytic cleaning. The appliance becomes very hot. There is the risk of burns. · During pyrolytic cleaning, stubborn dirt can cause discoloration to the enamel.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>

Discoloration to the enamel has no effect on the performance of the appliance Oven lamp · The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting. · If it becomes necessary to replace the lamp, use one of the same power and specifically designed for household appliances only. Product description · Disconnect the appliance from the power supply before the replacement of the oven lamp. There is the risk of electrical shock. 7 Service centre · Only an approved engineer can repair or work on the appliance. Contact an approved service centre. · Use only original spare parts. Disposal of the appliance · To prevent the risk of physical injury or damage Disconnect the appliance from the power supply. Cut off the mains cable and discard it.

Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is the risk of suffocation. PRODUCT DESCRIPTION General overview 2 3 4 5 6 1 7 5 4 13 3 2 1 9 10 11 8 12 1 2 3 4 Control panel Control knob for oven functions Power lamp/symbol Electronic programmer 8 Product description 5 6 7 8 9 10 11 12 13 Control knob for temperature Power lamp Heating element Oven lamp Fan Rear wall heating element Bottom heat Shelf support, removable Shelf positions Accessories · Nonstick wire shelf For cookware, cake tins, roasts. · Nonstick baking tray For cakes and biscuits.

· Nonstick grill / roasting pan To bake and roast or as pan to collect fat. Before first use · Nonstick trivet For roasting and grilling. Use the trivet only with the grill/roasting pan. 9 · Telescopic runners For shelves and trays. BEFORE FIRST USE WARNING! Refer to "Safety information" chapter. Initial Cleaning · Remove all parts from the appliance. · Clean the appliance before first use. Refer to chapter "Care and Cleaning". First connection to the mains After first connection to the mains all symbols in the display are on for some seconds. For the subsequent few seconds the display shows software version. Setting the time of day After the software version goes off, the display shows and "12:00". "12" flashes. 1. Press or to set current hour. 2.

Press to confirm (necessary only for the first setting, later new time will be saved automatically after 5 seconds). The display shows and set hour. "00" flashes. 3. Press or to set current minutes. 4. Press to confirm (necessary only for the first setting, later new time will be saved automatically after 5 seconds) . 10

Daily use The Temperature/Time display shows new time. Changing the time of day You can change the time of day only if the oven is off. Press . The set time and symbol flash in the display. @@Refer to "Safety information" chapter. To use the appliance, press the control knob. @@2. 3. Turn the oven functions control knob to select an oven function. Turn the temperature control knob / to set a temperature. @@· The lamp comes on when the appliance operates. @@To bake maximum on three oven levels at the same time. @@And to dry food.

@@@It is on immediately when the oven starts to heat. @@@@Push the deep pan between the guide-bars of one of the oven levels. Trivet and grill/roasting pan WARNING! Risk of burns when removing the accessories from a hot oven. You can use the trivet to roast larger pieces of meat or poultry on one level. · Putot find the settings for a special recipe, look for the one that is almost the same. · Baking time can be extended by 10-15 minutes, if you bake cakes on more than one level. @@If this occurs, do not change the temperature setting. @@@First part of baking process. 2. Second part of baking process. @@30 - 40 50 - 70 Conventional Cooking 1 1.

2. 2301) 160 - 180 1. @@@@Roast lean meats in a roasting tin with a lid. This will keep the meat more succulent. @@of thickness per cm. of thickness per cm. @@@@CAUTION! Always grill with the oven door closed. Helpful hints and tips Always pre-heat the empty oven with the grill functions for 5 minutes. · Set the shelf in the shelf position as recommended in the grilling table. · Always set the pan to collect the fat into the first shelf position.

· Grill only flat pieces of meat or fish. Grilling Food to be grilled Roast beef Filet of beef Back of pork Back of veal Back of lamb Whole Fish, 500-1000g Fast Grilling Food to be grilled Burgers Pork fillet Sausages Fillet steaks, veal steaks Toast 1) Toast with topping 1) Pre-heat the oven 23 Shelf position 2 3 2 2 3 3/4 Temperature 210 - 230 230 210 - 230 210 - 230 210 - 230 210 - 230 Time in min. 1st side 30 - 40 20 - 30 30 - 40 25 - 35 15 - 30 2nd side 30 - 40 20 - 30 30 - 40 20 - 25 15 - 30 Shelf position 4 4 4 4 5 4 Time in min. 1st side 8 - 10 10 - 12 10 - 12 7 - 10 1-3 6-8 2nd side 6-8 6 - 10 6-8 6-8 1-3 - Pizza Setting Type of baking Pizza (thin crust) Pizza (with a lot of topping) Tarts Spinach flan Quiche Lorraine Swiss Flan Apple cake, covered Vegetable pie Shelf position 2 2 1 1 1 1 1 Temperature °C 200 - 230 1)2) 180 - 200 180 - 200 160 - 180 170 - 190 170 - 190 150 - 170 160 - 180 Time Min. 15 - 20 20 - 30 40 - 55 45 - 60 45 - 55 45 - 55 50 - 60 50 - 60 24 Helpful hints and tips Type of baking Unleavened bread Puff pastry flan Flammekuchen (Pizzalike dish from Alsace) Piroggen (Russian version of calzone) 1) Pre-heat the oven 2) Use deep pan Shelf position 2 2 2 2 Temperature °C 230 - 2501) 160 - 180 1) 230 - 2501) 180 - 200 1) Time Min.

10 - 20 45 - 55 12 - 20 15 - 25 Defrosting Remove the food packaging. Put the food on a plate. Do not cover it with a bowl or a plate. This can extend the defrost time. Use the first oven shelf position.

The one on the bottom. Dish Defrosting time in min. 100 - 140 100 - 140 90 - 120 25 - 35 30 - 40 30 - 40 60 Further defrosting time in min. 20 - 30 20 - 30 20 - 30 10 - 15 10 - 20 10 - 15 60 Comment Place the chicken on an upturned saucer placed on a large plate Turn halfway through Turn halfway through Turn halfway through Cream can also be whipped when still slightly frozen in places - Chicken, 1000 g Meat, 1000 g Meat, 500 g Trout, 150 g Strawberries, 300 g Butter, 250 g Cream, 2 x 200 g Gateau, 1400 g Preserving Things to note: · Use only preserve jars of the same dimensions available on the market. · Do not use jars with twist-off and bayonet type lids, or metal tins. · Use the first shelf from the bottom for this function. · Put no more than six one-litre preserve jars on the baking tray. · Fill the jars up to the same level and close with a clamp. · The jars cannot touch each other. · Put approximately 1/2 litre of water into the baking tray to give sufficient moisture in the oven.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>

.....
.....
.....

..... *INSTALLATION WARNING! Refer to "Safety information" chapter.*

The built-in unit must meet the stability requirements of DIN 68930. Installation 31 min.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>

3 mm 200 cm 2 547 546 114 590 560 min. 20 530 min. 572 579 5 590 min. 567 21 594 594 30 max. R1200 mm 130 140 32 Environment concerns alternative 100 H05VV-F H05RR-F min. 1600 mm 90° 2x3,5x25 ENVIRONMENT CONCERNS The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.

WARRANTY FOR SALES IN AUSTRALIA AND NEW ZEALAND APPLIANCE: AEG BUILT-IN OVEN, COOKTOP, WARMING DRAWER & DRAWER This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance. 1. In this warranty a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL; b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act

(No.

2) 2010; c) 'Appliance' means any Electrolux product purchased by you accompanied by this document; d) 'ASC' means Electrolux' authorised serviced centres; e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand; f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period; g) 'Warranty Period' means: where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 60 months and in New Zealand for 60 months, following the date of original purchase of the Appliance; where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance. @ @ 3. @ @ @ @ @ @ You agree that any replaced Appliances or parts become the property of Electrolux.

This warranty does not apply to light globes, batteries, filters or similar perishable parts. Parts and Appliances not supplied by Electrolux are not covered by this warranty. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of: a) travel of an authorised representative; b) transportation and delivery of the Appliance to and from Electrolux or its

ASC. In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC. Proof of purchase is required before you can make a claim under this warranty. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive): a) the Appliance is damaged by: accident misuse or abuse, including failure to properly maintain or service normal wear and tear power surges, electrical storm damage or incorrect power supply incomplete or improper installation incorrect, improper or inappropriate operation insect or vermin infestation failure to comply with any additional instructions supplied with the Appliance; b) the Appliance is modified without authority from Electrolux in writing; c) the Appliance's serial number or warranty seal has been removed or defaced; d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.

4. 5. 6. 7. 8. 9. 35 10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure.

The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates. 11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it. 12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.

13. To enquire about claiming under this warranty, please follow these steps: a) carefully check the operating instructions, user manual and the terms of this warranty; b) have the model and serial number of the Appliance available; c) have the proof of purchase (eg an invoice) available; d) telephone the numbers shown below. 14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty. Important Notice Before calling for service, please ensure that the steps listed in point 13 above have been followed.

FOR SERVICE or to find the address of your nearest state service centre in Australia Please call 13 13 4 9 For the cost of a local call (Australia only) SERVICE AUSTRALIA ELECTROLUX HOME PRODUCTS www.electrolux.com.au FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia Please call 13 13 50 For the cost of a local call (Australia only) FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand Free call 0800 10 66 10 (New Zealand only) SERVICE NEW ZEALAND ELECTROLUX HOME PRODUCTS www.electrolux.com.au



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>

electrolux.co.nz FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand Free call 0800 10 66 20 (New Zealand only) www.aeg.com/shop 892945468-F-282011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX BP5013001M user guide](http://yourpdfguides.com/dref/3965741)
<http://yourpdfguides.com/dref/3965741>