



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX CAFAMOSA. You'll find the answers to all your questions on the AEG-ELECTROLUX CAFAMOSA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX CAFAMOSA
User guide AEG-ELECTROLUX CAFAMOSA
Operating instructions AEG-ELECTROLUX CAFAMOSA
Instructions for use AEG-ELECTROLUX CAFAMOSA
Instruction manual AEG-ELECTROLUX CAFAMOSA

CaFamosa

Kaffee-Espresso-Vollautomat
Fully Automatic Espresso-Maker
Macchina per espresso completamente automatica
Volautomatische koffie- en espressomachine
Täysin automaattinen espressokahviasema

Gebrauchsanweisung
Operating instructions
Istruzioni per l'uso
Gebruiksaanwijzing
Käyttöohje



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)
<http://yourpdfguides.com/dref/1311772>

Manual abstract:

As a result, less bitterness is released from the coffee, it is this that makes espresso coffee so much pleasanter! A Fresh Water Tank, Lid B Filler Opening for Ground Coffee with Lid C Cup Rack D Bean Container with Lid (inside: grinding texture adjustment) E Selector Dial for Steam and Hot Water F Swivelling Nozzle for Steam and Hot Water G Height Adjustable Outlet H Spouts J Drip Grille K Drip Catcher L Spent Coffee Drawer with Spent Coffee Container M Float N Rating Plate (on the underside of the appliance) O Controls and Indicators (see Figure 2) P Measuring Spoon Controls (Figure 2) A Power Indicator: Illuminates when the appliance is switched on B Main Switch: Switches the appliance on and off C Indicator For 1 Cup of Strong Coffee D Indicator For 1 Cup of Normal Coffee E Button For 1 Cup of Coffee F Button For 2 Cups of Coffee G Indicator For Ground Coffee H Button For Ground Coffee J Indicator For "Flushing" K Button For Flushing L Indicator For "Cleaning" M Indicator For "Descaling" N Indicator For "Water Tank" O Indicator For Emptying or Refitting The "Drip Catcher and Spent Coffee Container" P Selector Dial For Amount of Water per Cup Indicator illuminates: Indicator flashes: . . . 18 g Table of Contents Safety Instructions 1. Before Using for the First Time 1.1. Setting Up the Appliance 1.2. Cable Compartment (Figure 3) 1.3. Adjusting the Water Hardness 1.4. Adjusting the Safety Cut-Out 2.

Prior to Making Coffee 2.1. Filling the Water Tank (Figure 4) 2.2. Filling the Bean Container (Figure 5) 2.

3. Adjusting the Grinding Texture (Figure 6) 2.4. Switching On the Appliance (Figure 7) 2.5.

"Flushing" the Appliance (Figure 8) 3. Making Coffee 3.1. Adjusting the Amount of Water (Figure 9/B) 3.2. One Cup of Normal Coffee from Beans (Figure 10) 3.3. One Cup of Strong Coffee from Beans (Figure 11/A) 3.4. One Cup of Extra Strong Coffee from Beans (Figure 11/B) 3.

5. Two Cups of Normal Coffee from Beans (Figure 12) 3.6. One or Two Cups of Coffee from Ground Coffee (Figure 13, 14) 4. Frothing Milk (for Cappuccino) (Figure 15, 16) 5. Preparing Hot Water (Figure 16) 6. Switching Off the Appliance 7. Emptying the Water Tank, Drip Catcher and Spent Coffee Container (Figure 17, 18) 8. Cleaning 8.1.

Exterior Cleaning (Figure 19, 20) 8.2. Internal Cleaning: "Clean" Indicator Illuminates (Figure 21) 9. Descaling the Appliance: "Descale" Indicator Illuminates (Figure 22, 23) 10. What to do if .

.. 11. Protecting the Environment 12. In the Case of Need for Service 1 Safety Instructions · The appliance may only be connected to a mains supply on which the voltage, type of supply, and frequency match the information given on the rating plate (see underside of the appliance)! · Never allow children to operate the appliance unsupervised.

· Never bring the mains lead into contact with the hot parts of the appliance. · Never pull the plug from the socket by means of the mains lead! · Do not use the appliance if: the mains lead is damaged or the housing shows visible signs of damage. · The coffee outlet, swivelling nozzle, and cup rack will become hot during use due to the nature of their functions. Keep children away! · Only fill the water tank with cold water, do not use hot water, milk or other liquids. · Do not place frozen or caramelised coffee beans in the bean container, only use roasted coffee beans! Remove any foreign bodies from the coffee beans.

Otherwise the guarantee will be void. · Only put ground coffee in the ground coffee filler opening. · Observe the cleaning and descaling instructions. · Prior to maintaining or cleaning, switch off the appliance and unplug it from the mains! · Never immerse the appliance in water. · Do not allow any liquid to enter the housing via the ventilation holes on the cup rack.

· Do not wash the parts of the appliance in a dishwasher. · Do not leave the appliance switched on longer than necessary. · Do not expose the appliance to the weather. 19 g Do not open or repair the appliance. Improper repairs can give rise to significant hazards for the user. Repairs to electrical appliances are only to be performed by qualified service engineers. In the case that repair becomes necessary, including the replacement of the mains lead, please contact · the dealer from whom you purchased the appliance, or · an AEG customer service centre. In no circumstance should the appliance be sent by post - there is a risk of transport damage that cannot be covered under the guarantee! If the appliance is used for a purpose other than that intended, or is incorrectly operated, no liability for any resulting damage or claims under the guarantee can be accepted - this is also the case if the cleaning and descaling programs are not performed immediately after the illumination of the corresponding indicators (Figure 2), and in accordance with the information given in these operating instructions. 1. Before Using for the First Time 1.

1. Setting Up the Appliance Choose a suitable, level, stable, unheated, dry surface. Pay attention to adequate air circulation. Important: If the appliance is placed in a warm room after being brought in from the cold - wait approx. 2 hours before switching on the appliance! 1.

2. Cable compartment (Figure 3) Your appliance has a cable compartment on the rear. If the mains lead is too long, you can push the cable that is not needed into the cable compartment. 1.3.

Adjusting the Water Hardness Your appliance can be adjusted to the hardness of the water used. The correct adjustment of the water hardness is necessary for the correct function of the automatic scaling indicator (see also Section 9.). Use the Aquadur® test strips supplied to determine the hardness the local water. Follow the instructions given on the test strip packaging. Or: Ask your water board about the hardness of your water! The appliance has 5 hardness settings, the appliance is set to the middle setting, 3, in the factory (corresponds to 16°-23° degrees German hardness). You can change this setting as follows: Plug the appliance into the mains. Do not switch on the appliance. Press the "1 Cup" button for approx. 3 seconds.

The "Descale" indicator flashes. Pressing the "1 Cup" button again changes the water hardness setting by one step to 4, 0, 1, 2, 3, and so on. To store the water hardness setting and to end the procedure, press the "On/Off" button. All indicators go out. If a button is not pressed for more than 30 sec., the procedure is automatically ended without changing the value saved previously. ; This appliance complies with the following EC directives: · 73/23/EWG dated 19.02.1973 "Low Voltage Directive", including Directive Amendment 93/68/EWG · 89/336/EWG dated 03.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)
<http://yourpdfguides.com/dref/1311772>

1989 "EMC Directive", including Amendment Directive 92/31/EEG 0 0 0 0 20 g The individual water hardness settings (degrees German hardness, ° dH) are indicated as follows: The "Descaler" indicator flashes (), in addition the following indicators illuminate () for setting 1 (1°-7° dH): "1 Strong Cup" for setting 2 (8°-15° dH): "1 Strong Cup" and "Ground Coffee" for setting 3 (16°-23° dH): "1 Strong Cup", "Ground Coffee" and "Spent Coffee" for setting 4 (24°-30° dH): "1 Strong Cup", "Ground Coffee", "Spent Coffee" and "Clean" for setting 0: no further indicators illuminate. The automatic descale indicator is switched off. Note: The water hardness setting is only to be adjusted prior to using the appliance for the first time, or if the quality of the water used changes.

If a button is not pressed for more than 30 sec., the procedure is automatically ended without changing the value saved previously.

The individual timer settings are indicated as follows: The "Flush" indicator flashes, in addition the following indicators illuminate for setting 2 (switch off after 2 hours): "Water Tank" and "Spent Coffee" for setting 3 (switch off after 5 hours): "1 Strong Cup", "Ground Coffee", "Clean", "Water Tank" and "Spent Coffee" for setting 1: no further indicator illuminates, the automatic cut-out is not activated. 2. Prior to Making Coffee 2.1. Filling the Water Tank (Figure 4)

Open the lid (Figure 1/A) and remove the water tank by the handle.

Please only use cold, clear water, and do not fill beyond the MAX mark. Then refill the water tank in the appliance and press it down until it engages so the valve on the base is opened. For aromatic coffee, you should: · Change the water in the tank daily, · Not use mineral or distilled water and · Clean the water tank at least once a week in normal washing up water (not in a dishwasher). Then rinse with clean water. Incidentally: When the "Water Tank" indicator (Figure 2/N) illuminates, your appliance is signalling to you that the water tank must be refilled. 1.4. Adjusting the Safety Cut-Out If the appliance is not used for an extended period of time, it switches itself off for safety reasons and to save energy. The appliance has 3 timer settings; after the expiry of the time set, the appliance switches off automatically. The middle setting 2 (switch off after 2 hours), is set in the factory.

You can change this setting as follows: Plug the appliance into the mains. Do not switch on the appliance. Press the "2 Cups" button for approx. 3 seconds.

The "Flush" indicator illuminates. Pressing the "2 Cups" button again adjusts the timer setting by one step to 3, 1, 2 and so on. To save the safety cut-out setting and end the procedure, press the "On/ Off" button. All indicators go out. 0 0 0 0 21 g 2.2.

Filling the Bean Container (Figure 5) Open the lid of the bean container (Figure 1/D) and fill the container with roasted coffee beans (do not use frozen and caramelised beans). Ensure that no foreign bodies enter the bean container. Close the lid. Tip: You can use both espresso and filter coffee beans! Try out different sorts of beans to find the ones that taste the best to you! 0 Turn the selector dial (Figure 1/E) anticlockwise to the stop. 0 Hot water runs out of the swivelling nozzle and is stopped automatically.

0 Turn the selector dial clockwise back to "0". Please repeat this process until the green flashing indicators go out. This process is necessary to fill the system with water. 2.5.

"Flushing" the Appliance (Figure 8) When the operating temperature is reached, the green "Flush" indicator (Figure 2/J) illuminates. Place an empty cup under the spouts (Figure 1/H) and press the "Flush" button (Figure 2/K). The flushing process (Figure 2/D) illuminates. Place an empty cup centrally under the spouts. By briefly pressing the "1 Cup" button (Figure 2/E), you will obtain one cup of normal coffee. "1 Normal Cup" flashes. 3.6. One or Two Cups of Coffee from Ground Coffee (Figure 13, 14) Using this function you can, e.g.

, brew decaffeinated coffee. The appliance is ready for use when the "1 Normal Cup" indicator (Figure 2/D) illuminates. Place one or two cups under the spouts. Press the "Ground Coffee" button (Figure 2/H) until the "Ground Coffee" indicator (Figure 2/G) illuminates (Figure 13). Open the lid (Figure 1/B) and place the required amount of ground coffee for one or two cups in the filler opening (Figure 14). Close the lid. Note: Add a maximum of 2 portions of ground coffee. The filler opening for ground coffee is not a storage container. Do not add anything other than ground coffee! 0 0 3.3.

One Cup of Strong Coffee from Beans (Figure 11/A) The appliance is ready for use when the "1 Normal Cup" indicator (Figure 2/D) illuminates. Place an empty cup centrally under the spouts. Now press the "1 Cup" button (Figure 2/E) until the "1 Strong Cup" indicator (Figure 2/C) illuminates and "1 Normal Cup" flashes. You will then obtain one cup of strong coffee. 0 0 23 g 0 Now press the "1 Cup" button for one cup or the "2 Cups" button for two cups.

Note: If the "Ground Coffee" button is pressed inadvertently, you can cancel this setting by pressing the "1 Cup" button again. The appliance then performs a normal flush. 0 You can stop the outlet of steam by turning the selector dial clockwise to the 0-position (Figure 16/B). In particular after frothing milk, it is recommended to briefly activate the outlet of steam to "blow out the swivelling nozzle". Then clean the any milk residues from the swivelling nozzle using a damp cloth.

Move the moving metal tube up and down during this process. After steam has been drawn off, all 4 green indicators flash to indicate that the system must be refilled with water. Proceed as follows: 0 Place a container under the swivelling nozzle (Figure 1/F). 0 Turn the selector dial (Figure 1/E) anticlockwise to the stop (Figure 16/A). 0 Press the "Flush" button (Figure 2/K). Wait until the flow of water stops automatically. All 4 green indicators then flash. 0 Turn the selector dial (Figure 1/E) clockwise back to the 0-position (Figure 16/B). The appliance is now ready for use again. 4.

Frothing Milk (for Cappuccino) (Figure 15, 16) Hot steam can be used both for frothing milk for cappuccino and for heating liquids. Note: For one cup of cappuccino, fill a large cup up to 2/3 full with espresso and then add the frothed milk. Frothing milk: Slide the moving tube on the swivelling nozzle all the way down (Figure 15/A). Warming liquids: Slide the moving tube up (Figure 15/B).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)
<http://yourpdfguides.com/dref/1311772>

0 Switch on the appliance using the On/ Off switch (Figure 2/B) and flush if necessary (see Section 2.5.). The appliance is ready for use when the "1 Normal Cup" indicator (Figure 2/D) illuminates. 0 Immerse the swivelling nozzle in the container with the milk to be frothed or the liquid to be heated, and start the production of steam by turning the selection dial (Figure 1/E) anticlockwise to the stop (Figure 16/A). Due the nature of the system, a little water runs out of the swivelling nozzle first, this can be run off first, however it will not affect the quality of the result, e.

g., on frothing milk. Important: Only immerse the swivelling nozzle around half way into the liquid so that air can be drawn in unhindered. The swivelling nozzle should not touch the base of the container to avoid the hindrance of the outlet of steam. Important: There is a risk of burns! 5.

Preparing Hot Water (Figure 16) You can use the hot water function for prewarming cups, for preparing instant beverages or tea. Important: There is a risk of burns! 0 Switch on the appliance using the On/ Off switch (Figure 2/B) and flush if necessary (see Section 2.5.). The appliance is ready for use when the "1 Normal Cup" indicator (Figure 2/D) illuminates.

0 Hold a container under the swivelling nozzle and initiate the preparation of hot water by turning the selector dial (Figure 1/E) anticlockwise to the stop (Figure 16/A) and press the "Flush" button (Figure 2/K). 0 You can stop the flow of hot water by turning the selector dial clockwise back to the 0-position (Figure 16/B). 24 g 6. Switching Off the Appliance By pressing the On/Off switch (Figure 2/B), you can switch off the appliance. The power indicator (Figure 2/A) goes out. 8. Cleaning 8.1. @@Then rinse with clean water. @@Spent Coffee container: This part is dishwasher-safe (Figure 18/A)! Swivelling nozzle: Wipe with a damp cloth after use.

Unscrew with a coin if blocked (Figure 19/A). @@On reassembly, ensure that the nozzle is correctly seated. Outlet and spouts: Clean with a damp cloth as required. @@Then wipe dry. @@Bean container: Clean with a dry cloth from time to time. 7. @@Remove the water tank (Figure 4) and pour away the remaining water. Use fresh water each day. @@Leave the appliance switched on when performing these tasks. @@Remove the spent coffee container and empty it (Figure 18/A).

@@Pour away the water left in the drip catcher. @@@@663 910 480) or from your dealer (E No. 950 078 803). @@@@Switch the appliance on using the On/ Off switch (Figure 2/B). Press the "Flush" button (Figure 2/K) for approx.

@@@@The "Clean" indicator (Figure 2/L) flashes to show that the cleaning program has started. Note: The cleaning program can also be started by pressing the "1 Cup" or "2 Cups" button! Water is now pumped through the system at short intervals to release, with the aid of the cleaning tablet, residues of coffee inside the machine. If during the cleaning program the "Spent Coffee" indicator (Figure 2/O) illuminates, empty the drip catcher and the spent coffee container, refit them and press the "Flush" button (Figure 2/K). The cleaning program is then continued. This action may need to be repeated up to four times.

0 The cleaning program is at an end when the "Flush" indicator (Figure 2/J) illuminates. Flush the appliance by pressing the "Flush" button (Figure 2/K). 0 Then empty the spent coffee container and the drip catcher, and refit them. The appliance is now ready for use again when the "1 Normal Cup" indicator (Figure 2/D) illuminates. 0 0 9. Descaling the Appliance (Figure 22, 23) Your appliance has a descaling program for the regular descaling of the appliance (duration approx. 60 min.). If the "Descale" indicator (Figure 2/M) illuminates, you should run the descaling program as described below. Descaling can also be performed before the indicator illuminates by leaving the appliance to cool down for 2 hours and pressing the "Flush" button (Figure 1/K) for approx.

3 seconds with the appliance switched off. You can also continue to use your appliance and run the descaling program later. However, you will endanger your rights to make a claim under the guarantee, as the appliance (and thus also customer service) will detect overdue cleaning! Important: Only use liquid (not powdered!), environmentally friendly descaler. Only use descaler exactly as per the manufacturer's instructions. Do not use any acid-based descaler. 0 Switch the appliance off using the On/ Off switch (Figure 2/B) and leave it to cool down for at least 2 hours. 0 Fill the water tank with approx. 600 ml of water, only then add the liquid descaler (never the other way round)! Do not switch the appliance on! 0 With the appliance switched off, press the "Flush" button (Figure 2/K) for approx. 3 seconds until the following indicators illuminate: "Empty Spent Coffee", "Descale" (Figure 22). 0 0 0 0 26 g 0 Empty the spent coffee container and the drip catcher, and refit them.

The "Spent Coffee" indicator (Figure 1/O) goes out. All 4 green indicators flash, the "Descale" indicator (Figure 1/M) illuminates. 0 Place a sufficiently large container under the swivelling nozzle (Figure 23). 0 Start the descaling program by turning the selector dial (Figure 1/E) anticlockwise to the stop (Figure 16/A). The "Descale" indicator (Figure 2/M) flashes.

Descaler is now pumped through the system at short intervals. 0 If during the cleaning program the "Spent Coffee" indicator (Figure 2/O) lights up, empty the drip catcher and then replace it. All 4 green indicators flash, the "Descale" indicator illuminates (Figure 1/M). 0 Turn the selector dial (Figure 1/E) clockwise back to the 0-position (Figure 16/B). The descaling program is continued.

If the "Spent Coffee" indicator (Figure 2/O) lights up, empty the drip catcher and then replace it. Do not fill the water tank until the "Water Tank" indicator (Figure 2/N) illuminates. After a period of time, the "Flush" indicator (Figure 2/J) flashes while the "Descale" (Figure 2/M), "Water Tank" (Figure 2/N) and "Spent Coffee" indicators (Figure 2/O) illuminate. 0 Now fill the water tank with fresh water and refit it to the appliance. 0 Empty the drip catcher and refit. All 4 green indicators flash, the "Descale" indicator (Figure 1/M) illuminates. 0 Place a sufficiently large container under the swivelling nozzle (Figure 23) and turn the selector dial (Figure 1/E) anticlockwise to the stop (Figure 16/A). The indicators "Flush" (Figure 2/J) and "Descale" (Figure 2/M) flash. After a certain amount of time, the "Flush" indicator (Figure 2/J) flashes while the "Descale" (Figure 2/M) and "Spent Coffee" (Figure 2/O) indicators illuminate.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)
<http://yourpdfguides.com/dref/1311772>

0 Empty the drip catcher and refit.

Turn the selector dial (Figure 1/E) clockwise back to the 0-position (Figure 16/B). The indicators "Flush" (Figure 2/J) and "Descale" (Figure 2/M) flash. If the "Spent Coffee" indicator (Figure 2/O) lights up, empty the drip catcher and then replace it. The descaling program is continued. After a certain amount of time, the "Flush" indicator (Figure 2/J) flashes while the "Descale" (Figure 2/M) and "Spent Coffee" (Figure 2/O) indicators illuminate. Empty the drip catcher and then replace it. The "Flush" indicator (Figure 2/J) illuminates. 0 Flush the appliance by pressing the "Flush" button (Figure 2/K). 0 Rinse out the water tank. The appliance is now ready for use again when the "1 Normal Cup" indicator (Figure 2/D) illuminates.

10. What to do if ... · no coffee runs out of the spouts: Check that the water tank is correctly seated! Fill the water tank! Check the correct seating of the drip catcher! · coffee only drips out of the spouts: Set the grinding texture to a coarser setting.
- too little froth is produced on the milk during frothing? Always use cool, fresh (low fat) milk! Use a suitable container (e.g. jug)! Also cool the container if necessary! Dismantle the swivelling nozzle and clean! 27 g · the temperature of the coffee is too low? Prewarm cups with steam or hot water! Caution: Sugar and milk lower the temperature of the coffee! · coffee brewing is interrupted after grinding? Fill the bean container as the brewing unit has detected that too few beans have been ground, as a result the cycle has been interrupted. · all green indicators are flashing simultaneously? See Section 4. (After drawing off steam)! See Section 2.
4. (Only when using the appliance for the first time). Switch off the appliance. Wait 1/2 hour. Switch on the appliance, see Section 2.4. (Only when using the appliance for the first time). It is possible that the filter is clogged with ground coffee. Disconnect the appliance from the mains. Pull out the spent coffee drawer.

Feel inside the appliance - you will find a movable flap at the top rear of the appliance. The filter is located behind this flap. Wipe the filter clean with a dry cloth. Replace the spent coffee drawer. Finally, the system must be filled with water again. See Section 4 (After drawing off steam). · the spent coffee container is stuck in the appliance? Pull out the drip catcher together with the spent coffee drawer, carefully remove the spent coffee container from the appliance. Refit the drip catcher with the spent coffee drawer, but without the spent coffee container and wait until the process is complete and the "1 Cup" indicator illuminates. Then insert the drip catcher with the spent coffee container and spent coffee drawer! · Indicators flash alternately? Appliance is too cold. Switch off and wait approx.

1 hour before switching on the appliance again! · the 4 green and the 4 red indicators are flashing alternately? Switch off the appliance, unplug from the mains, plug into the mains again, and switch on the appliance again. If this malfunction is no longer indicated, the appliance is again ready for use. If the malfunction is still present, please call customer service! · the grinder is making loud noises? Check the grinder for foreign bodies. If necessary, have the appliance checked by AEG customer service. · the appliance is to be transported? Keep the original packaging to provide protection during transport.

Protect the appliance from knocks. In the case of frost, drain the heater system by drawing off steam prior to transport: Switch off the appliance.

Place a container under the swivelling nozzle. Turn the selector dial (Figure 1/E) anticlockwise to the stop (Figure 16/A). Switch on the appliance.

All 4 green indicators flash. Press the "Flush" button (Figure 2/K) until the only the "Flush" indicator (Figure 2/J) is still flashing. Steam comes out after a short delay. Wait until the steam stops automatically. Turn the selector dial (Figure 1/E) clockwise back to the 0-position (Figure 16/B). Switch off the appliance. Empty the bean container, water tank and drip catcher. 28 g 11. Protecting the Environment Do not simply throw packaging material away. ·

Please keep the box and the foam packaging! They can be reused in the case of the need for service to protect the appliance during transport.

If used: · deposit plastic bags made of polythene (PE) at a collection point for recycling. · The packing pieces made of foam polystyrene (PS) are CFC-free.

@@Used coffee is ideally suited to composting. 12. @@@@The guarantee is for 1 year from the date of purchase. The guarantee is restricted to 6 months if the appliance is used commercially. Commercial usage is deemed to be more than 3000 brewing cycles per year. * = Euro 0.12/min. 29 AEG

Kundendienst in Europa Deutschland Sollte dieses AEG Kleingerät wider Erwarten nicht funktionieren, wenden Sie sich bitte an unseren Service.

Wir werden die Abholung und Instandsetzung durch unsere Werkstatt veranlassen. Europa Österreich, 4010 Linz, 0732 / 770101 - 30 Belgique/België, 1502

Lembeek, 02/363.04.44 Czech Republic, Hanusova ul., Praha 4, 02/6112 6112 Danmark, 7000 Fredericia, 70 11 74 00 España, Madrid, 1-885-2700 AEG

Kleingeräte-Zentralwerkstatt France, 60307 Senlis, 03-44 62 24 24 Firma Trepsch GmbH Great Britain, Service Force 08705 929 929 Steinstraße 500

Hellas, 18346 MOÓXATO, 01/4822646 90419 Nürnberg Island, Reykjavik (Bræóurnir Ormsson hf), 91-3 88 20 Italia, 33080 Porcia (PN), 0434 39 41 In

Deutschland stehen wir Ihnen für Fragen, Anregungen Kroatien, 10000 Zagreb, 385 1 6323 333 oder bei Problemen rund um unsere Kleingeräte und Luxembourg, 1273 Luxembourg-Hamm, 4 24 31-443 Raumpflegegeräte montags bis freitags von 8 bis 18 Uhr Magyarország, 1142 Budapest, 36-1-252-1773 zur Verfügung.

Nederland, 2400 AC Alphen aan den Rijn, 0172-468 300 Norge, 0516 Oslo, 22 72 58 00 AEG-ServiceLine: 0 18 05 30 60 80 Poland, 02-034 Warszawa, 022

874 33 33 (Deutsche Telekom 0,12 Euro/Min.) Portugal, 2635-445 Rio de Mouro, (21) 926 75 75 Fax: 0911 - 323 49 19 30 Romania, Bucuresti, B-dul

Timisoara 90, 01-444-25-81 E-Mail: service.kleingeraete@aeg-hausgeraete.de Russia, 129090 Moscow, +7 095 956 2917, 937 7893 Slovakia, 81105

Bratislava, 07/4333 9757 Slovenija, Trazaska 132, 1000 Ljubljana, 01 24 25 730 Schweiz/Svizzera, 5506 Mägenwil, 062/889 93 00 Suomi, Porissa, puh. (02)

622 3300 Sverige, 10545 Stockholm, 08-672 53 60 Turkey, Tarlabasi cad no:35 Taksim/Istanbul-0, 262-7249420 Garantiebedingungen Der Endabnehmer

dieses Geräts (Verbraucher) hat bei einem Kauf dieses Geräts von einem Unternehmer (Händler) in Deutschland im Rahmen der Vorschriften über den

Verbrauchsgüterkauf gesetzliche Rechte, die durch diese Garantie nicht eingeschränkt werden.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)

<http://yourpdfguides.com/dref/1311772>

Diese Garantie räumt dem Verbraucher also zusätzliche Rechte ein. Dies vorausgeschickt, leisten wir, AEG Hausgeräte GmbH, gegenüber dem Verbraucher Garantie für dieses Gerät für den Zeitraum von 24 Monaten ab Übergabe zu den folgenden Bedingungen: 1. Mit dieser Garantie haften wir dafür, dass dieses neu hergestellte Gerät im Zeitpunkt der Übergabe vom Händler an den Verbraucher die in unserer Produktbeschreibung für dieses Gerät aufgeführten Eigenschaften aufweist. Ein Mangel liegt nur dann vor, wenn der Wert oder die Gebrauchstauglichkeit dieses Geräts erheblich gemindert ist. Zeigt sich der Mangel nach Ablauf von sechs (6) Monaten ab dem Übergabezeitpunkt, so hat der Verbraucher nachzuweisen, dass das Gerät bereits im Übergabezeitpunkt mangelhaft war. Nicht unter diese Garantie fallen Schäden oder Mängel aus nicht vorschriftsmäßiger Handhabung sowie Nichtbeachtung der Gebrauchsanweisungen. 2. Dieses Gerät fällt nur dann unter diese Garantie, wenn es in einem der Mitgliedsstaaten der Europäischen Union gekauft wurde, es bei Auftreten des Mangels in Deutschland betrieben wird und Garantieleistungen auch in Deutschland erbracht werden können. Mängel müssen uns innerhalb von zwei (2) Monaten nach dessen Kenntnis angezeigt werden. 3.

*Mängel dieses Geräts werden wir innerhalb angemessener Frist nach Mitteilung des Mangels unentgeltlich beseitigen; die zu diesem Zweck erforderlichen Aufwendungen, insbesondere Arbeits- und Materialkosten werden von uns getragen. Über diese Nachbesserung hinausgehende Ansprüche werden durch diese Garantie dem Verbraucher nicht eingeräumt. 4. Im Garantiefall ist das Gerät vom Verbraucher an die für seinen Wohnort zuständige AEG-Zentralwerkstatt zu versenden, wobei das Gerät gut zu verpacken ist und die vollständige Anschrift des Verbrauchers zusammen mit einer kurzen Fehlerbeschreibung in das Paket zu legen ist. Zum Nachweis des Garantie-Anspruchs ist der Sendung der Original-Kaufbeleg (Kassenzettel, Rechnung) beizufügen. 5. Garantieleistungen bewirken weder eine Verlängerung noch einen Neubeginn der Garantiezeit für dieses Gerät; ausgewechselte Teile gehen in unser Eigentum über. 6. Mängelansprüche aus dieser Garantie verjähren in zwei (2) Jahren ab dem Zeitpunkt der Übergabe des Geräts vom Händler an den Verbraucher, der durch den Originalkaufbeleg (Kassenzettel, Rechnung) zu belegen ist; wenn dieses Gerät gewerblich genutzt wird, beträgt die Verjährungsfrist sechs (6) Monate. AEG Hausgeräte GmbH, Muggenhofer Straße 135, D-90429 Nürnberg Änderungen vorbehalten AEG Hausgeräte GmbH
Postfach 1036 D-90327 Nürnberg <http://www.aeg.hausgeraete.de> © Copyright by AEG 822 949 052 - 0702 .*



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX CAFAMOSA user guide](http://yourpdfguides.com/dref/1311772)
<http://yourpdfguides.com/dref/1311772>