



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX DC7003000M. You'll find the answers to all your questions on the AEG-ELECTROLUX DC7003000M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX DC7003000M
User guide AEG-ELECTROLUX DC7003000M
Operating instructions AEG-ELECTROLUX DC7003000M
Instructions for use AEG-ELECTROLUX DC7003000M
Instruction manual AEG-ELECTROLUX DC7003000M

DC7003000

EN OVEN

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DC7003000M user guide](http://yourpdfguides.com/dref/4253087)
<http://yourpdfguides.com/dref/4253087>

Manual abstract:

General information and tips Environmental information Subject to change without notice 4 Safety information SAFETY INFORMATION Before the installation and use, read this manual carefully: · For your personal safety and the safety of your property · For the respect of the environment · For the correct operation of the appliance. Always keep these instructions with the appliance also if you move or sell it. The manufacturer is not responsible if incorrect installation or use results in damage. Children and vulnerable people safety · This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance. · Keep all packaging away from children. There is the risk of suffocation or physical injury. @@There is the risk of injury or other permanent disability. @@@There is the risk of injury and damage to the appliance. · Do not let the appliance stay unattended during operation.

@@Contact an approved service centre. This is to prevent the risks of structural damage or physical injury. · Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.

· Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee. · Make sure that the appliance is disconnected from the power supply during the installation. · Be careful when you move the appliance.

The appliance is heavy. Always use safety gloves. Do not lift the appliance by the handle. · The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm. · You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors. Safety information 5 · Before the installation, make sure that the kitchen cabinet has the recess dimensions applicable. · Make sure that the appliance is installed below and adjacent safe structures. · Keep the minimum distances to the other appliances and units. · The appliance cannot be positioned on a base.

· Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer. Electrical connection · The appliance must be earthed. · Make sure that the electrical data on the rating plate agree with your domestic power supply. · Information on the voltage is on the rating plate. · Always use a correctly installed shockproof socket. · Do not use multi-way plugs, connectors and extension cables. There is the risk of fire. · Do not replace or change the mains cable. Contact the service centre.

· Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug if applicable. Use · The appliance is only for domestic use. Do not use the appliance for commercial and industrial use. · Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property. · Do not use the appliance as a work surface or storage surface. · The interior of the appliance becomes hot during use. There is the risk of burns.

Do not touch the heating elements in the appliance. Use gloves when you insert or remove the accessories or pots. · Be careful when you remove or install the accessories to prevent damage to the oven enamel. · Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns. · To prevent damage or discoloration to the enamel: Do not put any objects directly on the appliance floor and do not cover it with aluminium foil. Do not put water directly into the hot appliance. Do not keep moist dishes and food in the appliance after you finish the cooking. · Discoloration of the enamel has no effect on the performance of the appliance so it is not a defect in the sense of the warranty law.

· Do not apply pressure on the open door. 6 Safety information · Always close the appliance door when you cook, even while grilling. Care and cleaning · Before maintenance, switch off the appliance and disconnect the appliance from the power supply. · Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break. · Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire. · Regular cleaning prevents the surface material from deteriorating · Use a deep baking tray for very moist cakes to prevent that fruit juices cause stains that can be permanent. · For your personal safety and the safety of your property, only clean the appliance with water and a soap.

Do not use flammable products or products that can cause corrosion. · Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers · If you use an oven spray, follow the instructions from the manufacturer. · Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter. · When the door glass panels are damaged they become weak and can break.

You must replace them. Contact the service centre. · Be careful when you remove the door from the appliance. The door is heavy! · Do not clean catalytic enamel (if applicable). Risk of fire · Open the door carefully.

The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire. · Do not let sparks or open flames come near the appliance when you open the door. · Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance. Oven lamp · The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting. · If it becomes necessary to replace the lamp, use one of the same power and specifically designed for household appliances only. ·

Disconnect the appliance from the power supply before the replacement of the oven lamp.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DC7003000M user guide](http://yourpdfguides.com/dref/4253087)
<http://yourpdfguides.com/dref/4253087>

There is the risk of electrical shock. Service centre · Only an approved engineer can repair or work on the appliance.

Contact an approved service centre. · Use only original spare parts. Product description 7 Disposal of the appliance · To prevent the risk of physical injury or damage Disconnect the appliance from the power supply. Cut off the mains cable and discard it. Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is the risk of suffocation. PRODUCT DESCRIPTION General overview 1 6 6 5 4 3 2 1 2 3 4 5 2 3 4 5 6 6 5 4 3 2 1 1 2 3 4 5 6 Electronic programmer Heating element Oven lamp Fan and rear wall heating element Heating element Shelf positions Oven accessories · Oven shelf For cookware, cake tins, roasts. · Deep roasting pan To bake and roast or as pan to collect fat. · The roasting pan grid To put in the deep roasting pan.

8 Before first use BEFORE FIRST USE WARNING! Refer to "Safety information" chapter. Initial Cleaning · Remove all parts from the appliance. · Clean the appliance before first use. Refer to chapter "Care and Cleaning". Setting the time The oven only operates after time set. When you connect the appliance to the electrical supply or in case of a power cut, the Time function indicator flashes automatically. To set the current time use the or button. After approximately 5 seconds, the flashing stops and the display shows the time of day set. You can only change the Time of day · the switch-on lock is not on · none of the clock functions Duration · no oven function is set. if : or End is set Pre-heating 1. Set function and maximum temperature. 2. Let the appliance operate without the food for approximately 1 hour. and maximum temperature. 3. Set function 4. @ @ and maximum temperature. 5. Set function 6. @ @ This is to burn off the residue in the appliance.

The accessories can become more hot than usually. @ @ This is the usual effect. @ @ To set a clock function. To set the value for the temperature and time. To show an oven temperature. To set an oven function or programme. To switch between top and main oven. @ @ @ @ Shows the heat setting. Shows the temperature and the time in minutes. Shows that keep warm function is active.

Shows the time setting for clock functions. To set the clock function and minute minder. DAILY USE WARNING! @ @ @ @ To make toast. To grill flat food in large quantities. To toast bread.

@ @ @ @ @ @ @ Switching on Heat+Hold 1. Set clock functions Duration and/or End . 2. Use Selection again and again, until the display shows the symbol Keep warm . 3.

Use , the display shows "00:30" 4. When the set oven function is completed, a signal sounds and Heat+Hold starts. The set oven function operates at 80°C for 30 minutes. The oven then switches off automatically. The temperature for the set oven function must be above 80°C. ADDITIONAL FUNCTIONS Cooling fan

When the appliance operates, the cooling fan switches on automatically. If you switch off the appliance, the cooling fan continues to operate until the appliance cools down. Switch-on lock WARNING! When the switch-on lock is on dirt with a special oven cleaner. · Clean all oven accessories (with a soft cloth with warm water and cleaning agent) after each use and let them dry. · If you have nonstick accessories, do not clean them using an aggressive agents, sharp edged objects or dishwasher.

It can destroy nonstick coating! Stainless steel or aluminium appliances: Clean the oven door with a wet sponge only. Dry it with a soft cloth. Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions Catalytic walls The walls with a catalytic coating are self-cleaning. They absorb fat which collects on walls while the oven operates. To support this self-cleaning process heat the oven without any food regularly: 1. Open the oven door. 2. Remove all accessories from the oven. 3.

Close the door. 4. Set the maximum oven temperature and let the oven operate for 1 hour. 5. Clean the oven cavity with a soft and damp sponge. CAUTION! Do not attempt to clean catalytic surfaces with oven sprays, abrasive cleaners, soap or other cleaning agents. This may damage the catalytic surface. Discolouration of the catalytic surface has no effect on catalytic properties. Shelf Support Rails Removing the shelf support rails 1. Pull the front of the shelf support rail away from the side wall.

26 Care and cleaning 2. Pull the rear shelf support rail away from the side wall and remove it. Installing the shelf support rails Install the shelf support rails in opposite sequence. Important! The rounded ends of the shelf support rails must point to the front! Oven lamp WARNING! There is a danger of electrical shock! Before you change the oven lamp: · Switch off the oven. · Remove the fuses in the fuse box or switch off the circuit breaker. Put a cloth on the bottom of the oven for protection of the oven light and glass cover. Replacing the oven lamp 1. You can find the lamp glass cover at the back of the cavity. Turn the lamp glass cover counterclockwise to remove it. 2.

Clean the glass cover. 3. Replace the oven lamp with applicable 300°C heat-resistant oven lamp. Use the same oven lamp type. 4. Install the glass cover. Replacing the oven lamp: 1. You can find the lamp glass cover at the left side of the cavity. Remove the left shelf support rail. Care and cleaning 2. 3. Use a narrow, blunt object (e.g. a teaspoon) to take off the glass cover and clean it. If necessary: Replace the oven light bulb with applicable 300°C heat-resistant oven light bulb.

27 Use the same oven lamp type. 4. 5. Install the glass cover. Install the left shelf support rail. Oven door and glass panels To clean the oven door remove it. CAUTION! Be careful when you remove the door from the appliance. The door is heavy! Removing the oven door 1. Open the oven door as far as it goes. 2. Lift up clamping levers (A) on the two door hinges fully. A A 3. 4. 5. Close the oven door until the first position (angle approximately 45°).

Hold of the oven door with one hand on each side and pull it away from the oven at an upwards angle. Now you can remove the inner glass panels and clean them. @ @ Be careful with the glass, it can break. @ @ Removing and cleaning the door glasses 1. @ @ @ @ To install panels follow the procedure in reverse. @ @ @ @ @ @ The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity. @ @ ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
..... *INSTALLATION WARNING! Refer to "Safety information" chapter.*

@@@The manufacturer is not responsible if you do not follow safety precautions from chapter "Safety". This appliance is supplied without a main plug and a main cable. Applicable cable types : H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F, H05 V2V2-F (T90), H05 BB-F Electrical Installation · Enquiries regarding the installation of the cooker point, if required, should be made to your Regional Electricity Company to ensure compliance with their regulations.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DC7003000M user guide](http://yourpdfguides.com/dref/4253087)
<http://yourpdfguides.com/dref/4253087>

· The appliance socket switch should be outside the cabinet but within 2m of the appliance to make it accessible to switch off the appliance in case of an emergency. · To protect the hands, wear gloves when lifting the oven into its housing. HOUSE CIRCUIT Earth leakage and continuity tests must be carried out before the appliance is connected to the mains supply and re-checked after fitting. GETTING THINGS READY CHOICE OF ELECTRICAL CONNECTION There are three possible ways to connect your appliance. In each case the appliance should be operated using at least 6mm² twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the different methods : a) By connecting to a cooker point (having a double pole isolating switch with at least 3mm contact separation in all poles and neutral) and protected with a fuse or miniature circuit breaker at your mains fuse box. b) By connecting the appliance together with a hob directly to a cooker point(s).

Having a double pole isolating switch with at least 3mm contact separation in all poles and neutral. Environment concerns 33 c) If you wish to connect an oven and a hob to a cooker point you can by connecting the oven and hob separately to the cooker point. Oven and hob units should be separately connected to a cooker point. (See Picture) 1 1 Cooker Point 2 Hob 3 Oven 3 2 It is good practice to : Fit an Earth Leakage Circuit Breaker to your house wiring. Wire your appliance to the latest IEE regulations.

ENVIRONMENT CONCERNS The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Packaging material The packaging material is environmentally-friendly and recyclable.

Plastic parts are marked with international abbreviations such as PE, PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility. IE GREAT BRITAIN & IRELAND - GUARANTEE/CUSTOMER GB SERVICE Standard guarantee conditions: We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: · Appliance has been correctly installed and used only on the electricity supply stated on the rating plate. 34 Warranty · Appliance has been used for normal domestic purposes only, in accordance with manufacturer's instructions. · Appliance hasn't been serviced, maintained, repaired, taken apart or tampered with by person not authorised by us. · Electrolux Service Force Centre must undertake all service work under this guarantee · Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Exclusions · Damage, calls resulting from transport, improper use, neglect, light bulbs, removable parts of glass, plastic. · Costs for calls to put right appliance which is improperly installed, calls to appliances outside United Kingdom. · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

· Products of Electrolux manufacturer that are not marketed by Electrolux Service and Spare Parts. Please contact your local Service Force Centre: 08445 616 616 (Call will be routed to Service Force Centre covering your postcode area). @@@@It is an important document. Please keep it with your proof of purchase Warranty 35 documents in a safe place for future reference should you require service for your Appliance. 1. In this warranty a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL; b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010; c) 'Appliance' means any Electrolux product purchased by you accompanied by this document; d) 'ASC' means Electrolux' authorised serviced centres; e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand; f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period; g) 'Warranty Period' means: where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 60 months and in New Zealand for 60 months, following the date of original purchase of the Appliance; where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance. h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. @@3. @@@@This warranty does not apply to light globes, batteries, filters or similar perishable parts. 4. Parts and Appliances not supplied by Electrolux are not covered by this warranty. 5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of: a) travel of an authorised representative; 36 Warranty b) transportation and delivery of the Appliance to and from Electrolux or its ASC. In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC. Proof of purchase is required before you can make a claim under this warranty.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DC7003000M user guide](http://yourpdfguides.com/dref/4253087)
<http://yourpdfguides.com/dref/4253087>

You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship.

Electrolux is not liable in the following situations (which are not exhaustive): a) the Appliance is damaged by: accident misuse or abuse, including failure to properly maintain or service normal wear and tear power surges, electrical storm damage or incorrect power supply incomplete or improper installation incorrect, improper or inappropriate operation insect or vermin infestation failure to comply with any additional instructions supplied with the Appliance; b) the Appliance is modified without authority from Electrolux in writing; c) the Appliance's serial number or warranty seal has been removed or defaced; d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.

To enquire about claiming under this warranty, please follow these steps: 6. 7. 8. 9. 10. 11. 12. 13. 37 a) carefully check the operating instructions, user manual and the terms of this warranty; b) have the model and serial number of the Appliance available; c) have the proof of purchase (eg an invoice) available; d) telephone the numbers shown below. 14.

You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty. Important Notice Before calling for service, please ensure that the steps listed in point 13 above have been followed. FOR SERVICE or to find the address of your nearest state service centre in Australia Please call 13 13 4 9 For the cost of a local call (Australia only) SERVICE AUSTRALIA ELECTROLUX HOME PRODUCTS www.electrolux.com.

au FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia Please call 13 13 50 For the cost of a local call (Australia only) FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand Free call 0800 10 66 10 (New Zealand only) SERVICE NEW ZEALAND ELECTROLUX HOME PRODUCTS www.electrolux.co.nz FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand Free call 0800 10 66 20 (New Zealand only) 38 39 www.aeg.com/shop/892941196-B-072011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DC7003000M user guide](http://yourpdfguides.com/dref/4253087)
<http://yourpdfguides.com/dref/4253087>