



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX DK4460-M. You'll find the answers to all your questions on the AEG-ELECTROLUX DK4460-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX DK4460-M**  
**User guide AEG-ELECTROLUX DK4460-M**  
**Operating instructions AEG-ELECTROLUX DK4460-M**  
**Instructions for use AEG-ELECTROLUX DK4460-M**  
**Instruction manual AEG-ELECTROLUX DK4460-M**

DK 4460 - DK 4490

Benutzerinformation	Dunstabzugshaube
Notice d'utilisation	Holle
Istruzioni per l'uso	Cappa aspirante
User manual	Cooker Hood



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DK4460-M user guide](http://yourpdfguides.com/dref/3347039)  
<http://yourpdfguides.com/dref/3347039>

**Manual abstract:**

Appliquer l'étrier de support cheminées à la paroi adhérent au plafond, utiliser l'étrier de support cheminées comme gabarit de forage (si présente, la petite fente sur le support doit correspondre avec la ligne précédemment tracée sur le mur) et marquer 2 trous avec le crayon, réaliser les trous, insérer 2 chevilles. Any installation work must be undertaken by a qualified electrician or a competent person. This hood must be installed in accordance with the installation instructions and all measurements must be adhered to. When used as an extractor unit, the hood must be fitted with a hose having preferably the same diameter as the outlet hole. Should there already be a hose of diameter 125 mm that ducts to the outside through the walls or roof, it is possible to use the 150/125 mm reduction flange provided. In this case the hood will be slightly more noisy. Attention: The hose is not supplied and must be purchased separately. The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood must be not less than 50cm from electric cookers and 65cm from gas or mixed cookers. If the instructions for installation for the gas hob specify a greater distance, this must be adhered to. Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply.

Always wear work gloves for all installation and maintenance operations. Never use the hood without effectively mounted grating! The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels. The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels. With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the authorised authorities. The hood must be regularly cleaned on both the inside and outside (AT LEAST ONCE A MONTH).

This must be completed in accordance with the maintenance instructions provided in this manual. Failure to follow the instructions provided in this user guide regarding the cleaning of the hood and filters will lead to the risk of fires. Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks. We will not accept any responsibility for any faults, damage or fires caused to the appliance as a result of the non-observance of the instructions included in this manual. This appliance is marked according to the European directive 2002/96/ EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. In this mode fumes are extracted to the outside via a hose connected to the coupling ring. In order to obtain the best performance the hose should have a diameter equal to the outlet hole. The air is filtered through a charcoal filter and returned to the kitchen. Best results are obtained by using a low speed for normal conditions and a high speed when odours are more concentrated.

Turn the hood on a few minutes before you start cooking. Press and hold button 1 or 3 to reset the indicator. Press and hold button 1 or 3 to reset the indicator. The charcoal filter indicator is not active in the standard mode.

Charcoal filter indicator deactivation: Turn the hood off and keep buttons 1 and 2 pressed for 3". Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse. Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket. The purpose of the grease filters is to absorb grease particles which form during cooking and it must always be used, either in the external extraction or internal re-circulation function. Attention: the metal grease filters must be removed and washed, either by hand or in the dishwasher, every four weeks. Repeat the process if necessary. Refit the grease filters when they are dry. dishwasher Place grease filters in the dishwasher. Repeat the process. Refit the grease filters when they are dry.

The charcoal filter should be replaced every 4 months under normal use. Replacement filters are available from your local Service Force Centre. Fitting Position the carbon filter inside the hood to cover the protection grill of the motor. Fix the filter with 2 lateral knobs. Always specify the hood model number, serial number and product number code when ordering replacement filters.

This information is shown on the rating plate located on the inside of the unit. The charcoal filter can be ordered from your local Service Force Centre. You are therefore strongly recommended to follow these instructions. The manufacturer declines all responsibility for any damage to the motor or any fire damage linked to inappropriate maintenance or failure to observe the above safety recommendations. Prior to touching the light bulbs ensure they have cooled down.

Replace the old bulb with a new one of the same type. Only ever clean the switch panel and filter grill using a damp cloth and mild washing up liquid. Clean all the plastic parts with a soft cloth soaked in warm water and neutral soap. The grease filters are clean. The kitchen is adequately vented to allow the entry of fresh air. Turn off the hob and then wait for the device to reset. If the hood has been installed below the heights indicated in the installation instructions the motor will cut-out frequently which will damage the hood. If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model and serial number. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls. In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

You are welcome to telephone our technical assistance service (see list of technical assistance centres) whenever you need information or in the unlikely event of a fault. When calling, please be ready to specify: 1. The model code number 2. ) This information .



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX DK4460-M user guide](#)

<http://yourpdfguides.com/dref/3347039>