



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX DL8560-M. You'll find the answers to all your questions on the AEG-ELECTROLUX DL8560-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX DL8560-M
User guide AEG-ELECTROLUX DL8560-M
Operating instructions AEG-ELECTROLUX DL8560-M
Instructions for use AEG-ELECTROLUX DL8560-M
Instruction manual AEG-ELECTROLUX DL8560-M

DL8560-M
DL8590-M



User Manual

Cooker Hood

PERFEKT IN FORM UND FUNKTION



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DL8560-M user guide](http://yourpdfguides.com/dref/3347058)
<http://yourpdfguides.com/dref/3347058>

Manual abstract:

Accordingly, you may find descriptions of individual features that do not apply to your specific appliance. **iNSTALLATION** · The manufacturer will not be held liable for any damages resulting from incorrect or improper installation. The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation). The route of the flue must be as short as possible. g. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. **uSE** · The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells. Never use the hood for purposes other than for which it has been designed. Never leave high naked flames under the hood when it is in operation. Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.

Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames. Do not flambé under the range hood; risk of fire · This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. **mAINTENANCE** · Switch off or unplug the appliance from the mains supply before carrying out any maintenance work. Clean and/or replace the Filters after the specified time period (Fire hazard) · Clean the hood using a damp cloth and a neutral liquid detergent.

On the product or on its packaging indicates that this product may not be treated as household waste. Instead The symbol it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. (1), leaving a distance of at least 20mm from the front. Fit the two hood support brackets (fig. Insert the Hood until it connects with the snap-on side Supports.

Lock it in position by tightening screws Vf from underneath the Hood. Fix the pipe in position using sufficient pipe clamps (not supplied). Fix the pipe in position using sufficient pipe clamps (not supplied). When pressed for about 1 seconds the motor is switched off. After 10 minutes of functioning it turns off automatically. This function can be interrupted by means of pressing any of the buttons. indicates that the Metal grease filters saturation alarm has been triggered, and the filters need to be washed. The alarm is triggered after 100 working hours. (Reset; check the Maintenance-paragraph) indicates that the activated charcoal odour filter saturation alarm has been triggered, and the filter has to be re-placed; the metal grease filters must also be washed.

The activated charcoal odour filter is triggered after 200 working hours. The appliance can be controlled using a remote control powered by a 1. Do not place the remote control near to heat sources. Used batteries must be disposed of in the proper manner. Clean the outside by using a damp cloth and neutral liquid detergent. Clean the inside as well by using a damp cloth and neutral detergent; do not use wet cloths or sponges, or jets of water; do not use abrasive substances. When the above operation has been completed, hook the panel back to the hood canopy and close it by turning the knob in the opposite direction. Switch off the lights and extractor motor. Press button T3 for at least 3 seconds, until the leds start to flash. cleaning the filters · The filters are washable and must be cleaned at least every 2 months of operation, or more frequently for particularly heavy usage.

Remove the filters one at a time by pushing them towards the back of the group and pulling down at the same time. Wash the filters, taking care not to bend them. Allow them to dry before refitting. When refitting the filters, make sure that the handle is visible on the outside. The filter is not washable and cannot be regenerated.

It must be replaced when led S1 flashes or at least every 4 months. All five LEDs are turned on. Switch off the lights and extractor motor. Press button T3 for at least 3 seconds, until the leds start to flash. Fit the new filter by hooking it into its seating · Replace with another of the same type, making sure that the two pins are properly inserted in the lamp holder socket holes.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX DL8560-M user guide](http://yourpdfguides.com/dref/3347058)
<http://yourpdfguides.com/dref/3347058>