




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EDC 5310. You'll find the answers to all your questions on the AEG-ELECTROLUX EDC 5310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EDC 5310
User guide AEG-ELECTROLUX EDC 5310
Operating instructions AEG-ELECTROLUX EDC 5310
Instructions for use AEG-ELECTROLUX EDC 5310
Instruction manual AEG-ELECTROLUX EDC 5310

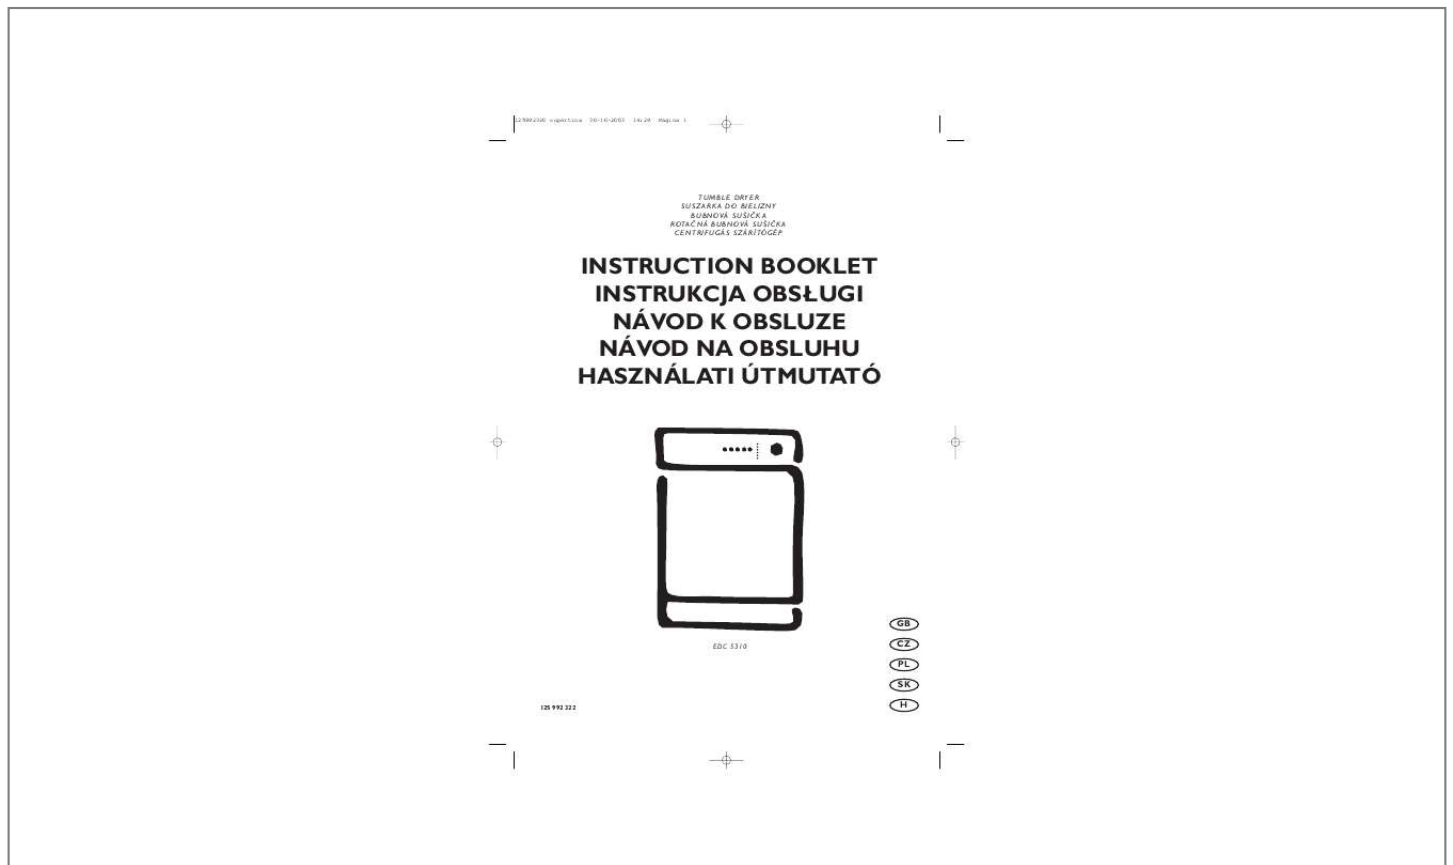

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC 5310 user guide](http://yourpdfguides.com/dref/2168094)
<http://yourpdfguides.com/dref/2168094>

Manual abstract:

Our contribution to the protection of the environment: we use recycled paper. Contents Important safety information

.....

.....

...3 Disposal

.....

.....

.....

.....

.....

.....

.....

.....3 Tips for environmental protection

.....4 Technical specifications...

.....

.....

.....

.....4 Description of the appliance .

.....

.....

.....

.4 Installation

.....

.....

.....

.....

.....

.....

.....5 · Unpacking .

.....

.....

.....

.....

.....

.....

.....

.....5 · Positioning .

.....

.....

.....

.....

.....

.....

.....

.....5 · Electrical connection .

.....

.....

.....

.....

.....

...5 · Stacking kit ..

.....

.....

.....
.....
.....
.....

.....
.5 · Door reversal

.....
.....

.....
.....
.....
.....

.....
.....5 Use ...

.....
.....
.....

.....
.....
.....
.....

.....
.....

....6 · The control panel .

.....

.....
.....
.....
.....

....6-7 · Programme chart

.....
.....
.....

.....
.....
.....

....8 · Operating sequence.....

.....
.....
.....
.....

.....
.9 · Useful hints

.....
.....

.....
.....
.....
.....

.....10 Maintenance and Cleaning ...

.....
.....
.....

.11 · External cleaning

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...11 · Cleaning the door .

.....
.....
.....
.....
.....

.....11 · Cleaning the filters

.....
.....
.....
.....
.....

.11 · Cleaning the condenser unit

.....
.....
.....

.11 · Emptying the water reservoir

.....
.....
.....

.12 · Cleaning the air intake grille.....

.....
.....
.....

...12 · Cleaning the drum

.....
.....
.....
.....

.....12 Something not working? .

.....
.....
.....

.....13 2 125992320 gb.qxd 16/10/2003 10:41 Pagina 3 Important safety information These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.

Installation · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. *General safety* · It is dangerous to alter the specifications or attempt to modify this product in any way. · Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Child safety Use · This appliance is designed for domestic use only. If the machine is used for any other purposes or is not used correctly, the manufacturer accepts no responsibility for any damage that might occur.

· Always unplug the appliance after use. · Clothes which are dripping wet should not be placed in the dryer. · *Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Tumble dry only items washed with water. · Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance. · Do not dry canvas shoes or sports shoes, as they could get stuck between the door and the drum, thus blocking this latter. @@This will allow the seal to be preserved. · Clean fluff filters after using the tumble dryer. @@· Do not allow fluff to accumulate around the dryer.*

@@When the machine is working, children should be carefully supervised and not be allowed to play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach. · Make sure that children or pets do not climb into the drum. · When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing. Disposal · Packaging materials The materials marked with the symbol recyclable.

are This means that they can be recycled by disposing of them properly in appropriate collection containers. · Machine Use authorised disposal sites for your old appliance.

Help to keep your country tidy! 3 ENGLISH 125992320 gb.qxd 16/10/2003 10:41 Pagina 4 Tips for environmental protection To save energy and to help protect the environment, we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. · Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. · Do not over-dry laundry, this avoids creasing and saves energy.

Select the drying programme according to the type of laundry and the required degree of dryness. · To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load. · Clean the filters regularly to avoid excessive drying times and high electricity consumption. · Ventilate the room well.

@@POWER ABSORBED: MIN. FUSE RATING: MAX. @@@@ Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. Important! P1106 Should the appliance be moved, it must be transported vertically. Positioning It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grille at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level.

If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance. Important The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures. The power supply cable must be accessible after installing the machine. Stacking kit A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm. Read carefully the instructions supplied with the kit. P1148 Door reversal To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel. Please contact the nearest Service Centre. 5 ENGLISH 125992320 gb.qxd 16/10/2003 10:42 Pagina 6 Use The control panel EDC 5310 1 1 Programme guide This will help you to select the correct programme for drying. 234567 8 4 Low temperature button Pressing this button allows drying to be performed at a lower temperature, for delicate items.

The corresponding pilot light comes on. This option can also be used for time controlled drying. This function cannot be used with QUICK DRYING. 2 Quick drying button By depressing this button the drying time is reduced in the following COTTON programmes: · extra dry · ready to wear · store dry The corresponding light illuminates.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC 5310 user guide](http://yourpdfguides.com/dref/2168094)
<http://yourpdfguides.com/dref/2168094>

@@@The machine begins the countdown, which is shown by the pilot lights.

@@@@@@@@@@@@@@@@@@@@If you wish to add some laundry while the machine is performing the required extra dry ready to wear store dry slightly damp iron dry machine iron dry extra dry store dry iron dry Baby cycle Dry fresh Type of laundry Max-load (1) 5 kg 5 kg 5 kg 5 kg 5 kg 2.5 kg 2.5 kg 2.5 kg 1 kg (10 jumpers) 1 - 4 garments Programme A B C(*) D E(*) F G H(*) J K L Cotton & linen Synthetics Jumpers Jackets, trousers, dresses, skirts. (*) According to CEI 1121 Standards. @@@@to remove a persistent odour of moth-balls). @@@@There may be dust inside a brand new tumble dryer. 10. @@The appliance is switched off. Remove the laundry.

@@Connect the appliance. 2. @@· Empty the water reservoir (see page 12). Important! @@@@Load the items one at a time, shaking them out loosely. 4. Close the door. @@5. Select the drying programme or time. The lights , and come on. 6.

@@7. Select the DELAYED START if required. 8. @@Only the light remains lit. @@@@The drum turns alternately in both directions during drying. @@You may remove the laundry after this phase. The lights , and illuminate. 9. If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

Lights , and remain lit and the buzzer sounds for 2 minutes. 9 ENGLISH 125992320 gb.qxd 16/10/2003 10:42 Pagina 10 Useful hints · Try to load to the maximum capacity of the machine as small loads are uneconomical. For information, here is a list of the average weights of some common laundry ite handle. P1110 P1151 The filter in the inner door must be removed for cleaning. Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter. After a while, a whitish patina due to detergent residue on laundry forms on the filters.

When this P1154 P1155 Clean it with a brush and rinse it under the shower if necessary. 11 ENGLISH 125992320 gb.qxd 16/10/2003 10:42 Pagina 12 Also clean the outside, removing all fluff. Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth. Important! Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable. Re-fit the condenser, turn the red stops upwards and close the door. Do not use this appliance if the condenser has not been fitted. Cleaning the air intake grille Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance. P1162 Emptying the water reservoir Water extracted from the laundry condenses inside the machine and is collected in a reservoir. The reservoir must be emptied after each drying cycle to ensure efficient operation when the machine is next used.

The pilot light reminds you this operation. Proceed as follows: Cleaning the drum When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar. @@@@The buzzer will sound. @@Handy tip: The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.

g. through a coffee filter). 12 125992320 gb.qxd 16/10/2003 10:42 Pagina 13 Something not working? FRANÇAIS ENGLISH Before contacting your local Service Centre, please make the following checks: Problem · The dryer does not work: Possible cause · The door(s) is(are) open. · The plug is not fitted into the wall socket.

· There is no electricity supply from the wall socket. · The selector dial is not set correctly. · The water reservoir is full or not correctly inserted (light is on). The programme starts in any case but it stops after approx. 3 minutes. · The start button has not been depressed. · The DELAYED START option has been selected. · The dryer does not dry properly: · The filters are clogged. · The condenser is clogged. · The water reservoir is full.

· The selected cycle is not suitable for the laundry. · Insufficient drying time. · The laundry has not been spun properly. · The low temperature function has been selected. · Excessive laundry load. · The dryer is not correctly installed. If, after the above checks, there is still a fault, call your local Service Centre. Please make sure you give the model and serial number of the appliance. This information can be found on the rating plate (see picture on page 4). 13

125992320-h 30-10-2003 14:20 Pagina 68 From the Electrolux Group.

The world's No.1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx.14 billion USD in more than 150 countries around the world.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC 5310 user guide](http://yourpdfguides.com/dref/2168094)
<http://yourpdfguides.com/dref/2168094>