



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EDC67550W. You'll find the answers to all your questions on the AEG-ELECTROLUX EDC67550W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EDC67550W**  
**User guide AEG-ELECTROLUX EDC67550W**  
**Operating instructions AEG-ELECTROLUX EDC67550W**  
**Instructions for use AEG-ELECTROLUX EDC67550W**  
**Instruction manual AEG-ELECTROLUX EDC67550W**



user manual  
用户手册

Tumble Dryer  
滚筒干衣机

EDC67550W



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC67550W user guide](http://yourpdfguides.com/dref/3896173)  
<http://yourpdfguides.com/dref/3896173>

### Manual abstract:

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. **General safety** · It is dangerous to alter the specifications or attempt to modify this product in any way. · This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. · Always unplug the appliance after use, clean and maintenance. · Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

**Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water. Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.

· · · · · electrolux 3 · Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance  
**Warning!** Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire! · Risk of electric shock! Do not spray down the appliance with jets of water. **Installation** · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. · All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable. · If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

**Use** · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only dry fabrics which are designed to be machine dried. Follow the instructions on each garment label. · Do not dry unwashed items in the tumble dryer. · Do not overload the appliance. See the relevant section in the user manual. · Clothes which are dripping wet should not be placed in the dryer. · Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.

· Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. · Fabric softeners, or similar products should be used as specified by the fabric softener instructions. · Caution - hot surface : Do not touch the door light cover surface when the light is switched on (only dryers equipped with internal drum light). **Child safety** · This machine is not intended for use by young children or infirm persons without supervision.

· Children should be supervised to ensure that they do not play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. 4 electrolux Environment The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. **Old appliance Warning!** Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug. Destroy loading door hook. Children cannot then lock themselves in the machine and put their lives at risk. **Packaging material** The packaging materials are environmentally friendly and can be recycled.

The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities. **Environmental tips** · In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing. · Your dryer will function most economically if you: always keep the ventilation slots on the base of the dryer unobstructed; use the loading volumes specified in the programme overview; ensure you have good ventilation in the installation room; clean the micro-fine filter and fine strainer after each drying cycle; spin the laundry well before drying. Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption. electrolux 5 Product description 1 6 2 7 8 3 4 5 9 10 1 2 3 4 5 Control panel Fluff filters Loading door (reversible) Ventilation grille Adjustable feet 6 7 8 9 10 Drawer with condensed water container Push button for base door opening Rating Plate Heat exchanger Heat exchanger door 6 electrolux Control panel 1 2 4 5 1 Programme knob and On/Off switch 2 DELAY TIMER button 3 START/PAUSE button 4 Indicator lights 5 Function buttons 3 Before first use In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/3896173)

[ELECTROLUX EDC67550W user guide](http://yourpdfguides.com/dref/3896173)

<http://yourpdfguides.com/dref/3896173>

1. Turn the programme knob to TIME (TIME) . 2. Press the START/PAUSE (START/ PAUSE) button. Programme chart max.

@@terry towelling items, bathrobes. Drying thick textiles, e.g. terry towelling items, towels. Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels. For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts. For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts. @@@@For thin fabrics which are also to be ironed, e.g.

knitwear, cotton shirts. Special Drying thick or multi-layered textiles, e.g. terry towelling items. @@For drying cotton and synthetic fabrics, uses low temperature. @@The results depends on the type of fabric and its finish. @@@@at the neck, cuffs and seams). @@@@ Mixed fibres and synthetics for programmes in the SYNTHETICS (SYNTHETICS) programme group. · Sorting by care label. The care labels mean: Drying in the tumble dryer possible in principle Dry at normal temperature Dry at reduced temperature (press DELICATE (DELICATE) button!) Drying in the tumble dryer not possible Important!

Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.

This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying. · Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed. · Do not dry cotton jersey and knitwear with the EXTRA (EXTRA) programme. Items may shrink!

Preparing laundry · To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons). · Empty pockets. Remove metal items (paper clips, safety pins, etc). Care label 8 electrolux · Turn items with double-layered fabrics inside out (e.

g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better. Important! Do not overload the appliance. Observe max. loading volume of 7 kg. Laundry weights Type of laundry Bag programmes end with a 10 minute cooling phase (light COOLING (COOLING) is on).

You may remove the laundry after this phase. Changing programme To change a programme which is running, first cancel it by turning the programme selector dial to " O ". Select the new programme and press the START/PAUSE (START/PAUSE) button .

10 electrolux Putting in extra items or taking items out before end of programme 1. Open loading door. Warning! Laundry and drum can become hot. Risk of burns! 2. Load or remove laundry items. 3. Close loading securely. Lock must audibly lock. 4. Press the START/PAUSE (START/ PAUSE) button to continue the drying cycle.

Drying cycle complete / removing laundry Once the ogramme overview" chapter). Clean lint filters. Clean fluff filter. Clean heat exchanger. Observe recommended loading volumes.

Uncover ventilation slots in base area. Clean inside surface of drum and drum ribs. Re-programme standard setting for degree of drying (see Programming options' chapter). Turn the programme knob to O off . Set the programme again.

Programme time is corrected autoAutomatic process; this is not a matically depending on type and machine fault. volume of laundry and level of dampness. Condensate tank is full. Empty condensate tank, then start programme with START/PAUSE (START/PAUSE) button. Select time programme or higher Not enough washing loaded or drying level (e.g. EXTRA (EXwashing loaded is too dry for selecTRA) instead of CUPBOARD ted programme. (CUPBOARD).

Drying cycle lasts an unusually long time. Note: After up to 5 hours the Lint filter clogged.

drying cycle ends automatically (see End of drying cycle'). Fluff filter clogged. Load volume too big. Laundry insufficiently spun. Clean lint filter. Clean fluff filter. Reduce load volume. Laundry must be adequately spun. Particularly high room temperature. Automatic process, there is no fault Temporary switching off of the with the appliance.

If possible, lowcompressor to avoid overload. er the room temperature. Discoloration Colour fastness of textiles. Check colour fastness of textiles. Only treat textiles together if they are a similar colour.

14 electrolux Technical data This appliance conforms with the following EU Directives: 2006/95/EC dated 12.12.2006 Low Voltage Directive 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC 93/68/EEC dated 22.

07.1993 CE Marking Directive Height x width x depth Drum volume Depth with loading door open Height can be adjusted by Weight when empty Loading volume (depends on Voltage Required fuse Total power Energy efficiency class Energy consumption (7 kg of cotton, predrained at 1000 rpm) 2) Average annual energy consumption Use Permissible ambient temperature programme)1) 85 x 60 x 58 cm 108 l 109 cm 1.5 cm approx. 40 kg max. 7 kg 230 V - 240 V

10 A 2350 W B 3.92 kWh 284,1 kWh Domestic + 5°C to + 35°C Consumption values The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances. @@@@Turn the programme selector to any programme. 2. @@@5 seconds.

3. The buzzer is by default always off. @@@@I. Turn the programme selector to any programme. 2. @@@@4. @@ · Energy consumption (corrected with final humidity) during the cupboard dry cotton cycle with half load. · Final humidity (during cupboard dry cotton, iron dry cotton and cupboard dry easy care) · Condensation efficiency (corrected with final humidity) during cupboard dry cotton cycle with nominal and half load All the cycles have to be checked in accordance with EN 61121 (Tumble dryers for household use Methods for measuring the performance). Installation Important! The appliance must be moved in vertical position for transport. Appliance positioning · It is recommended that, for your convenience, the machine is positioned close to your washing machine.

· The tumble dryer must be installed in a clean place, where dirt does not build up. · Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine. · To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. · Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. · The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance. Important! The hot air emitted by the tumble dryer can reach temperatures of up to 60°C.

The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC67550W user guide](http://yourpdfguides.com/dref/3896173)  
<http://yourpdfguides.com/dref/3896173>

**Important!** Should the appliance be moved, it must be transported vertically. 16 electrolux **Important!** The appliance must not be installed behind the lockable door, a sliding door a door with a hinge on the opposite side to that of the appliance. Removing transport safety packaging **Caution!** Before use all parts of the transport packaging must be removed. 1. Open loading door 2. @@. The appliance is supplied with a 13 amp plug fitted. @@@@ Connect the machine to an earthed socket, in accordance with current wiring regulations.

**Warning!** The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions. The wires in the mains lead are coloured in accordance with the following code: 1 Blue - Neutral 2 cord clamp 3 Brown - Live 4 Green and Yellow - Earth The wire coloured green and yellow must be connected to the terminal marked with the or colletter «E» or by the earth symbol oured green and yellow. The wire coloured blue must be connected to the terminal «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red.

@@ **Warning!** @@ Ensure that the cut off plug is disposed of safely. **Warning!** @@@@ **Special accessories** The following special accessories are available from your Electrolux Service Force Centre or your specialist dealer: Intermediate installation kits for stacked washer and iron aid appliance: These intermediate installation kits can be used to arrange the iron aid appliance and an automatic Electrolux washing machine (60cm wide, front loading) as a space-saving washer/iron aid stack. The automatic washing machine is at the bottom and the iron aid appliance is at the top. Two versions can be supplied: without stacker plate · with extractable stacker plate Read the manual supplied with the installation kit carefully. Service In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions - see chapter What to do if.

.. If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners. In order to be able to assist you quickly, we require the following information: Model description Product number (PNC) Serial number (S No. is on rating plate stuck to the product - to find it see chapter Product description )) Type of fault Any error messages displayed by the appliance So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here: Model description: PNC: S No: 18 electrolux Electrolux.

Thinking of you. www.electrolux.com 18 19 20 20 21 21 22 22 ..

. 24 26 27 28 28 29 30 ! ············ ! ············ electrolux 19 ············ ! >PE<, >PS< ············ - 20 electrolux 1 6 2 7 8 3 4 5 9 10 1 2 3 4 5 6 7 8 9 10 1 2 4 5 1 2 "" 3 electrolux 21 3 "" 4 5 30 1. TIME 2. START/PAUSE//Extra Strong Cupboard Damp Iron 7 7 7 7 3 3 3 1 3 1 5 7 Extra Cupboard Iron 30' 60' Mix 1 Easy Jeans 22 electrolux / 10 Buzzer[ ] Cooling 1 · / COTTONS SYNTHETICS · DELICATE[ ] · ! 7 1200 100 700 500 200 250 200 100 200 100 600 200 500 100 100 ! · · Extra · · 1. electrolux 23 1 2 3 4 2. ! 3. DELICATE Delicate3 1. Delicate Dryness Dryness MINMAX Dryness End Buzzer Buzzer ····· Delay 36 9 3 6 9 START/PAUSE/ 99h Start/ Pause/ 1 DELICATE 2 Dryness 3 Buzer 4 Delay 24 electrolux 39h 6h 36h 3h 9 3h "O" START/ PAUSE/ PAUSE START/PAUSE/ START/PAUSE/ START/PAUSE/ DRYING COOLING 10 Cooling[ ] " O " START/PAUSE/ 1. ! 2. 3.

4. START/PAUSE// ANTICREASE/END / Buzzer WOOL[ ] 30 1. 2. "" 3. 4. off ! : - - "" 5. ! 1. 2. 3. electrolux 25 ) 2.

4. 5. 3. START/PAUSE/ 4 1000/7 ! 1. 2.

! 1. 26 electrolux 6. ! 7. 8. 9.

3. 4. ! ! 5. ! ... START/PAUSE / START/PAUSE/ electrolux 27 "" "" - CONTAINER ANTICREASE 5 "" O off START/ PAUSE/ Extra Cupboard

12.12.20062006/95/EC 03.05.

198989/336/EEC EMC 92/31/EEC 22.07.199393/68/EEC CE x x 1) 85 x 60 x 58 108 1 109 1.5 40 7 28 electrolux 71000 rpm 2) 230 V - 240 V 10 A 2350 B 3.92 / 284,1/ +5°C + 35°C COTTONCUPBOARD 2) 3) COTTONIRON 2) SYNTHETICSCUPBOARD 2) kWh/ 3.92 / 125 71000 rpm 3,6 / 119 71400 rpm 3.34 / 107 71000 rpm 1.33 / 48 31200 rpm 1) 2) EN 61121 BUZZER 1. 2. DELICATE DRYNESS 5 3.

BUZZER 1. 2. DRYNESS START/PAUSE / 5 <300 micro S/cm 300-600/ >600/ 3. START/PAUSE START PAUZE / 4. DRYNESS START/ PAUSE / O off ····· electrolux 29 · EN 61121 - ! ············ deppile ! 60°C +5°C +35°C ! ! ! 1.

2. 3. "" ! . 13 amp 13 amp ASTABS 1363/A 30 electrolux 4 ! 13 amp ! 3 iron aid iron aid 60 /iron aid iron aid · · 3 1 2 1 - 2 3 - 4 - "E" "N" "L" - " - - (PNC) - -

- - -

.. " electrolux 31 www.electrolux.com www.electrolux.com.sg 136908650-02-20012008 .



**[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDC67550W user guide](http://yourpdfguides.com/dref/3896173)**  
<http://yourpdfguides.com/dref/3896173>