



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EDH 97941. You'll find the answers to all your questions on the AEG-ELECTROLUX EDH 97941 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EDH 97941**  
**User guide AEG-ELECTROLUX EDH 97941**  
**Operating instructions AEG-ELECTROLUX EDH 97941**  
**Instructions for use AEG-ELECTROLUX EDH 97941**  
**Instruction manual AEG-ELECTROLUX EDH 97941**



gebruiksaanwijzing  
notice d'utilisation  
benutzerinformation  
user manual

Wasdroger  
Sèche-linge  
Wäschetrockner  
Tumble dryer

EDH 97941 W



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH 97941 user guide](http://yourpdfguides.com/dref/3924662)  
<http://yourpdfguides.com/dref/3924662>

**Manual abstract:**

*Important safety information Environment Installation Product description Control panel Before first use 39 41 41 43 43 43 Programme chart 43 Daily use 45 Care and cleaning 46 What to do if . In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. - Please read the instruction book before using this appliance. general safety Â· It is dangerous to alter the specifications or attempt to modify this product in any way. â· This appliance is not intended for use by persons (including children) with reduced physical and sensory conditions or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. â· Make sure that small children and pets do not climb inside the drum. To avoid this, please check into the drum before using. â· Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage. Age and must not be placed into the machine.*

*In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts etc. (these items accumulate heat). Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. Always unplug the appliance after use, cleaning and maintenance. @@@@ contact your local Service Centre.*

*Always insist on genuine spare parts. @@Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.*

*Risk of fire: items that have been spotted or soaked with vegetable or cooking Oil constitute a fire hazard and should not be placed in the tumble dryer. @@@@Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. â· Lint must not be allowed to accumulate around the tumble dryer. Do not spray down the appliance with jets of water. â· The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. â· The tumble dryer is not to be used if industrial chemicals have been used for cleaning. â· Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Care should be taken when moving it. â· When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. â· All packaging must be removed before use.*

*Serious damage can occur to the product and to property if this is not adhered to. @@@@Follow the instructions on each garment label. Clothes which are dripping wet should not be placed in the dryer. @@@@ â· Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. â· Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. â· Fabric softeners, or similar products should be used as specified by the fabric softener instructions. â· Caution - hot surface : Do not touch the door light cover surface when the light is switched on. (Only dryers equipped with internal drum light) Child safety Â· This machine is not intended for use by young children or infirm persons without supervision. â· Children often do not recognise the hazards associated with electrical appliances. @@@@Keep all detergents in a safe place out of children's reach.*

*@@@@@@@@@@@@@@@@The refrigerant circuit in the heat pump must not be damaged. warning! @@@@@@@@@@@@@@@@@@If it is not, raise or lower the feet until it is. â· The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor.*

*Otherwise the compressor could be damaged. This might cause heat built-up which would interfere with the operation of the appliance. The appliance must therefore not be installed on floors which are not resistant to high temperatures. â· When operating the tumble dryer, the room temperature must not be lower than +5Â°C and higher than +35Â°C, as it may affect the performance of the appliance. â· Should the appliance be moved, it must be transported vertically.*

*@@ removing transport safety packaging Caution! Before use all parts of the transport packaging must be removed. @@@@ warning! The plug must be accessible after installing the machine. @@The engineer will carry out the door reversal at your cost. @@ the washing machine is at the bottom and the dryer is at the top. Read carefully the instructions supplied with the kit. @@@@Fixed hose has to be on the suitable height from minimum of 50 cm to maximum of 1 m from floor level and cannot be looped. if possible shorten the draining hose. Read carefully the instructions supplied with the kit. Available from your Service Force Centre or your specialist dealer Â· Pull off adhesive strips from inside machine on top of drum. Electrical connection Details on mains voltage, type of current and the fuses required should be taken from the type plate.*

*To situate the dryer at the optimal height and have some additional space to store (e. Read carefully the instructions supplied with the kit. Available from your Service Force Centre or your specialist dealer Control panel Water reservoir Fine fluff filters Fluff filters Loading door (reversible) Push button for base door opening Course fluff filters Rating plate Condenser Ventilation grille Base door Adjustable feet Start/Pause button clean condenser, Warning lights: clean fluff filters, full water reservoir 8 Delay (Startuitstel) button and delay start indicators. In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (ca.*



**[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH 97941 user guide](http://yourpdfguides.com/dref/3924662)**  
**<http://yourpdfguides.com/dref/3924662>**

) there could be a slightly higher sound level. To dry thin fabrics which are not ironed, e. g. @@To dry thin fabrics which are also to be ironed, e. @@ after this programme the cloths iron easiest. To have good result, we recommend to shake the wet cloths and put straight in the tumble dryer. @@@@ g. With cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better. @@This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying. â Do not dry new, coloured textiles together with lightambient temperature Turn the programme selector to any programme.

Turn the programme selector to any programme. Press the Start/Pause button until you set desired level: - the LED on - low conductivity <300 S/cm - the LED on - medium conductivity 300-600 S/cm - the LED on - high conductivity >600 S/cm 4. To memorize setting press simultaneously the Dryness (Droogtegraad) and Start/Pause buttons or turn knob to off position 1) Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH 97941 user guide](http://yourpdfguides.com/dref/3924662)

<http://yourpdfguides.com/dref/3924662>