




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EDH3284PDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EDH3284PDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EDH3284PDW
User guide AEG-ELECTROLUX EDH3284PDW
Operating instructions AEG-ELECTROLUX EDH3284PDW
Instructions for use AEG-ELECTROLUX EDH3284PDW
Instruction manual AEG-ELECTROLUX EDH3284PDW

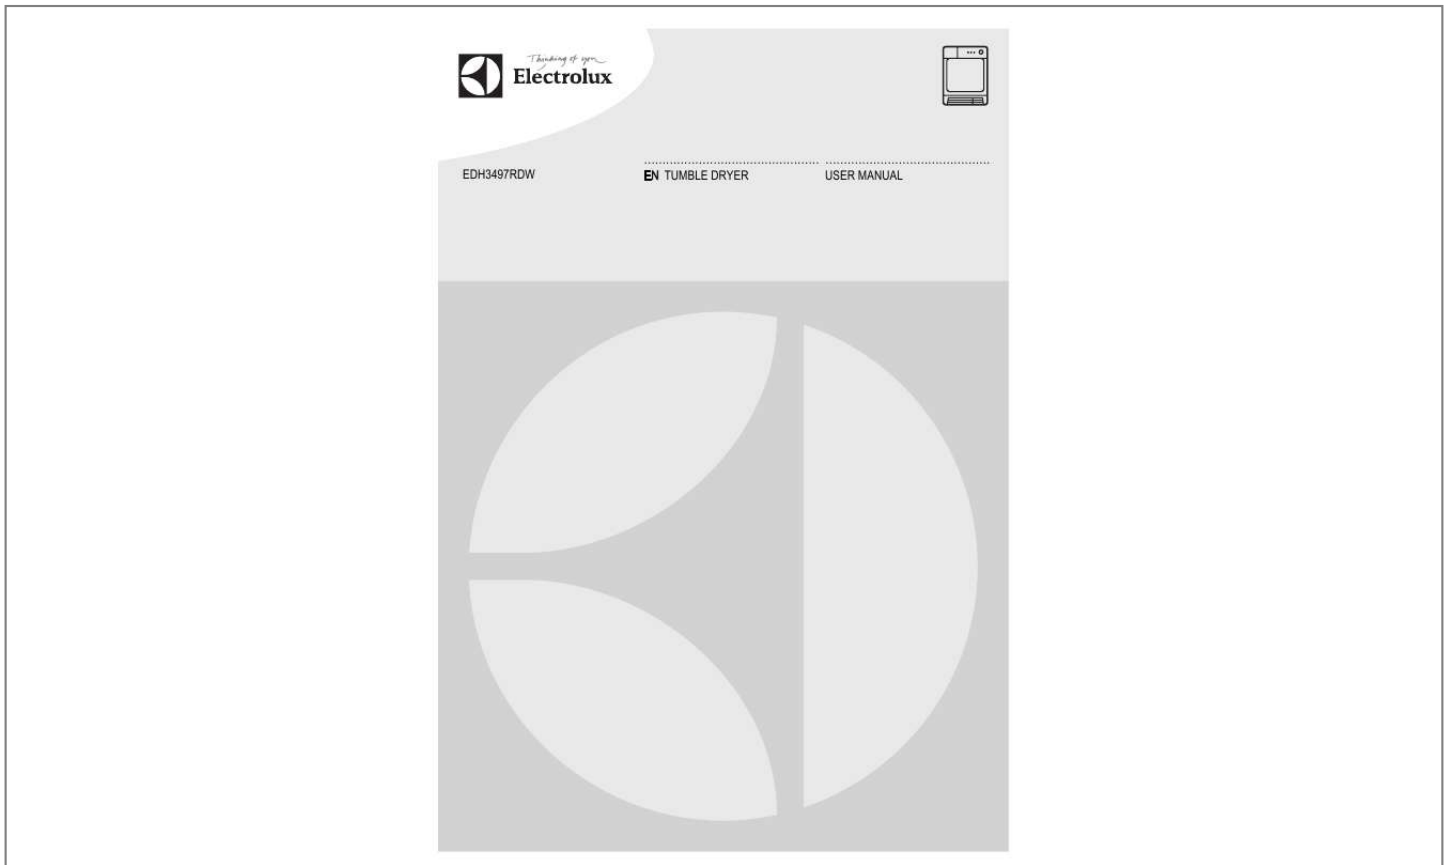

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH3284PDW user guide](http://yourpdfguides.com/dref/4727363)
<http://yourpdfguides.com/dref/4727363>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *EN TUMBLE DRYER USER MANUAL 2* www.electrolux.com *CONTENTS 1. 2. 3. 4. 5. 6.*
7. 8. 9. 10. 11.

SAFETY INSTRUCTIONS

.....
.....
.....
.....

..... *3 PRODUCT DESCRIPTION*

.....
.....
.....

.....
.....
.....

..... *5 CONTROL PANEL*

.....
.....
.....
.....

.....
.....
.....

..... *6 PROGRAMMES*

.....
.....
.....

.....
.....
.....

..... *7 OPTIONS*

.....
.....
.....

.....
.....
.....

..... *8 SETTINGS*

.....
.....
.....

.....
.....
.....
.....

.....
.....

..... 9 DAILY USE .

.....
.....
.....
.....

.....
.....

..... 10 HINTS AND TIPS .

.....
.....
.....
.....

.....
.....

..... 11 CARE AND CLEANING .

.....
.....
.....
.....

..... 12 TROUBLESHOOTING

.....
.....
.....
.....

.....
.....

..... 15 TECHNICAL DATA . . .

.....
.....
.....
.....

.....
.....
.....

. 16 WE'RE THINKING OF YOU Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux. Visit our website for: Get usage advice, brochures, trouble shooter, service information: www.electrolux.com Register your product for better service: www.electrolux.com

com/productregistration Buy Accessories, Consumables and Original spare parts for your appliance: www.electrolux.com/shop CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number. Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice. ENGLISH 3 1. SAFETY INSTRUCTIONS Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages.

Always keep the instructions with the appliance for future reference. •Always be careful when you move the appliance because it is heavy. Always wear safety gloves. •Always move the appliance vertically. •The rear surface of the appliance must be put against the wall.

•Make sure that there is air circulation between the appliance and the floor. @@@@Read it carefully before installation (Refer to the Installation leaflet). •Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels,

including open fires. •The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).

@@@Risk of suffocation, injury or permanent disability.

@@ •Do not let children play with the appliance. •Keep all packaging away from children. •Keep all detergents away from children. •Keep children and pets away from the appliance door when it is open. •Cleaning and user maintenance shall not be made by children without supervision. 1.2 Installation • Remove all the packaging. •Do not install or use a damaged appliance. •Obey the installation instruction supplied with the appliance. •Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.

•Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C. •Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened. Electrical connection WARNING! Risk of fire and electrical shock. •The appliance must be earthed. •Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician. •Always use a correctly installed shockproof socket. •Do not use multi-plug adapters and extension cables. •Make sure not to cause damage to the mains plug and to the mains cable. 4 www.

electrolux.com •••Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. Connect the mains plug to the mains socket only at the end of the installation. @@Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

Do not touch the mains cable or the mains plug with wet hands. Only for UK and Ireland. The appliance has a 13 amp mains plug. @@Directives. •1.

3 Use WARNING! @@•Do not change the specification of this appliance. @@@@•Do not run the appliance without a filter. Clean the lint filter before or after each use. •Wipe away lint that has accumulated around the appliance. @@•Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and •••clothes or pillows fitted with foam rubber pads.. Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent. Do not dry items in the appliance if industrial chemicals have been used for cleaning. Make sure that no gas lighters or matches have been left in the pockets of the clothing. Only dry fabrics which are applicable to dry in the tumble dryer.

Follow the instructions on the fabric label. Do not dry not washed items in the appliance. If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer. Do not drink or prepare food with the condensed water. It can cause health problems to people and pets. Do not sit or stand on the open door. Obey the maximum load volume of 9 kg (refer to the "Programme chart" chapter). Do not dry dripping wet clothes in the tumble dryer. 1.4 Care and Cleaning WARNING! Risk of injury or damage to the appliance.

•Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. •Do not use water spray and steam to clean the appliance. •Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

ENGLISH 5 1.5 Internal light WARNING! Risk of injury. Visible LED radiation, do not look directly into the beam. To replace the internal light, contact the Service. •Cut off the mains cable and discard it.

•Remove the door catch to prevent children and pets to get closed in the appliance. Compressor WARNING! Risk of damage of the appliance. •The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chlorohydrocarbons. This system must stay tight. The damage of the system can cause a leakage.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH3284PDW user guide](http://yourpdfguides.com/dref/4727363)
<http://yourpdfguides.com/dref/4727363>

1.6 Disposal WARNING! Risk of injury or suffocation. • Disconnect the appliance from the mains supply. 2. @@@@Do not wear gloves when you operate with the control panel.

@@Child lock. Water container. Filter. Condenser. Drying phase. Cooling phase. Crease guard phase. Delay start. Reverse plus. Drying level Programme duration.

Delay start duration. - ENGLISH 7 4. @@Low temperature programme. Delicate programme with warm air. @@@@Shake the items before you put them in the appliance.

@@@@@/ 9kg / Refreshing a textiles that were in storage. @@/ 1kg (or 1 pair of sport shoes) Wool fabrics. Remove Immediately the items when the programme is completed. / 1kg Delicate fabrics. @@@@Shake the items before you put them in the appliance.

@@@@@at the neck, cuffs and seams). @@@@3) Only with the Drying Rack 8 ate the appliance 2. @@@@4. @@@@@@Refer to the supplied leaflet for available accessories. Deactivating the water container indicator 1. Press the on/off button to activate the appliance 2. @cator – The indicator of the water container is off. After approximately 4 seconds, the 2 indicators go off. • The indicators and are on. – The indicator of the water container is on.

@@It comes on when the pro- 7. @@• Start a short programme (e.g. 30 minutes) with moist laundry. @@@@Prepare the laundry and load the appliance. 2. Press the on/off button to activate the appliance. 3. Set the correct programme and options for the type of load. • The display shows the programme duration.

4. Press the Start/Pause touchpad, the programme starts. ENGLISH 11 CAUTION! Make sure that when you close the door, the laundry does not catch between the appliance door and the rubber seal. 3. Set the programme.

7.5 At the end of the programme When the programme is completed, • An intermittent acoustic signal operates. • The indicator flashes. • The indicator comes on. • The Start/Pause indicator is on.

The appliance continues to operate with the crease guard phase for approximately other 30 minutes. The crease guard phase removes creases from your laundry. You can remove the laundry before the crease guard phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed or completed. When the crease guard phase is completed: • The icted to the mains socket. Make sure that there is not a damaged fuse in the fuse box. The programme does not start. Press Start/Pause. Make sure that the appliance door is closed. The appliance door does not close.

Make sure that the installation of the filter is correct. Make sure that the laundry does not catch between the appliance door and the rubber seal. 16 www.electrolux.com Problem The appliance stops during operation. @@Press Start/Pause to start the programme again. @@Make sure that the filter is clean. The laundry is too wet. Spin the laundry in the washing machine again. @@The display shows Err.

Set the Time Drying or the Extra Dry programme. If you want to set a new programme, deactivate and activate the appliance. Make sure that the options are applicable to the programme. The display shows E51) Deactivate and activate the appliance. Start a new programme.

@@• The drum is dirty. • Incorrect setting of the conductivity sensor. @@• The filter is clogged. • The condenser is clogged. 11.

TECHNICAL DATA Dimensions (mm) Max. depth (with the appliance door open) Max. @@@@Max. kWh/cycle 57 kg 9 kg Household 5 °C 35 °C 2,15 kWh 108,8 kWh A 0,05 W 0,05 W 1) With reference to EN 61121. 9 kg of cotton and a spin speed at 1000 rpm. 2) This is the approximate energy consumption for the 4 persons who correctly use the appliance. 12. ENVIRONMENT CONCERNS Recycle the materials with the symbol. Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. 18 www.electrolux.com ENGLISH 19 www.electrolux.com/shop 136923820-A-202012 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDH3284PDW user guide](http://yourpdfguides.com/dref/4727363)
<http://yourpdfguides.com/dref/4727363>