




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EDP2074PDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EDP2074PDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EDP2074PDW**  
**User guide AEG-ELECTROLUX EDP2074PDW**  
**Operating instructions AEG-ELECTROLUX EDP2074PDW**  
**Instructions for use AEG-ELECTROLUX EDP2074PDW**  
**Instruction manual AEG-ELECTROLUX EDP2074PDW**

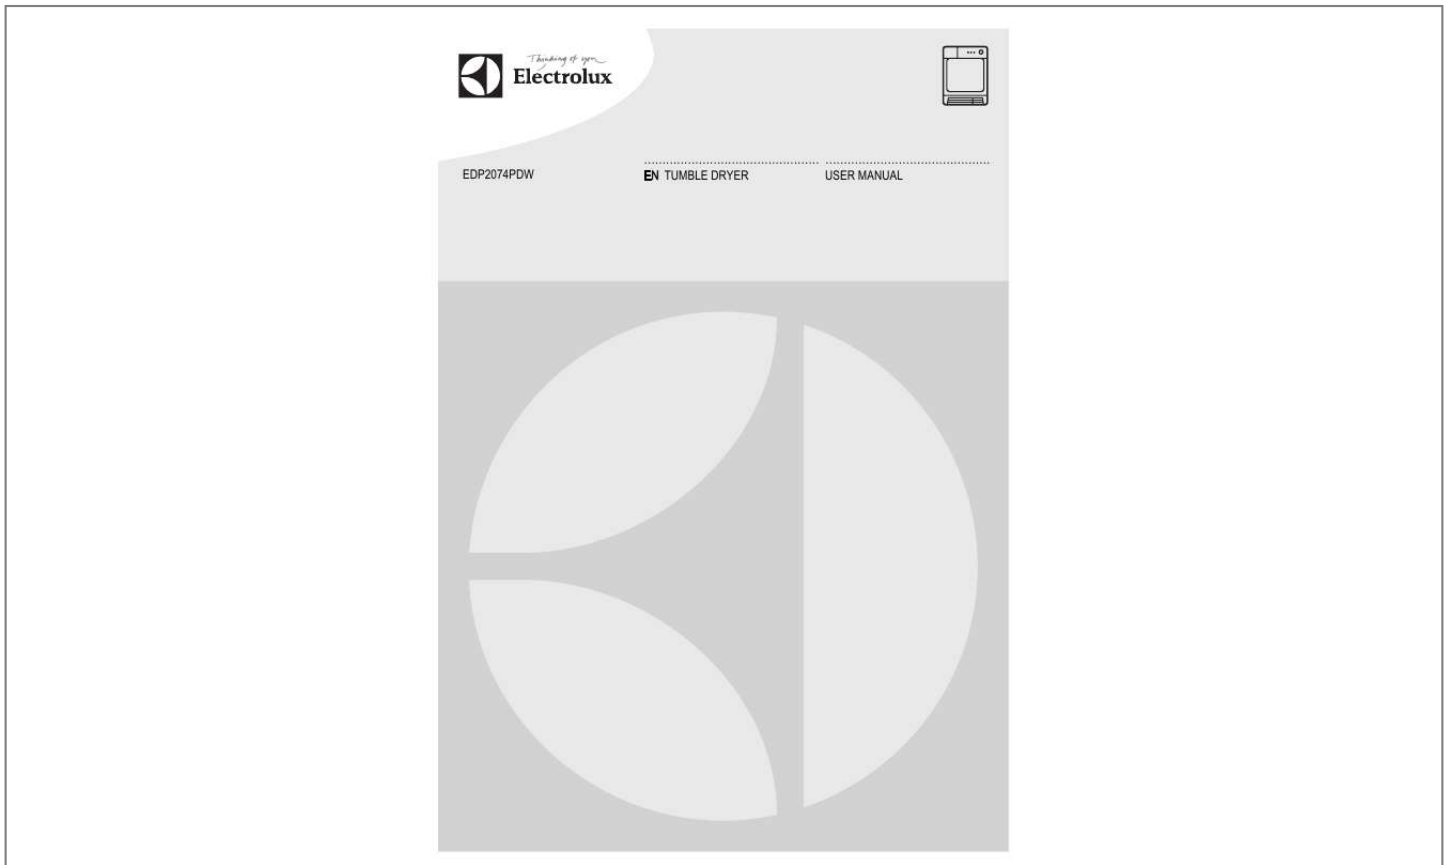

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDP2074PDW user guide](http://yourpdfguides.com/dref/5028425)  
<http://yourpdfguides.com/dref/5028425>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. *EN TUMBLE DRYER USER MANUAL 2* [www.electrolux.com](http://www.electrolux.com) *CONTENTS 1. 2. 3. 4. 5. 6.*  
*7. 8. 9. 10. 11.*

*12. SAFETY INSTRUCTIONS . . . .*  
.....

.....  
.....  
.....  
.....

*. . . . . 3 PRODUCT DESCRIPTION . . . .*

.....  
.....  
.....

.....  
.....  
.....

*. . . . . 5 CONTROL PANEL . . . . .*

.....  
.....  
.....  
.....

.....  
.....  
.....

*5 PROGRAMME TABLE . . . . .*

.....  
.....  
.....  
.....

*. . . . 6 OPTIONS . . . . .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*7 SETTINGS . . . . .*

.....



**SAFETY INSTRUCTIONS** Before the installation and use of the appliance, carefully read the supplied instructions. Always keep the instructions with the appliance for future reference. Always wear safety gloves. Always move the appliance vertically. Make sure that there is air circulation between the appliance and the floor. Read it carefully before installation (Refer to the Installation leaflet). Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet). When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

**1.1 Children and vulnerable people safety WARNING!** Risk of suffocation, injury or permanent disability. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction for the operation of the appliance by a person who is responsible for their safety. Do not let children play with the appliance. Keep all packaging away from children. Keep all detergents away from children. Keep children and pets away from the appliance door when it is open. Do not install or use a damaged appliance. Obey the installation instruction supplied with the appliance. Risk of fire and electrical shock. The appliance must be earthed. If not, contact an electrician. Always use a correctly installed shockproof socket. Do not use multi-plug adapters and extension cables. Make sure that there is access to the mains plug after the installation.

Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. Do not touch the mains cable or the mains plug with wet hands. This appliance complies with the E.E.

**C. Directives. 1.3 Use WARNING!** Risk of fire, explosion, electric shock or damage to the appliance Use this appliance in a household only. Do not change the specification of this appliance. The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged. If you stop the appliance before the end of the drying cycle, immediately remove and spread out all items, so that the heat can dissipate. If you use fabric softener or similar products, obey the instructions on the packaging. Do not run the appliance without a filter. Clean the lint filter before or after each use.

Wipe away lint that has accumulated around the appliance. Do not dry the damaged items which contain padding or fillings. Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads. Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent. Do not dry items in the appliance if industrial chemicals have been used for cleaning. Make sure that no gas lighters or matches have been left in the pockets of the clothing. Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label. Do not dry not washed items in the appliance.

If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer. Do not drink or prepare food with the condensed water. It can cause health problems to people and pets. Do not sit or stand on the open door. Obey the maximum load volume of 7 kg (refer to the "Programme chart" chapter).

Risk of injury or damage to the appliance. Do not use water spray and steam to clean the appliance. Clean the appliance with a moist soft cloth. Only use neutral detergents. Risk of injury or suffocation.

Disconnect the appliance from the mains supply. Cut off the mains cable and discard it. Do not wear gloves when you operate with the control panel. Crease guard phase. Condenser. Water container. Filter. Delay start. Child lock. Acoustic signals.

**Programme duration. Time Drying duration. - Delay start duration. 4.** / 7kg / Drying level: strong dry. / 7kg / Drying level: cupboard dry. / 7kg / Drying level: applicable for iron. / 7kg / Synthetic fabrics Drying level: extra dry. / 3kg / Drying level: cupboard dry. / 3kg / Drying level: applicable for iron. / 3kg / Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air. / 1kg Refreshing a wool fabrics. Wool items become soft and cosy.

Remove the items immediately after the programme end. Shake the items before you put them in the appliance.

rics that have the symbol label (e).



**[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDP2074PDW user guide](http://yourpdfguides.com/dref/5028425)**  
<http://yourpdfguides.com/dref/5028425>

g. acrylic, viscose).

@@ You can use this function to activate or deactivate the sound. @@@@ • Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme. • Remove all items from the pockets. @@ Make sure that the cotton layer is always external. @@ • Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed. • Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.

• Make sure that the laundry weight is not more than the maximum weight that is in the programme table. • Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items. Fabric Description label Laundry that is applicable for tumble dryer. Laundry that is applicable for tumble dryer. Set the programme with standard temperature. Laundry that is applicable for tumble dryer. Set the programme with low temperature. Laundry that is not applicable for tumble dryer. 9.

CARE AND CLEANING 9.1 Cleaning the filter 1. 2. 2 1 3. 4.

ENGLISH 11 5.1) 6. 1 2 1) if necessary, clean the filter with hot water. 9.2 Draining the water container 1.

2. 3. 4. You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter. 9.3 Cleaning the condenser 1. @@ Only use neutral detergents.

Do not use abrasive products, abrasive cleaning pads or solvents. @@@@ Only use neutral detergents. Do not use 10. TROUBLESHOOTING 10.1 Problem You cannot activate the appliance. Possible solution Make sure that the mains plug is connected to the mains socket. Make sure that there is not a damaged fuse in the fuse box. The programme does not start. Press Start/Pause . ENGLISH 13 Problem Possible solution Make sure that the appliance door is closed. The appliance door does not close. Make sure that the installation of the filter is correct. Make sure that the laundry does not catch between the appliance door and the rubber seal. The appliance stops during operation. The display shows a long programme duration.

1) Make sure that the water container is empty. Press Start/Pause to start the programme again. Make sure that the weight of the laundry is applicable to the duration of the programme. Make sure that the filter .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EDP2074PDW user guide](http://yourpdfguides.com/dref/5028425)

<http://yourpdfguides.com/dref/5028425>