




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EFG50300X. You'll find the answers to all your questions on the AEG-ELECTROLUX EFG50300X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EFG50300X
User guide AEG-ELECTROLUX EFG50300X
Operating instructions AEG-ELECTROLUX EFG50300X
Instructions for use AEG-ELECTROLUX EFG50300X
Instruction manual AEG-ELECTROLUX EFG50300X

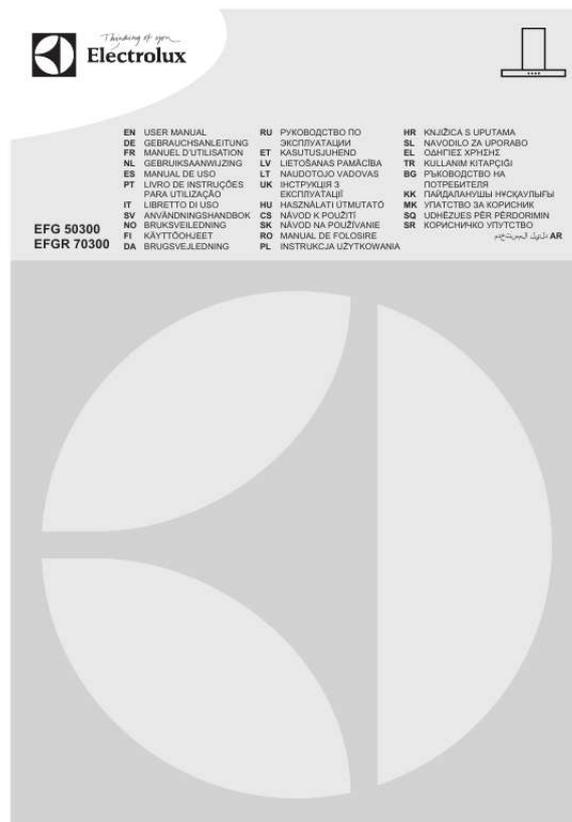

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EFG50300X user guide](http://yourpdfguides.com/dref/4727365)
<http://yourpdfguides.com/dref/4727365>

Manual abstract:

ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. welcome to Electrolux. Visit our website to: Get usage advice, brochures, trouble shooter, service information: [www. electrolux. Com](http://www.electrolux.com) Register your product for better service: www. electrolux. Com/productregistration Buy Accessories, Consumables and Original spare parts for your appliance: www. electrolux. Com/shop

ENVIRONMENT CONCERNS Recycle the materials with the symbol .

put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate.

Subject to change without notice.

Closely follow the instructions set out in this manual. The extractor hood has been designed exclusively for domestic use. Always wear work gloves for all installation and maintenance operations. The appliance is not intended for use by children or persons with impaired physical, sensorial or mental faculties, or if lacking in experience or knowledge, unless they are under supervision or have been trained in the use of the appliance by a person responsible for their safety. This appliance is designed to be operated by adults, children should be monitored to ensure that they do not play with the appliance.

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance. Never use the hood without effectively mounted grating! The hood must NEVER be used as a support surface unless specifically indicated. The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels. The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels. The flaming of foods beneath the hood itself is severely prohibited. SAFETY INSTRUCTIONS Caution! Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks. We will not accept any responsibility for any faults, damage or fires caused to the appliance as a result of the non-observance of the instructions included in this manual. 2. USE The hood serves to aspirate the fumes and vapors resulting from cooking.

The attached installation manual indicates the version to be used depending on the model you have, the suction version with external evacuation internal recirculation or filtering with . 3. INSTALLATION The mains power supply must correspond to the rating indicated on the plate situated inside the hood. If provided with a plug connect the hood to a socket in compliance with current regulations and positioned in an accessible area, after installation. If it not fitted with a plug (direct mains connection) or if the plug is not located in an accessible area, after installation, apply a double pole switch in accordance with standards which assures the complete disconnection of the mains under conditions relating to over-current category III, in accordance with installation instructions. warning! ENGLISH 5 Warning! 4. The charcoal filter may NOT be washed or regenerated. ATTENTION!

Clean using the cloth dampened with neutral liquid detergent. Therefore, we recommend observing these instructions. 4.

Use the high suction speed in cases of concentrated kitchen vapours. 2. Speed increase button By pressing the button, the hood starts 6 www. Pressing the button (while the hood is on) modifies the motor speed: Speed 1: the number "1" appears on the display Speed 2: the number "2" appears on the display Speed 3: the number "3" appears on the display High-speed: the number "4" appears (flashing) on the display The high-speed function is regulated by a timer. The standard time setting is 5', at the end of which the hood adjusts to speed 2.

Press button 2 to deactivate this function before the set time expires; the hood will adjust to speed 1. Display Speed timer button Press button "4" to activate the speed timer; the hood turns off once the set time expires. press and hold button 1 or 3 to reset the indicator. press and hold button 1 or 3 to reset the indicator. The first operation resets the grease filter indicator, while the second operation resets the charcoal filter indicator.

The charcoal filter indicator is not active in the standard mode. If the hood is used in the recirculation mode, the charcoal filter indicator must be activated.

Perform the following steps to activate the charcoal filter indicator: Turn the hood off and keep buttons 2 and 3 pressed for 3". The numbers "1" and "2" will flash for 2" once the function has been activated. Charcoal filter indicator deactivation: Turn the hood off and keep buttons 1 and 2 pressed for 3". The number "1" will flash for 2" to indicate that the function has been deactivated. 6. LIGHTING Disconnect the hood from the electricity. warning! Prior to touching the light bulbs ensure they are cooled down. Manglende overholdelse af kravene for rengøring af emhætten, og for udskiftning og rengøring af filtrene, medfører brandfare.

Hvis emhætten ikke er udstyret med et stik (direkte tilslutning til elnettet), eller hvis stikket ikke findes i et område, der også er let tilgængeligt efter installeringen, skal der monteres en topolet afbryderkontakt i overensstemmelse med standarderne, der sørger for fuld afbrydelse fra elnettet i tilfælde af forhold i overspændingskategori III, og i overensstemmelse med reglerne for elektriske installationer. Første gang nulstilles advarslen for fedtfilteret, anden gang nulstilles advarslen for kulfilteret. Com tōmbekiirus (-vōimsus) 1: kuvarile ilmub number 1; tōmbekiirus (-vōimsus) 2: kuvarile ilmub number 2; tōmbekiirus (-vōimsus) 3: kuvarile ilmub number 3; intensiivne tōmbekiirus (-vōimsus): kuvarile ilmub number 4 (vilgub). Tōōtamisaja määramisel on vōimalikud järgmised seaded: • tōmbekiirus (-vōimsus) 1: 20 minutit (kuvarile ilmub number 1 ja väike mä).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EFG50300X user guide](http://yourpdfguides.com/dref/4727365)
<http://yourpdfguides.com/dref/4727365>