



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX ENN2801EOW. You'll find the answers to all your questions on the AEG-ELECTROLUX ENN2801EOW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX ENN2801EOW
User guide AEG-ELECTROLUX ENN2801EOW
Operating instructions AEG-ELECTROLUX ENN2801EOW
Instructions for use AEG-ELECTROLUX ENN2801EOW
Instruction manual AEG-ELECTROLUX ENN2801EOW



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ENN2801EOW user guide](http://yourpdfguides.com/dref/5028431)
<http://yourpdfguides.com/dref/5028431>

Manual abstract:

@@ welcome to Electrolux. @@ electrolux. Com Register your product for better service: www. electrolux. @@ electrolux. Com/shop CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. model , PNC , Serial Number. Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice.

eNGLISH 3 1. SAFETY INSTRUCTIONS In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. ⚠ The appliance is intended for keeping foodstuff and/or beverages in a normal household and similar applications such as: ⚠ staff kitchen areas in shops, offices and other working environments; ⚠ farm houses and by clients in hotels, motels and other residential type environments; ⚠ bed and breakfast type environments; ⚠ catering and similar non-retail applications. ⚠ Do not use a mechanical device or any artificial means to speed up the thawing process. ⚠ Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacturer. ⚠ Do not damage the refrigerant circuit.

⚠ The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged. @@@@ wARNING! @@ 1. 1 Children and vulnerable people safety ⚠ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. ⚠ Keep all packaging well away from children. There is risk of suffocation. ⚠ If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it. ⚠ If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire. 3. Make sure that you can come to the mains plug of the appliance. 4. Do not pull the mains cable. 5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire. 6.

You must not operate the appliance without the lamp cover (if foreseen) of interior lighting. this appliance is heavy. Care should be taken when moving it. Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns. avoid prolonged exposure of the appliance to direct sunlight.

Bulb lamps (if foreseen) used in this appliance are special purpose lamps selected for household appliances use only. They are not suitable for household room illumination. ⚠ Ice lollies can cause frost burns if consumed straight from the appliance. 1. 4 Care and cleaning ⚠ Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.

⚠ Do not clean the appliance with metal objects. ⚠ Do not use sharp objects to remove frost from the appliance. use a plastic scraper. ⚠ Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. @@ 1. @@@@ Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. in that case retain packing. @@@@ 3 Daily Use ⚠ Do not put hot pot on the plastic parts in the appliance.

⚠ Do not store flammable gas and liquid in the appliance, because they may explode. ⚠ Do not place food products directly against the air outlet on the rear wall. (If the appliance is Frost Free) ⚠ Frozen food must not be re-frozen once it has been thawed out. ⚠ Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions. ⚠ Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance. eNGLISH 5 1. 6 Service ⚠ Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person. ⚠ This product must be serviced by an authorized Service Centre, and only genuine spare parts must be used. 1. 7 Environment Protection This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials.

The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the applicable regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially at the rear near the heat exchanger. The materials used on this appliance marked by the symare recyclable. 3 Temperature regulation To operate the appliance, proceed as follows: ⚠ touch the temperature regulator button until the LED corresponding to the required temperature lights up. selection is progressive , varying from 2 to 8°C. At first button touch actual setting LED keeps blinking. Any time the button is touch the set temperature is moved to 1 position right. corresponding LED will blink for a while.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ENN2801EOW user guide](http://yourpdfguides.com/dref/5028431)
<http://yourpdfguides.com/dref/5028431>

Touch the setting button until the required temperature is selected.

The set will be fixed coldest setting: +2°C warmest setting: +8°C A medium setting is generally the most suitable. ON/OFF button 2. 1 Switching on Insert the plug into the wall socket. Touch the temperature regulator button if all LED are off. 2. The LED corresponding to the symbol Fast Freeze indicator lights up. The Fast Freeze indicator will light off. 2. This function stops automatically after 52 hours. WARNING! 3.

Place the fresh food to be frozen in the top compartment. 3. 3. 3. 3. 3. 3. 3. When the ventilation slots are closed: the natural moisture content of the food in the fruit and vegetable compartments is preserved for contain chemicals that can attack/damage the plastics used in this appliance. After cleaning, reconnect the equipment to the mains supply. 5. Rinse and dry thoroughly. 5. 5. Defrost the freezer when the frost layer reaches a thickness of about 3-5 mm. Com About 12 hours prior to defrosting, set the Temperature regulator toward higher settings, in order to build up sufficient chill reserve for the interruption in operation.

To remove the frost, follow the instructions below: 1. Remove any stored food, wrap it in several layers of newspaper and put it in a cool place. CAUTION! Do not touch frozen goods with wet hands. Hands can freeze to the goods. leave the door open.

In order to speed up the defrosting process, place a pot of warm water in the freezer compartment. In addition, remove pieces of ice that break away before defrosting is complete. When defrosting is completed, dry the interior thoroughly. switch on the appliance. After two or three hours, reload the previously removed food into the compartment. Never use sharp metal tools to scrape off frost from the innerliner as you could damage it. Do not use a mechanical device or any artificial means to speed up the thawing process other than those recommended by the manufacturer. A temperature rise of the frozen food packs, during defrosting, may shorten their safe storage life. 5. 4 Periods of non-operation When the appliance is not in use for long periods, take the following precautions: Disconnect the appliance from electricity supply remove all food defrost (if foreseen) and clean the appliance and all accessories leave the door/doors ajar to prevent unpleasant smells.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure. Before troubleshooting, disconnect the power supply. problem The appliance is noisy. The appliance does not operate. Stands stable (all the feet should be on the floor). The plug is note door where the nail must be fitted (K). K Ha Place the small square on the guide again and fix it with the screws supplied. Align the kitchen furniture door and the appliance door by adjusting the part (Hb). Hb Hb Press the part (Hd) on the part (Hb). Do a final check to make sure that: All screws are tightened.

NOISES There are some sounds during normal running (compressor, refrigerant circulation). TECHNICAL DATA Dimension of the recess Height Width Depth Rising Time Voltage Frequency The technical information are situated in the rating plate on the internal left side of the appliance and in the energy label. 1780 mm 560 mm 550 mm 22 h 230-240 V 50 Hz 10. ENVIRONMENT CONCERNS Recycle the materials with the symbol. put the packaging in applicable containers to recycle it.

Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ENN2801EOW user guide](http://yourpdfguides.com/dref/5028431)
<http://yourpdfguides.com/dref/5028431>