



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EOB5441AAX. You'll find the answers to all your questions on the AEG-ELECTROLUX EOB5441AAX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EOB5441AAX**  
**User guide AEG-ELECTROLUX EOB5441AAX**  
**Operating instructions AEG-ELECTROLUX EOB5441AAX**  
**Instructions for use AEG-ELECTROLUX EOB5441AAX**  
**Instruction manual AEG-ELECTROLUX EOB5441AAX**



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EOB5441AAX user guide](http://yourpdfguides.com/dref/5313532)  
<http://yourpdfguides.com/dref/5313532>

**Manual abstract:**

@@ welcome to Electrolux. @@ electrolux. Com Register your product for better service: [www.electrolux.com/shop](http://www.electrolux.com/shop) CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. model , PNC , Serial Number. Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice.

ENGLISH 3 1. SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.  This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised by an adult or a person who is responsible for their safety.

Do not let children play with the appliance. • Keep all packaging away from children.  Keep children and pets away from the appliance when it operates or when it cools down. accessible parts are hot.  If the appliance has a child safety device, we recommend that you activate it.

Cleaning and user maintenance shall not be made by children without supervision. 1. 2 General Safety • Only a qualified person must install this appliance and replace the cable.  Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.  Do not use a steam cleaner to clean the appliance. Com • Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.  To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.

If the supply cord is damaged, it must be replaced by the manufacturer, an authorized Service or similarly qualified persons in order to avoid a hazard.  Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock. Only a qualified person must install this appliance. • Remove all the packaging.  Do not install or use a damaged appliance.  Obey the installation instruction supplied with the appliance.  Always be careful when you move the appliance because it is heavy. Always wear safety gloves.  Do not pull the appliance by the handle.  Keep the minimum distance from the other appliances and units.

@@@ • The appliance must be earthed. @@@ contact the Service or an electrician to change a damaged mains cable.  Do not let mains cables to come in touch with the appliance door, specially when the door is hot.  The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.  Connect the mains plug to the mains socket only at the end of the installation.

Make sure that there is access to the mains plug after the installation.  If the mains socket is loose, do not connect the mains plug.  Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.  Use only correct isolation devices: line protecting cut-outs, fuses (screw type Electrical connection WARNING! risk of fire and electrical shock.

All electrical connections should be made by a qualified electrician. ENGLISH 5 fuses removed from the holder), earth leakage trips and contactors.  The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.  Do not change the specification of this appliance.  Make sure that the ventilation openings are not blocked.  Do not let the appliance stay unattended during operation.  Deactivate the appliance after each use.  Be careful when you open the appliance door while the appliance is in operation. hot air can release.

Do not operate the appliance with wet hands or when it has contact with water.  Do not apply pressure on the open door.  Do not use the appliance as a work surface or as a storage surface.  Always keep the appliance door closed when the appliance is in operation. • Open the appliance door carefully.

@@@@@ WARNING! Risk of damage to the appliance. @@  do not put aluminium foil directly on the bottom of the appliance.  do not put water directly into the hot appliance. @@  be careful when you remove or install the accessories. @@ It is not a defect in the sense of the warranty law.

Use a deep pan for moist cakes. Risk of injury, fire or damage to the appliance. @@ • Make sure the appliance is cold. There is the risk that the glass panels can break.  Replace immediately the door glass panels when they are damaged.

contact the Service.  Be careful when you remove the door from the appliance. the door is heavy! @@  Remaining fat or food in the appliance can cause fire.  Clean the appliance with a moist soft cloth. @@@@ 2.

4 Internal light • The type of light bulb or halogen lamp used for this appliance, is only for household appliances. Do not use it for house lighting.  Before replacing the lamp, disconnect the appliance from the power supply.  Only use lamps with the same specifications.  Disconnect the appliance from the mains supply. • Cut off the mains cable and discard it.  Remove the door catch to prevent children and pets to get closed in the appliance. PRODUCT DESCRIPTION 1 2 3 4 5 6 1 Control panel 2 Knob for the oven functions 3 Power lamp / symbol 5 4 3 2 1 7 8 9 10 11 12 4 Electronic programmer 5 Knob for the temperature 6 Temperature lamp / symbol / indica- 13 tor 7 Heating element 8 Lamp 9 Fan 10 Rear wall heating element 11 Bottom heat 12 Shelf support, removable 13 Shelf positions 3. When you connect the appliance to the electrical supply or after a power cut, the indicator for the Time function flashes. Press the + or - button to set the correct time.

After approximately five seconds, the flashing stops and the display shows the time of day you set. When you change the time, you must not set the Duration or End ) function at the same time. 4. 1 Initial Cleaning • Remove all parts from the appliance.  Clean the appliance before first use. 2 Setting the time You must set the time before you operate the oven. To use the appliance, press the control knob. The control knob comes out. Knob symbol, indicator or lamp (depends on the model refer to the product description): • The indicator comes on when the oven heats up.  The lamp comes on when the appliance operates.  The symbol shows whether the knob controls one of the cooking zones, the oven functions or the temperature. Turn the control knob for the oven functions to select an oven function.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX EOB5441AAX user guide](#)

<http://yourpdfguides.com/dref/5313532>

Turn the control knob for the temperature to select a temperature. To deactivate the appliance turn the control knobs for the oven functions and temperature to the off position. 2 Oven Functions Oven function Light True Fan Cooking Application To activate the oven lamp without a cooking function. To bake on the maximum temperature on three oven levels at the same time. When you use this function, decrease the oven temperature by 20-40 °C from the standard temperatures you use for Conventional Cooking. also to dry food. To bake food on one oven level for a more intensive browning and a crispy bottom. When you use this function, decrease the oven temperature by 20 - 40 °C from the standard temperatures you use for Conventional Cooking. To grill flat food in the middle of the grill, and to toast. To grill flat food in large quantities, and to toast. @@ to set a countdown time. This function has no effect on the operation of the oven. to set the length of an oven operation. To set the switch-off time for an oven function. 3. @@ 6. @@The display shows the indicator for the clock function you set. @@@@ press a button to stop the signal.

@@This is not necessary for the Minute Minder. @@ 2. @@Push and hold the button -. After some seconds the clock function goes out. @@@@@Push the deep pan between the guide-bars of one of the oven levels. @@@@@@The temperature and baking times in the tables are guidelines only. @@ 9. @@@@@@When the trays become cold again, the distortions are gone. @@@@You can extend baking times by 10 – 15 minutes if you bake cakes on more than one level. □ Cakes and pastries at different heights do not always brown equally at first.

If this occurs, do not change the temperature setting. The differences equalize during the baking procedure. 9. @@@@@@ □ Roast lean meats in the roasting tin with the lid. This keeps the meat more succulent.

@@@@@@@@This gives better roasting results. □ You can deactivate the appliance approximately 10 minutes before the end of the roasting time, and use the residual heat. 9. 8 Roasting with Turbo Grilling Beef Type of meat Pot roast Roast beef or fillet: rare Roast beef or fillet: medium Roast beef or fillet: well done 1) Preheat the oven. Com Veal Type of meat Roast veal Knuckle of veal Lamb Type of meat Leg of lamb / Roast lamb Saddle of lamb Game Type of meat Saddle / Leg of hare Saddle of venison Haunch of venison Quantity up to 1 kg Oven function Conventional Cooking Conventional Cooking Conventional Cooking Shelf position 1 Temperature °C 230 1) Time (min.

) 30 - 50 35 - 50 50 - 70 80 - 100 120 - 180 Poultry por- 200 - 250 g tions each Half chicken Chicken, poulard Duck Goose 400 - 500 g each 1 - 1. ) 120 - 150 150 - 240 Fish (steamed) Type of meat Whole fish Quantity 1 - 1. Set the shelf into the shelf position as recommended in the grilling table. Always set the pan to collect the fat into the first shelf position. Grill only flat pieces of meat or fish. Always preheat the empty oven with the grill functions for 5 minutes. cAUTION! Always grill with the oven door closed. Grilling Food to be grilled Roast beef Filet of beef Back of pork Back of veal Back of lamb Whole Fish, 500 - 1000 g Fast Grilling Food t @@@It can cause damage to the nonstick coating. 10. @@ 1.

Pull the front of the shelf support away from the side wall. 2. @@@@Valid for telescopic runners: The retaining pins on the telescopic runners must point to the front. Before you change the lamp: • Deactivate the appliance. □ Remove the fuses from the fuse box or deactivate the circuit breaker. cAUTION! Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity. Always use the same lamp type. Replacing the lamp at the cavity ceiling: 1. Turn the lamp glass cover counterclockwise to remove it.

There is a risk of electrical shock. The lamp and the lamp glass cover can be hot. Replace the lamp with a suitable 300 °C heat-resistant lamp. 3 Oven ceiling You can fold down the heating element on the oven ceiling to clean the oven ceiling easily. wARNING! Deactivate the appliance before you fold down the heating element.

Make sure that the appliance is cold. There is a risk of burns. Hold the heating element with two hands at the front. Pull it forwards against the spring pressure and out along the supports on the two sides. the heating element folds down. You can clean the oven ceiling. 1. Installing the heating element Install the heating element in the opposite sequence. Install the heating element correctly above the supports on the inner walls of the appliance. Folding down the heating element Remove the shelf supports. 10. 4 Cleaning the oven door Removing the door and the glass panels You can remove the oven door and the internal glass panels to clean it. The number of glass panels is different for different models. wARNING! Be careful when you remove the door from the appliance. Fully press the clamping levers (A) on the two door hinges.

@@@ eNGLISH 25 5. @@ this is to prevent scratches. @@Pull the door trim to the front to remove it. Hold the door glass panels on their top edge one by one and pull them up out of the guide. Clean the glass panel with water and soap. dry the glass panel carefully. Installing the door and the glass panels When the cleaning is completed, install the glass panels and the oven door. Do the above steps in the opposite sequence. Install the smaller panel first, then the larger. The appliance does not heat up.

The appliance does not heat up. The appliance does not heat up. possible cause The appliance is deactivated. The clock is not set. The necessary settings are not set.

Make sure that the fuse is the cause of the malfunction. If the fuse releases again and again, contact a qualified electrician. replace the lamp. The lamp does not operate. Com Problem Steam and condensation settle on the food and in the appliance cavity.

The display shows "12. 00". Possible cause You left the dish in the appliance for too long. Remedy Do not leave the dishes in the oven for longer than 15 - 20 minutes after the cooking process ends. If you cannot find a solution to the problem yourself, contact your dealer or the service centre. We recommend that you write the data here: Model (MOD. ) Product number (PNC) Serial number (S. n. ) The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity.

ENVIRONMENT CONCERNS Recycle the materials with the symbol . put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EOB5441AAX user guide](http://yourpdfguides.com/dref/5313532)  
<http://yourpdfguides.com/dref/5313532>