



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX ESF 65050. You'll find the answers to all your questions on the AEG-ELECTROLUX ESF 65050 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX ESF 65050**  
**User guide AEG-ELECTROLUX ESF 65050**  
**Operating instructions AEG-ELECTROLUX ESF 65050**  
**Instructions for use AEG-ELECTROLUX ESF 65050**  
**Instruction manual AEG-ELECTROLUX ESF 65050**



user manual

Dishwasher

ESF65050



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESF 65050 user guide](http://yourpdfguides.com/dref/3924883)  
<http://yourpdfguides.com/dref/3924883>

**Manual abstract:**

@@@ Correct use · The appliance is designed exclusively for domestic use. · Only use the appliance to clean household utensils that are applicable for dishwashers. · Do not put solvents in the appliance. Risk of explosion. · Put the knives and all items with sharp points in the cutlery basket with their points down. If not, put in a horizontal position in the upper basket. · Use only branded products for dishwashers (detergent, salt, rinse aid). @@ Risk of skin burns. @@@@ Use only original spare parts. · Do not do repairs yourself to prevent injury and damage to the appliance.

Always contact your local Service Force Centre. General safety · Persons (including children) with reduced physical sensory, mental capabilities or lack of experience and knowledge must not use the appliance. They must have supervision or instruction for the operation of the appliance by a person responsible for their safety. · Obey the safety instructions from the manufacturer of the dishwasher detergent to prevent burns to eyes, mouth and throat. · Do not drink the water from the dishwasher.

Detergent residues can stay in your appliance. · Always close the door when you do not use the appliance to prevent injury and not to stumble over the open door. · Do not sit or stand on the open door. Child safety · Only adults can use this appliance. Children must get supervision to make sure that they do not play with the appliance.

· Keep all the packaging away from children. There is a risk of suffocation. electrolux 3 · Keep all detergents in a safe area. Do not let children touch the detergents. · Keep children away from the appliance when the door is open. Installation · Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier. · Remove all packaging before first use. · A qualified and competent person must do the electrical installation.

· A qualified and competent person must do the plumbing installation. · Do not change the specifications or modify this product. Risk of injury and damage to the appliance. · Do not use the appliance: if the mains cable or water hoses are damaged, if the control panel, worktop or plinth area are damaged, that you can get access to the inner side of the appliance. Contact your local Service Force Centre. · Do not drill into the sides of the appliance to prevent damage to hydraulic and electrical components. Warning! Carefully obey the instructions for electrical and water connections. PRODUCT DESCRIPTION 1 2 3 4 5

Upper basket Water hardness dial Salt container Detergent dispenser Rinse aid dispenser 6 7 8 9 10 Rating plate Filters Lower spray arm Upper spray arm Worktop 4 electrolux CONTROL PANEL 9 8 7 6 1 2 3 4 5 6 7 8 9 Programme guide Programme knob Start/cancel button (Start Cancel) Multitab button (Multitab) Delay start button (Delay) Digital display Indicator lights Programme marker Off position Indicator lights Comes on when the washing phase or the rinsing phase operates. Comes on when the drying phase operates. Comes on when you activate the multitab function Refer to 'Multitab function'.

Comes on when it is necessary to fill the salt container. Refer to 'Use of dishwasher salt'. After you fill the container, the salt indicator light can continue to stay on for some hours. This does not have an unwanted effect on the operation of the appliance. Comes on when it is necessary to fill the rinse aid container. Refer to 'Use of rinse aid'. Wash phase Dry phase Multitab Salt 1) Rinse aid 1) 1) When the salt and/or rinse aid containers are empty, the related indicator

lights do not come on while a washing programme operates. Programme knob · To switch on the appliance or to set a washing programme, turn the programme knob clockwise or counterclockwise. The programme marker on the programme knob must agree with one of the washing programmes on the control panel. If the programme marker agrees with a washing programme, the digital display shows the time duration of the programme. If the programme marker does not agree with a washing programme, the digital display shows two horizontal bars. · To switch off the appliance, turn the programme knob until the programme marker agrees with the off indicator. Use the programme knob for these operations: electrolux 5 To set the water softener. Refer to 'Setting the water softener'. To deactivate/activate the rinse aid dispenser. Refer to 'Multitab function'. Start/cancel button Use the start/cancel button for these operations: · To start the washing programme. Refer to the chapter 'Setting and starting a washing programme'. · To cancel a washing programme in progress. Refer to the chapter 'Setting and starting a washing programme'.

· To set the water softener level. Refer to the chapter 'Set the water softener'. · To deactivate/activate the rinse aid dispenser. Refer to the chapter 'Multitab function'. Multitab button Press this button to activate/deactivate the multitab function. Refer to the chapter 'Multitab function'. Delay start button Use the delay start button to delay the start of the washing programme with an interval between 1 and 19 hours. Refer to the chapter 'Setting and starting a washing programme'. Digital display The display shows: · Adjusted level of the water softener. · Activation/deactivation of the rinse aid dispenser (only with multitab function on).

· Programme duration. · Remaining time to the end of the programme. · End of a washing programme, the digital display shows a zero. · Number of hours in delay start. · Fault codes.

Setting mode The appliance is in setting mode when: · One or more phase indicator lights are on. · The time duration of the programme flashes in the digital display. The appliance must be in setting mode for these operations: To set a washing programme. To set the water softener level. To deactivate/activate the rinse aid dispenser.

The appliance is not in setting mode when: · One or more phase indicator lights are on. · The time duration of the programme does not flash. In this condition cancel the programme to go back to the setting mode. @@@@ If necessary set the water softener. 2. Fill the salt container with dishwasher salt. 3. Fill the rinse aid dispenser with rinse aid. 4. Load cutlery and dishes into the dishwasher.

5. Set the correct washing programme for the type of load and soil. 6. Fill the detergent dispenser with the correct quantity of detergent. 7. Start the washing programme. @@@@ · French degrees (°TH). @@ Adjust the water softener to the water hardness in your area. @@ Manual adjustment The appliance is set at the factory at position 2.

5. Set the correct washing programme for the type of load and soil. 6. Fill the detergent dispenser with the correct quantity of detergent. 7. Start the washing programme. @@@@ · French degrees (°TH). @@ Adjust the water softener to the water hardness in your area. @@ Manual adjustment The appliance is set at the factory at position 2.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESF 65050 user guide](http://yourpdfguides.com/dref/3924883)  
<http://yourpdfguides.com/dref/3924883>

1.

Open the door. 2. Remove the lower basket. 3. Turn the water hardness dial to position 1 or 2 (refer to the chart).

4. The appliance must be switched off. 1. Press and hold the start/cancel button. 2.

Examples: level 5 = level 10 = 3. Press the start/cancel button to change the water softener level. Every time you press the button, the level increases. 4.

Close the door. **USE OF DISHWASHER SALT** Caution! Only use dishwashers salt. Caution! Grains of salt and salty water on the bottom of the appliance can cause corrosion. Fill the appliance with salt before you start a washing programme to prevent corrosion. **electrolux 7** Do these steps to fill the salt container: 1. Turn the cap anticlockwise to open the salt container.

2. Fill the salt container with 1 litre of water (only the first operation). 3. Use the funnel to fill the salt container with salt. 4. Remove the salt around the opening of the salt container. 5. Turn the cap clockwise to close the salt container. It is normal that water overflows from the salt container when you fill it with salt. When you set electronically the water softener to level 1, the salt indicator light does not stay on.

**USE OF RINSE AID** Caution! Only use branded rinse aid for dishwashers. Do not fill the rinse aid dispenser with other products (e.g. dishwasher cleaning agent, liquid detergent). This can cause damage to the appliance.

Rinse aid makes it possible to dry the dishes without streaks and stains. Rinse aid is automatically added during the last rinsing phase. Do these steps to fill the rinse aid dispenser: 1. Press the release button (A) to open the rinse aid dispenser. 8 **electrolux 2**.

Fill the rinse aid dispenser with rinse aid. The mark 'max.' shows the maximum level. You can set the rinse aid dosage between position 1 (lowest dosage) and position 6 (highest dosage). 3. Remove the spilled rinse aid with an absorbent cloth to prevent too much foam during the subsequent washing programme. 4. Close the rinse aid dispenser. Adjusting the rinse aid dosage The rinse aid is set at the factory at position 4. 1.

Turn the rinse aid dial to increase or decrease the dosage. Increase the dosage if there are water droplets or limescale on the dishes. Decrease the dosage if there are streaks, whitish stains or bluish layers on the dishes. **LOADING CUTLERY AND DISHES** Helpful hints and tips Caution! Only use the appliance for household utensils that are applicable for dishwashers. Do not use the appliance to clean objects that can absorb water (sponges, household cloths, etc.). Before you load cutlery and dishes, do these steps: Remove all **LTITAB FUNCTION** The multitab function is for combi detergent tablets. These tablets contain agents such as detergent, rinse aid and dishwasher salt. Some types of tablets can contain other agents. Do a check if these tablets are applicable for the local water hardness.

Refer to the instructions from the manufacturer. The programme duration can increase if you use the multitab function. The multitab indicator light comes on. The multitab indicator light goes off. Do these steps if the drying results are not satisfactory: 1.

Fill the rinse aid dispenser with rinse aid. 2. Activate the rinse aid dispenser. 3. Set the rinse aid dosage to position 2.

1. Press the start/cancel button to change the setting. The digital display shows the new setting. 4. Turn the programme knob to the off position twice the programme duration. Duration (in minutes) 1 Energy (in kWh) 1,1-1,7 0,9 1,8-2,0 1,0-1,1 0,1 Water (in litres) 11-22 9 22-24 13-15 4 The pressure and temperature of the water, the variations of power supply and the quantity of dishes can change these values. **CARE AND CLEANING** Warning! Switch the appliance off before you clean the filters. Cleaning the filters Caution! Do not use the appliance without the filters. Make sure that the installation of the filters is correct. Incorrect installation will cause unsatisfactory washing results and damage to the appliance.

If necessary, clean the filters. Dirty filters decrease the washing results. The dishwasher has three filters: 1. coarse filter (A) 2. microfilter (B) 3. flat filter (C) A B C Do these steps to clean the filters: 1. Open the door. 2. Remove the lower basket. **electrolux 15 3**.

To unlock the filter system, turn the handle on the microfilter (B) approximately 1/4 anticlockwise. 12. To lock the filter system, turn the handle on the microfilter (B) clockwise until it lock in position. 4. Remove the filter system.

5. Hold the coarse filter (A) by the handle with the hole. 6. Remove the coarse filter (A) from the microfilter (B). 7.

Remove the flat filter (C) from the bottom of the appliance. 13. Install the lower basket. 14. Close the door. Do not remove the spray arms. If the holes in the spray arms become clogged, remove remaining parts of soil with a cocktail stick. External cleaning Clean the external surfaces of the appliance and control panel with a damp soft cloth. Only use neutral detergents. Frost precautions Caution! Do not install the appliance where the temperature is below 0 °C.

The manufacturer is not responsible for damage because of frost. If not possible, empty the appliance and close the door. Clean the filters below running water. 9. Put the flat filter (C) in the bottom of the appliance. Install the flat filter correctly under the two guide (D). 10. 11. Caution!

Clean the water tap. The water tap is closed.

Open the water tap. The filter in the water inlet hose is blocked. Clean the filter. The connection of the water inlet hose is not correct. The hose can be kinked or squashed.

Make sure that the connection is correct. There is a blockage in the sink spigot. Clean the sink spigot. The connection of the water drain hose is not correct. The hose can be kinked or squashed.

Make sure that the connection is correct. The appliance door is not closed. Close the door. Mains plug is not connected in. Put in the mains. The fuse has blown out in the household fuse box. Replace the fuse. Delay start is set. Set the knob on the same washing programme as before the malfunction. The programme continues from the point of interruption.

If the malfunction shows again, contact your Service Force Centre. Write the necessary data here: Model description : .....

. Product number : ....

.....

. Serial number : .....

The cleaning results are not satisfactory The selected washing programme is not applicable for the type of load and soil. The baskets are loaded incorrectly so that water cannot reach all surfaces. Spray arms do not turn freely because of incorrect arrangement of the load. The filters are dirty or not correctly installed. The quantity of detergent is too little or missing. The salt container is empty. The water softener is adjusted on a wrong level. The salt container cap is not closed correctly.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESF 65050 user guide](#)



· No rinse aid has been used.

· The rinse aid dispenser is empty. · Decrease the rinse aid dosage. Limescales particles on the dishes The dishes are wet and dull There are streaks, milky spots or a bluish coating on glasses and dishes electrolux 17 The cleaning results are not satisfactory Dry water drop signs on glasses and dishes · Increase rinse aid dosage. · The detergent can be the cause. TECHNICAL DATA Dimensions Width cm Height cm Depth cm Electrical connection - Voltage Overall power - Fuse Water supply pressure Capacity Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher door. Minimum Maximum Place settings 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) 12 60 85 61 INSTALLATION Fitting under a counter Warning! Make sure that mains plug is disconnected from the mains socket during installation. Put the appliance adjacent to a water tap and a water drain. Remove the appliance worktop to install it under a sink unit or a kitchen worktop. Make sure that the dimensions of the recess agree with the given dimensions. Do these steps to remove the appliance worktop: 1.

Remove the rear screws (1). 2. Pull the worktop from the behind the appliance (2). 3. Lift the worktop and move it from the front slots (3). 4. Use the adjustable feet to adjust the level of the appliance. 5. Install the appliance under the kitchen worktop. Make sure that there are no kinks in the water hoses and that the water hoses are not squashed.

18 electrolux If a repair is necessary, the appliance must be easily accessible for the engineer. Install the appliance worktop to the appliance if you want to use the dishwasher as a freestanding appliance. The plinth on freestanding appliance is not adjustable. Adjusting the level of the appliance Make sure that the appliance is level to close and seal the door correctly. If the level of the appliance is correct, the door does not catch on the sides of the cabinet. If the door does not close correctly, loosen or tighten the adjustable feet until the appliance is level. WATER CONNECTION Water inlet hose Connected the appliance to a hot (max. 60°) or cold water supply. @@@@Caution! Do not use connection hoses from an old appliance. @@Make sure that the local water authority gives you the average mains pressure in your area.

Make sure that there are no kinks in the water inlet hose and that the water inlet hose is not squashed or entangled. Fit the locknut correctly to prevent water leaks. Caution! Do not connect the appliance to new pipes or pipes that are not used for a long time. Let the water run for some minutes, then connect the inlet hose. The water inlet hose is double-walled and has an inner mains cable and a safety valve.

@@@@@· Only let the Service Force Centre replace the water inlet hose with safety valve. Warning! Dangerous voltage Water drain hose 1. Connect the water drain hose to the sink spigot and attach it under the work surface. This prevents that the waste water from the sink goes back into the appliance. 2.

Connect the water drain hose to a stand pipe with vent-hole (minimum internal diameter 4 cm). max 85 cm max 400 cm min 40 cm Make sure that the drain hose is not bent or squashed to prevent that the water drains does not drain correctly. electrolux 19 Remove the sink plug when the appliance drains the water to prevent that the water goes back into the appliance. A drain hose extension must not be longer than 2 m. The internal diameter must not be smaller than the diameter of the hose. If you connect the water drain hose to a trap spigot under the sink, remove the plastic membrane (A). If you do not remove the membrane, remaining food can cause a blockage in the drain hose spigot The appliance has a security feature to prevent that dirty water goes back into the appliance. If, the spigot of the sink has a 'non-return valve', this valve can cause the appliance to drain incorrectly. Remove the non-return valve. Caution! Make sure that the water couplings are tight to prevent water leakage.

ELECTRICAL CONNECTION Warning! The manufacturer is not responsible if you do not follow these safety precautions. This appliance needs to be earthed according to safety precautions. Make sure that the rated voltage and type of power on the rating plate agree with the voltage and the power of the local power supply. Always use a correctly installed shockproof socket. Do not use multi-way plugs, connectors and extension cables. There is a risk of fire. Do not replace the mains cable yourself. Contact the Service Force Centre. Make sure that the mains plug is accessible after installation. Do not pull the mains cable to disconnect the appliance.

Always pull the mains plug. ENVIRONMENT CONCERNS The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc.

Discard the packaging materials in the applicable container at the community waste disposal facilities.

20 electrolux Warning! To discard the appliance, follow the procedure: · Pull the mains plug out of the socket. · Cut off the mains cable and mains plug and discard them. · Discard the door catch. This prevents the children to close themselves inside the appliance and endanger their lives. electrolux 21 22 electrolux electrolux 23 www.electrolux.com/shop 156955130-A-162011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESF 65050 user guide](http://yourpdfguides.com/dref/3924883)  
<http://yourpdfguides.com/dref/3924883>