



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX ESL 63010. You'll find the answers to all your questions on the AEG-ELECTROLUX ESL 63010 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX ESL 63010
User guide AEG-ELECTROLUX ESL 63010
Operating instructions AEG-ELECTROLUX ESL 63010
Instructions for use AEG-ELECTROLUX ESL 63010
Instruction manual AEG-ELECTROLUX ESL 63010



user manual

Dishwasher

ESL 63010



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL 63010 user guide](http://yourpdfguides.com/dref/2282895)
<http://yourpdfguides.com/dref/2282895>

Manual abstract:

@@We promise that it'll make your life a little easier. @@General information and tips Environmental information safety information electrolux 5 Safety information In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Correct use This dishwasher is only intended for washing household utensils suitable for machine washing. Do not put any solvents in the dishwasher. This could cause an explosion. @@@@This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used. General safety Dishwasher detergents can cause chemical burns to eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer.

The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine. Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves. Do not sit or stand on the open door.

Child safety This appliance is designed to be operated by adults. Don't allow children to use the dishwasher unsupervised. Keep all packaging well away from children. There is risk of suffocation. Keep all detergents in a safe place out of children's reach.

Keep children well away from the dishwasher when the door is open. 6 electrolux safety information Installation Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier. All packaging must be removed before use. Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person. For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way. Never use the dishwasher if the electrical supply cable and water hoses are damaged; or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Service Force centre, in order to avoid hazard. All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components.

For electrical and water connection carefully follow the instructions given in specific paragraphs. product description electrolux 7 Product description 1 Upper basket 2 Water hardness dial 3 Salt container 4 Detergent dispenser 5 Rinse aid dispenser 6 Rating plate 7 Filters 8 Lower spray arm 9 Upper spray arm 8 electrolux control panel Control panel 1 On/Off button 2 Delay start button 3 Programme selection / cancel button 4 Indicator lights Indicator lights End of programme Illuminates when a washing programme has ended. It also has added functions of visual signalling as: - the setting of the water softener, - activation/deactivation of the audible signals, - intervention of an alarm due to the malfunction of the machine. Illuminates when the rinse aid has run out.

Rinse aid Salt Illuminates when the special salt has run out. control panel electrolux 9 Audible signals The salt indicator light on the control panel can remain illuminated for 2-6 hours after the salt has been replenished, assuming the dishwasher remains switched on. If you are using salts that take longer to dissolve then this can take longer. The function of the machine is not affected. Setting mode The appliance is in setting mode when all programme indicator light are off and end of programme indicator light is flashing. Audible signals have been introduced to help indicate which operations the dishwasher is performing: - end of programme - intervention of an alarm due to malfunction Factory setting: audible signals activated.

It is possible to deactivate the audible signals, using the programme selection/cancel button. Deactivation/activation of the audible signals Always remember that when: - setting the water softener, - activating/deactivating the audible signals, the appliance MUST be in setting mode. If a programme indicator light is illuminated and end of programme indicator light is illuminated with fixed light, the last performed or selected programme still set. In this case, to return to setting mode, the programme has to be cancelled. 1.

Press and hold the programme selection/cancel button until the light of the set programme turns off and the end of programme indicator light is flashing. 2. Release the programme selection/cancel button. 1. Press the On/Off button.

The dishwasher must be in setting mode. 2. Press and hold the programme selection/cancel button until programme light 1 flashes and programme light 2 illuminates with a fixed light. 3. Press programme selection/cancel button again, programme light 1 illuminates with a fixed light and programme light 2 starts flashing. 10 electrolux control pane 4. Wait until: - programme light 1 turns off, - programme light 2 goes on flashing - the end of programme indicator light illuminates with a fixed light, indicating that the audible signals are activated. 5. To deactivate the audible signals, press the programme selection/cancel button again: the end of programme indicator light turns off indicating that the audible signals are deactivated. 6.

*To memorise the operation, switch off the dishwasher. To activate again the audible signals simply follow the above operations until the end of programme indicator light illuminates. first use electrolux 11 First use Before using your dishwasher for the first time: Ensure that the electrical and water connections comply with the installation instructions Remove all packaging from inside the appliance Set the water softener Pour 1 litre of water inside the salt container and then fill with dishwasher salt Fill the rinse aid dispenser Set the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, Clarke degrees (°dH), French degrees (°TH) and mmol/l (millimol per litre - international unit for the hardness of water). The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. Adjusting the water hardness setting manually 2 2 2 2 2 1 1 1 1 electronically level 10 level 9 level 8 level 7 level 6 level 5 level 4 level 3 level 2 level 1 yes yes yes yes yes yes yes no * Use of salt When using combi detergents tablets («3 in 1», «4 in 1», «5 in 1», etc.*



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL 63010 user guide](http://yourpdfguides.com/dref/2282895)
<http://yourpdfguides.com/dref/2282895>

) follow the instructions given in "Use of detergent". Water hardness Clarke 64 - 88 53 - 63 46 - 52 36 - 45 28 - 35 23 - 27 18 - 22 13 - 17 5 - 12 <5 °TH 91 - 125 76 - 90 65 - 75 51 - 64 40 - 50 33 - 39 26 - 32 19 - 25 7 - 18 <7 mmol/l 9,0 - 12,5 7,6 - 8,9 6,5 - 7,5 5,1 - 6,4 4,0 - 5,0 3,3 - 3,9 2,6 - 3,2 1,9 - 2,5 0,7 - 1,8 < 0,7 * no salt is necessary 12 electrolux first use The water softener must be set in both ways: manually, using the water hardness dial and electronically.

Setting manually The dishwasher is factory set at position 2. 1. Open the dishwasher door.

2. Remove the lower basket from the dishwasher. 3. Turn the water hardness dial to position 1 or 2 (see table). 4.

Replace the lower basket. 3. Wait until: - programme light 2 turns off; - programme light 1 goes on flashing - the end of programme indicator light starts flashing: the number of flashes corresponds to the current level set. The flashing is repeated with a pause of a few seconds. Examples: 5 flashes, pause, 5 flashes, pause, etc... = level 5. Setting electronically The dishwasher is factory set at level 5. 1.

Press the On/Off button. The dishwasher must be in setting mode. 2. Press and hold the programme selection/cancel button until programme light 1 flashes and programme light 2 illuminates with a fixed light. 4. To change the level, press the programme selection/cancel button. Each time the button is pressed the level increase. (level 1 follows level 10). The end of programme light indicates the new setting. 5.

To memorise the operation, switch off the dishwasher by pressing the On/Off button. first use electrolux 13 Filling with dishwasher salt 4. Replace the cap making sure that there is no trace of salt on the screw thread or on the gasket. 5. Replace the cap tightly turning it clockwise until it stops with a click.

Only use salt specifically designed for use in dishwashers. All other types of salt not specifically designed for use in a dishwasher, especially table salt, will damage the water softener. Only fill with salt just before starting one of the complete washing programmes. This will prevent any grains of salt or salty water, which may have been spilt, remaining on the bottom of the machine for any period of time, which may cause corrosion. Do not worry if water overflows from the unit when filling with salt, this is quite normal.

To fill: 1. Open the door, remove the lower basket and unscrew the cap of the salt container by turning it anticlockwise. 2. Pour 1 litre of water inside the container (this is necessary only before filling with salt for the first time). 3. Using the funnel provided, pour in the salt until the container is full. 14 electrolux first use Filling with rinse aid Rinse aid ensures thorough rinsing, and spot and streak free drying. Rinse aid is automatically added during the last rinse. 1. Open the container by pressing the release button (A).

According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector (position 1 minimum dosage, position 6 maximum dosage). The dose is factory set in position 4. Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes or a bluish film on glassware or knife blades. 3. Ensure that the lid is closed after every refill. 2. Add the rinse aid in the container. The maximum level for filling is indicated by "max". The dispenser holds about 110 ml of rinse aid, which is sufficient for between 16 and 40 dishwashing cycles, depending upon the dosage setting.

Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash. Only use branded rinse aid for dishwashers.

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent).

@@@ This detergent will take effect during the prewash phase. @@ Please observe the manufacturer's dosing and storage recommendations as stated on the detergent packaging. Using no more than the correct amount of detergent contributed by 3 hours. The corresponding light illuminates, 2.

@@@ Open the dishwasher door.

The end of programme indicator light is illuminated. The indicator light of the programme just ended will remain on. 1. Switch off the dishwasher by pressing the On/Off button. 2. @@@ Dirty filters will degrade the washing result. 4. @5. Clean all filters thoroughly under running water. 6.

@7. @1. Open the door, remove the lower basket. 2. @@@@9. @@@@ If necessary use only neutral detergents.

@@@@ Unplug the appliance and then turn off the water. 2. @3. @@@@ Unplug it.

2. Turn the water tap off. 3. Remove the water inlet and discharge hoses. 4.

Pull the machine out together with the hoses. Avoid over tilting the machine during transportation. 27 electrolux something not working something not working electrolux 27 Something not working The dishwasher will not start or stops during operation. Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the indications described in the chart, without calling out an engineer. Open the door and carry out the following suggested corrective actions.

Fault code and malfunction Possible cause and solution continuous flashing of the light of the running programme, intermittent audible signal, 1 flash of the end of programme indicator light, The water tap is blocked or furred with limescale. Clean the water tap. The water tap is turned off. Turn the water tap on. The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. Clean the filter in the threaded hose. The water inlet hose has not been correctly laid or it is bent or squashed. Check the water drain hose connection. The sink spigot is blocked. Clean out the sink spigot.

The water drain hose has not been correctly laid or it is bent or squashed. Check the water drain hose connection. The dishwasher does not fill with water continuous flashing of the light of the running programme, intermittent audible signal, 2 flashes of the end of programme indicator light, The dishwasher will not drain continuous flashing of the light of the running programme, intermittent audible signals, 3 flashes of the end of programme indicator light, Close the water tap and contact your local Service Force Centre. Anti-flood device is activated Remember to switch off the appliance before carrying out any corrective action. 28 electrolux something not working Malfunction The programme does not start Possible cause and solution The dishwasher's door has not been properly closed. Close the door. The main plug is not plugged in. Insert the main plug. The fuse has blown out in the household fuse box. Replace the fuse.

Delay start has been set. If dishes are to be washed immediately, cancel the delay start.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL 63010 user guide](http://yourpdfguides.com/dref/2282895)
<http://yourpdfguides.com/dref/2282895>

Once these checks have been carried out; switch on the appliance, press the programme selection/cancel button and close the door. The programme will continue from the point at which it was interrupted. If the malfunction or fault code reappears contact the Service Force Centre.
For other fault codes not described in the above chart, please contact your Service Force Centre. Contact your local Service Force Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.).
This information can be found on the rating plate located on the side of the dishwasher door. So that you always have these numbers at hand, we recommend you to make a note of them here: Mod. :

.
.
. . PNC :
.
.
. . S.N. :
.

. something not working electrolux 29 The wash results are not satisfactory The dishes are not clean The wrong washing programme has been selected.
The dishes are arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded. The spray arms do not rotate freely due to incorrect arrangement of the load. The filters in the base of the washing compartment are dirty or incorrectly positioned. Too little or no detergent has been used.
Where there are limescales deposits on the dishes; the salt container is empty or the incorrect level of the water softener has been set. The drain hose connection is not correct. The salt container cap is not properly closed. Rinse aid was not used. The rinse aid dispenser is empty.
Decrease rinse aid dosing. The dishes are wet and dull There are streaks, milky spots or a bluish coating on glasses and dishes Water drops have dried onto glasses and dishes Increase rinse aid dosing. The detergent may be the cause. Contact the detergent manufacturer's consumer care line. If after all these checks, the problem persists, contact your local Service Force Centre. 30 electrolux technical data Technical data Dimensions Width Height Depth Electrical connection Voltage - Overall power Fuse Water supply pressure 59.6 cm 81.8 - 87.8 cm 55.5 cm Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door Minimum Maximum 0.

05 MPa (0,5 bar) 0.8 MPa (8 bar) 12 place settings 37 kg 49 dB (A) Capacity Max. @@@@ Water supply connections This dishwasher may be fed with cold water. @@@@ Remove all packaging before positioning the machine. If possible, position the machine next to a water tap and a drain. @@Attention! Carefully follow the instructions on the enclosed template for building in the dishwasher and fitting the furniture panel. No further openings for the venting of the dishwasher are required, but only to let the water fill and drain hose and power supply cable pass through. The dishwasher incorporates adjustable feet to allow the adjustment of the height. During all operations that involve accessibility to internal components the dishwasher has to be unplugged. When inserting the machine, ensure that the water inlet hose, the drain hose and the supply cable are not kinked or squashed.
Fixing to the adjacent units The dishwasher must be secured against tilting. Therefore make sure that the counter it is fixed under, is suitably secured to a fixed structure (adjacent kitchen units cabinets, wall). 34 electrolux installation (Attention! NOT all models of dishwashers have fill and drain hoses provided with locknut. In this case, this kind of facility is not possible). If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose.

DO NOT use connection hoses which have previously been used for an old appliance. Water outlet hose connection The end of the drain hose can be connected in the following ways: 1. To the sink outlet spigot, securing it to the underside of the work surface. This will prevent waste water from the sink running into the machine. 2.
To a stand pipe provided with venthole, minimum internal diameter 4 cm. The waste connection must be at a height of between 30 cm (minimum) and 100 cm (maximum) from the bottom of the dishwasher. The drain hose can face either to the right or left of the dishwasher Ensure the hose is not bent or squashed as this could prevent or slow down the discharge of water. The sink plug must not be in place when the machine is draining as this could cause the water to syphon back into the machine. If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided. This appliance has been fitted with safety features which will prevent the water used in the appliance from returning back into the drinking water system. This appliance complies with the applicable plumbing regulations. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided. installation electrolux 35 Electrical connection Our appliances are supplied with a security device to protect against the return of dirty water back into the machine. If the spigot of your sink has a "no return valve" incorporated this can prevent the correct draining of your dishwasher.

We therefore advise you to remove it. Safety standards require the appliance to be earthed. The manufacturer accepts no liability for failure to observe the above safety precautions. Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate. Always plug the mains plug into a correctly installed shockproof socket. Multi-way plugs, connectors and extension cables must not be used. This could constitute a fire hazard through overheating. If necessary, have the domestic wiring system socket replaced. In case that the electrical cable has to be replaced, contact your local Service Force centre.
The plug must be accessible after the appliance has been installed. Never unplug the appliance by pulling on the cable. Always pull the plug. 36 electrolux environment concerns Environment concerns Packaging material The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.
g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities. Old appliance The symbol on the product or on its packaging indicates that this product may not be treated as household waste. @@@@ - Cut off the cable and plug and dispose of them.
- Dispose of the door catch. @@ The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL 63010 user guide](http://yourpdfguides.com/dref/2282895)
<http://yourpdfguides.com/dref/2282895>

