



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX ESL6370RO. You'll find the answers to all your questions on the AEG-ELECTROLUX ESL6370RO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX ESL6370RO**  
**User guide AEG-ELECTROLUX ESL6370RO**  
**Operating instructions AEG-ELECTROLUX ESL6370RO**  
**Instructions for use AEG-ELECTROLUX ESL6370RO**  
**Instruction manual AEG-ELECTROLUX ESL6370RO**



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL6370RO user guide](http://yourpdfguides.com/dref/4300286)  
<http://yourpdfguides.com/dref/4300286>

*Manual abstract:*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. *EN DISHWASHER USER MANUAL 2* [www.electrolux.com](http://www.electrolux.com) *CONTENTS 1. 2. 3. 4. 5. 6.*  
*7. 8. 9. 10. 11.*

*12. SAFETY INFORMATION . . . .*

.....  
.....  
.....  
.....

*. . . . . 3 PRODUCT DESCRIPTION . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. . . . . 5 CONTROL PANEL . . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. 5 PROGRAMMES . . . . .*

.....  
.....  
.....  
.....  
.....

*. . . 6 OPTIONS . .*

.....  
.....  
.....  
.....  
.....  
.....

*7 BEFORE FIRST USE . . . . .*

.....  
.....  
.....  
.....

.....  
..... 8 DAILY USE .

.....  
.....  
.....  
.....  
.....

.....  
..... 10 HINTS AND TIPS .

.....  
.....  
.....  
.....  
.....

..... 12 CARE AND CLEANING .

.....  
.....  
.....  
.....  
.....

13 TROUBLESHOOTING .....

.....  
.....  
.....  
.....  
.....

.. 14 TECHNICAL INFORMATION .....

.....  
.....  
.....  
.....

..... 16 ENVIRONMENT CONCERNS .

.....  
.....  
.....  
.....  
.....

..... @@@@Ingenious and stylish, it has been designed with you in mind. @@Welcome to Electrolux. @@When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.

Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice. ENGLISH 3 1. SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference. · The water inlet hose has a safety valve and a sheath with an inner mains cable. 1.1 Children and vulnerable people safety WARNING! Risk of suffocation, injury or permanent disability. · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

Do not let children play with the appliance. · Keep all packaging away from children. · Keep all detergents away from children. · Keep children and pets away from the appliance door when it is open. **WARNING! Dangerous voltage.**

· If the water inlet hose is damaged, immediately disconnect the mains plug from the mains socket. Contact the service to replace the water inlet hose. Electrical connection **WARNING! Risk of fire and electrical shock.** · The appliance must be earthed. · Make sure that the electrical information on the rating plate agrees with the power supply.

If not, contact an electrician. · Always use a correctly installed shockproof socket. · Do not use multi-plug adapters and extension cables. · Make sure not to cause damage to the mains plug and to the mains cable. Contact the service or an electrician to change a damaged mains cable. · Connect the mains plug to the mains socket only at the end of the installation. @@ · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. · Only for UK and Ireland. The appliance has a 13 amp mains plug.

@@ · Do not install or use a damaged appliance. @@ · Obey the installation instruction supplied with the appliance. · Make sure that the appliance is installed below and adjacent to safe structures. Water connection · Make sure not to cause damage to the water hoses. · Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. · The first time you use the appliance, make sure that there is no leakage. 4 www.electrolux.com 1.3 Use · This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices and other working environments Farm houses By clients in hotels, motels and other residential type environments Bed and breakfast type environments.

**WARNING! Risk of injury.** · Do not change the specification of this appliance. · Put knives and cutlery with sharp points in the cutlery basket with the points down or in a horizontal position. · Do not keep the appliance door open without supervision to prevent to fall on it. · Do not sit or stand on the open door. · Dishwasher detergents are dangerous. Obey the safety instructions on the detergent packaging. · Do not drink and play with the water in the appliance. · Do not remove the dishes from the appliance until the programme is completed. There can be detergent on the dishes.

**WARNING! Risk of electrical shock, fire or burns.** · Do not put flammable products or items that are wet with flammable products in, near or on the appliance. · Do not use water spray and steam to clean the appliance. · The appliance can release hot steam if you open the door while a programme operates. 1.4 Disposal **WARNING! Risk of injury or suffocation.** · Disconnect the appliance from the mains supply. · Cut off the mains cable and dispose of it. @@@@ · When the programme is completed, the green light comes on. · When the appliance has a malfunction, the red light flashes.

@@@@6 hours indicator. Multitab indicator. Salt indicator. It is always off while the programme operates. Rinse aid indicator. It is always off while the programme operates. End indicator. 4. @@@@ (This is the standard programme for test institutes). @@It automatically adjusts the temperature and quantity of the water, the energy consumption and the programme duration.

4) With this programme you can wash a load with fresh soil. It gives good washing results in a short time. ENGLISH 7 5) Use this programme to quickly rinse the dishes. This prevents the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme. Information for test institutes For all the necessary information for test performance. send an email to: info.test@dishwasher-production.com Write down the product number (PNC) that is on the rating plate. 5.

**OPTIONS** Activate or deactivate the Multitab option before the start of a programme. You cannot activate or deactivate the option while a programme operates. 5.2 Acoustic signals The acoustic signals operate when the appliance has a malfunction or when the adjustment of the level of the water softener occurs. It is not possible to deactivate these acoustic signals. There is also an acoustic signal that operates when the programme is completed. By default, this acoustic signal is off but it is possible to activate it. How to activate the acoustic signal for the end of programme 1. Press the on/off button to activate the appliance. 2.

Press and hold, at the same time, buttons (3) and (4) for a few seconds to make sure that the appliance is in setting mode. · The indicator of button (2) comes on. 3.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL6370RO user guide](http://yourpdfguides.com/dref/4300286)  
<http://yourpdfguides.com/dref/4300286>

@@4. Press button (4). · The indicators of buttons (2) and (3) go off. · The indicator of button (4) continues to flash. · The end indicator is off. 5. Press button (4), the end indicator comes on.

The acoustic signal for the end of programme is activated. 6. @@@@ This option deactivates the use of rinse aid and salt. The related indicators stay off. The programme duration can increase.

How to activate the Multitab option 1. Press the on/off button to activate the appliance. 2. @@ The option stays on until you deactivate it. @@@ Deactivate the Multitab option.

2. Set the water softener to the highest level. 3. @@4. @@5. Adjust the water softener to the water hardness in your area. 6. @@2. Press button (4). · The indicators of buttons (2) and (3) go off.

@@3. Press button (4), the end indicator goes off. The acoustic signal for the end of programme is deactivated. 4. @@ BEFORE FIRST USE 1. @@ If not, adjust the water softener. @@2. Fill the salt container. 3. Fill the rinse aid dispenser.

4. Open the water tap. 5. Processing residues can stay in the appliance. Start a programme to remove them.

C 4. 5. Press the release button (B) to open the lid (C). Put the detergent in the compartment (A). @@ If you use detergent tablets, put the tablet in the compartment (A).

Close the lid. @@@@ Open the water tap. 2. Press the on/off button to activate the appliance. The indicator of the last set programme comes on. 3. Press the button of the programme you want to set. The related programme indicator comes on. 4. Close the appliance door.

The programme starts. Starting a programme with delay start 1. Set the programme. 2. @@ The Delay indicator comes on. 3. Close the appliance door, the countdown starts. @@@@ @@@1. @@2. @@ Hot dishes can be easily damaged.

@@@ Stainless steel becomes cool more quickly than the dishes. 8. @@ The water softener neutralises these minerals. @@ It is important to set the right level of the water softener. @@ · Put the small items in the cutlery basket.

· Put the light items in the upper basket. Make sure that they do not move. · Make sure that the spray arms can move freely before you start a programme. 8.3 Using is not clogged.

Make sure that the drain hose has no kinks or bends. The anti-flood device is on. Close the water tap and contact the Service. Dishes are wet · The programme is without a drying phase or with a low temperature drying phase. · The rinse aid dispenser is empty. · The quality of the rinse aid can be the cause. · The quality of the combi detergent tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid together with the combi detergent tablets. Refer to HINTS AND TIPS' for other possible causes. After the checks are completed, activate the appliance.

The programme continues from the point of interruption. If the problem occurs again, contact the Service. If other alarm codes appear, contact the Service.

10.1 If the washing and drying results are not satisfactory Whitish streaks or bluish layers on glasses and dishes · The released quantity of rinse aid is too much. Adjust the rinse aid selector to a lower position. · The quantity of detergent is too much. Stains and dry water drops on glasses and dishes · The released quantity of rinse aid is not sufficient. Adjust the rinse aid selector to a higher position. · The quality of the detergent can be the cause.

10.2 How to activate the rinse aid dispenser The activation of the rinse aid dispenser can occur only with the Multitab option activated. 1. Press the on/off button to activate the appliance. 16 www.

electrolux.com 2. Press and hold, at the same time, buttons (3) and (4) for a few seconds to make sure that the appliance is in setting mode. · The indicator of button (2) comes on. 3.

@@4. Press button (3). · The indicators of buttons (2) and (4) go off. @@5. Press button (3), the end indicator comes on. The rinse aid dispenser is activated. 6. @@7. Adjust the released quantity of rinse aid. 8.

Fill the rinse aid dispenser. 11. TECHNICAL INFORMATION Dimensions Electrical connection Width / Height / Depth (mm) Refer to the rating plate.

Voltage Frequency Water supply pressure Water supply 1) Capacity Power consumption Min. / max. (bar / MPa) Cold water or hot water 2) Place settings Left-on mode Off-mode 220-240 V 50 Hz (0.5 / 0.05 ) / (8 / 0.8 ) max. 60 °C 12 0.

10 W 0.10 W 596 / 818 - 898 / 550 1) Connect the water inlet hose to a water tap with a 3/4" thread. 2) If the hot water comes from alternative sources of energy, (e.g. solar panels, aeolian energy), use the hot water supply to decrease energy consumption.

12. ENVIRONMENT CONCERNS Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste.

Return the product to your local recycling facility or contact your municipal office. ENGLISH 17 18 www.electrolux.com ENGLISH 19 www.electrolux.com/shop 117919730-A-172012 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX ESL6370RO user guide](http://yourpdfguides.com/dref/4300286)  
<http://yourpdfguides.com/dref/4300286>