



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF 148420. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF 148420 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF 148420
User guide AEG-ELECTROLUX EWF 148420
Operating instructions AEG-ELECTROLUX EWF 148420
Instructions for use AEG-ELECTROLUX EWF 148420
Instruction manual AEG-ELECTROLUX EWF 148420



user manual

Washing Machine

EWF 148420 W



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>

Manual abstract:

@@However, as manufacturers, we feel it is our duty to provide the following safety notes. · It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. · You MUST read them carefully before installing or using the appliance. @@Never connect up a damaged appliance. · If parts are damaged, contact your supplier. @@@@ · During high temperature wash programmes the door glass may get hot. Do not touch it! · Make sure that small pets and children do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.

· Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. · Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. · Do not use your washing machine to wash articles with whalebones, material without hems or torn material. · Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

electrolux 3 INSTALLATION · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · Always be sure, that there is no water leakage from hoses and their connections after the installation.

· If the appliance is installed in a location subject to frost, please read the "dangers of freezing" chapter. · Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. USE · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance.

See the Washing Programme Table. · Before washing, ensure that all pockets are empty and buttons and zips are fastened.

Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. · Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.

· Never use the appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. CHILD SAFETY · This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Children should be supervised to ensure that they do not play with the appliance. · The packaging components (e.g.

plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. To prevent children and pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button counterclockwise until the groove is vertical. 4

electrolux PRODUCT DESCRIPTION Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Its new washing system allows total use of detergent and reduces water consumption so saving energy. 1 2 3 4 5 6 1 Detergent dispenser drawer 2 Control panel 3 Door opening handle DETERGENT DISPENSER DRAWER Compartment for detergent used for prewash and soak phase or for stain remover used during the stain action phase (if available).

The prewash and soak detergent is added at the beginning of the wash programme. The stain remover is added during the stain action phase. Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it just before starting the programme. Compartment for liquid additives (fabric softener, starch). @@Any fabric softener or starching additives must be poured into the compartment before starting the wash programme. 4 Rating Plate 5 Drain pump 6 Adjustable feet electrolux 5 SELECTOR DIAL STICKER With the instruction booklet you will also find stickers for the programme selector dial. Choose the sticker in the desired language. Clean the control panel with a dry cloth to eliminate dust residue. Remove the back of the sticker and place it around the programme selector dial.

CONTROL PANEL Below is a picture of the control panel. It shows the programme selector dial as well as the buttons, pilot light and the display. These are presented by relevant numbers on the following pages. 1 2 3 4 5 6 7 8 9 10 1 2 3 4 5 Programme selector dial TEMPERATURE button SPIN reduction button

PREWASH button EXTRA RINSE button 6 7 8 9 10 DELAY START button Display START/PAUSE button DOOR LOCKED pilot light TIME MANAGER buttons TABLE OF SYMBOLS Programme selector dial = Time Manager Programmes = Rinse = Drain 6 electrolux = Spin Options buttons and lights = Rinse Hold = Time Manager buttons = Door locked = Child Lock PROGRAMME SELECTOR DIAL It allows you to switch the appliance on/off and/or to select a programme.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>

TEMPERATURE This button allows you to increase or decrease the washing temperature.

SPIN By pressing this button you can change the spin speed of the selected programme or to select Rinse Hold option. **RINSE HOLD** By selecting this function the water of the last rinse is not emptied out to prevent the fabrics from creasing. Before opening the door it will be necessary to empty out the water. To empty out the water, please read the paragraph «At the end of the programme». **PREWASH** By selecting this option the machine performs a prewash cycle before the main wash phase.

The washing time will be prolonged. This option is recommended for heavily soiled laundry. **EXTRA RINSE** This appliance is designed to save energy. If it necessary to rinse the laundry using an extra quantity of water (extra rinse), select this option. Some additional rinses will be performed. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft. **DELAY START** The programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button. **START PAUSE** This button allows you to start or to interrupt the selected programme. **TIME MANAGER** These buttons allows you to modify the programme duration automatically proposed by the appliance. **DOOR LOCKED PILOT LIGHT** The pilot light 9 illuminates when the programme starts and indicates if the door can be opened: · light on: the door cannot be opened.

The machine in working or has stopped with water left in the tub. · light off: the door can be opened. The programme is finished or the water has been emptied out. · light flashing: the door is opening electrolux 7 **DISPLAY 7.4 7.5 7.1 7.3 7.2** The display shows the following information: 7.1: · Duration of the selected programme After selecting a programme, the duration is displayed in hours and minutes (for ex).

The duration is calculated ample automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute. · Delayed start The Selected delay set by pressing the relevant button appears on the display for few seconds, then the duration of the selected programme is displayed again. · Alarm codes In the event of operating problems, some alarm codes can be displayed, for exam(see paragraph «What to do ple if.

»). · Incorrect option selection If an option which is not compatible with the set wash programme is selected, the message Err is displayed at the bottom of the display for a few seconds and the integrated red light of button 8 start flashing. · End of programme When the programme has finished three flashing zeros are displayed, the pilot light 9 and the pilot light of button 8 go out and the door can be opened. 7.

2: Washing programme phase icons · Wash · Rinses · Drain · Spin By selecting the wash programme, the washing programme phase icons corresponding to the various phases making up the programme are shown in the bottom part of the display. After having pressed button 8 only the icon of the running phase stays on. 7.3: Heating phase During the washing cycle the display shows a temperature icon indicating that the appliance has started the heating phase of the water in the tub. 7.4: Soil degree icons · Intensive · Normal · Daily · Light · Quick · Super Quick · Refresh · Super Refresh When selecting a programme on the display appears an icon indicating the degree of soiling automatically proposed by the machine. (see «Child Safe7.5: Child safety lock ty Lock» paragraph). 8 electrolux **FIRST USE** · Ensure that the electrical and water connections comply with the installation instructions. · Remove the polystyrene block and any material from the drum.

· Pour 2 litres of water into the main of the deterwash compartment gent drawer in order to activate the ECO valve. Then run a cotton cycle at the highest temperature without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure off the programme the selec, tor dial must be turned to position to switch the machine off. Caution! If you turn the programme selector dial to another programme when the machine is working, the red pilot light of button 8 will blink 3 times and the message Err is displayed to indicate a wrong selection. The machine will not perform the new selected programme. **PROGRAMME OPTION BUTTONS** Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before pressing the button 8. **SELECT THE TEMPERATURE BY PRESSING BUTTON 2** By selecting a programme, the appliance proposes automatic out before opening the door. Stand by : once the programme has finished after a few minutes the energy saving system will be enabled. The brightness of Before you empty out the water, the drum continues to run at regular intervals until the water draining.

Follow the below instructions to empty out the water: 1. Turn the programme selector dial to O. 2. Select the draining or spinning programme. 3. Reduce the spin speed if needed, by pressing the relevant button. 4. Press button 8. At the end of the programme, the door is released and can be opened. Turn the programme selector dial to O to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. the display is reduced. By pressing any button the appliance will come out of the energy saving status. **HELPFUL HINTS AND TIPS SORTING OUT THE LAUNDRY** Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. **BEFORE LOADING THE LAUNDRY** Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time.

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net. **REMOVING STAINS** Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times. Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>

Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only).
12 electrolux Grass: soap lightly and treat with bleach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone¹), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse.
Treat any residual marks with bleach. Ink: depending on the type of ink, moisten the fabric first with acetone¹), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

@@@Note: A single or bulky item may cause imbalance.
@@@The maximum spin speed is automatically reduced. Rinse Rinse - Long spin Spin at the maximum speed Max. @@To intensify the rinsing action, select the option EXTRA RINSE. The appliance will add some additional rinses. @@@Spin Drain and long spin Spin at the maximum speed Max. @@@@load 8 kg White and fast coloured cotton. @@The temperature will decrease and the washing time will be extended.

This allows to obtain a good washing efficiency so saving energy. @@load 1 kg Selecting this programme the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses. Jeans 60° - 30° Main wash - Rinses Maximum spin speed 900 rpm Max. load 4 kg With this programme it is possible to wash items like pants, shirts or jackets in Jeans and also jersey realized with hi-tech materials. (The Extra Rinse option will be activated automatically). 14 Min. 30° Main wash - Rinses Maximum spin speed 900 rpm Max. load 2 kg Short washing cycle ideal for laundry which only needs freshening up.

SPIN REDUCTION Options Detergent Compartment SPIN REDUCTION RINSE HOLD PREWASH1) EXTRA RINSE SPIN REDUCTION RINSE HOLD PREWASH1) EXTRA RINSE SPIN REDUCTION RINSE HOLD PREWASH1) SPIN REDUCTION RINSE HOLD electrolux 15 Programme - Maximum and Minimum Temperature - Cycle Description - Maximum Spin Speed Maximum Fabrics Load - Type of Laundry Curtains 40° - 30° Prewash - Main wash - Rinses Maximum spin speed at 700 rpm Max. load 2 kg This programme it is possible to wash with an extra water load. The machine will add automatically a prewash phase before the main wash to eliminate the dust. (Do not put any detergent in the prewash compartment). Blanket 40° - 30° Main wash - Rinses Maximum spin speed at 700 rpm Max.

load 2,5 kg For a single washable synthetic blanket or duvet. O = OFF For cancelling the programme which is running or to switch the machine off. 1) If using liquid detergents, a programme without PREWASH must be selected. 2) If you select the Super Quick option by pressing the buttons 10, we recommend that you reduce the maximum load as indicated in this chart. Full loading is possible however with somewhat reduced cleaning results.

If you select the Refresh or Super Refresh option, we recommend that you reduce the load even more. Options SPIN REDUCTION RINSE HOLD EXTRA RINSE Detergent Compartment SPIN REDUCTION CARE AND CLEANING Warning! You must disconnect the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. DESCALING The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. AFTER EACH WASH Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. MAINTENANCE WASH With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: · The drum should be empty of laundry. · Select the hottest cotton wash programme. · Use a normal measure of detergent, must be a powder with biological properties. EXTERNAL CLEANING Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Important! Do not use methylated spirits, solvents or similar products to clean the cabinet. @@@@1/4 measuring cup of detergent. @@@@The drum cannot turn. @@@Warning! 1. Disconnect the mains plug from the mains socket.

2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump. To clean the drain pump: 1.

Open the pump door. WASHING DRUM Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron. Important! Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool. 1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.

electrolux 17 2. Put a container below the recess of the drain pump to collect the water that flows out. 3. Press the two levers and pull forward the drainage duct to let the water flow out. 8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre. 4. When the container is full of water, put the drainage duct back again and empty the container. Do steps 3 and 4 again and again until no more water flows out from the drain pump.

9. Clean the filter under the water tap and put it back in the pump into the special guides. 10. Make sure that you tighten correctly the filter to prevent leakages. 1 2 11. Close the drain pump door. 5. Pull back the drainage duct. 6. Unscrew the filter and remove it.

1 2 Warning! Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When refitting the pump cover, ensure it is securely re-tightened so as to stop leaks and young children being able to remove it. CLEANING THE WATER INLET FILTERS If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked. 1. Turn off the water tap.

2. Unscrew the water inlet hose. 7. Remove fluff and objects from the pump. 18 electrolux 3. Clean the filter in the hose using a hard bristle brush. 4. Screw the hose back onto the tap. 5. Unscrew the hose from the machine. Keep a rug nearby because some water may flow. 6. Clean the filter in the valve with a stiff brush or with the piece of cloth. 7. when the container is full of water, put the drainage duct back again and empty the container; repeat this operation until water stops flowing out; 8.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>

if necessary clean the pump (refer to the section 'Drain pump'); 9. close the drain pump door. When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. **FROST PRECAUTIONS** If the machine is installed in a place where the temperature could drop below 0°C, remove the remaining water from the inlet hose and the drain pump. 1. disconnect the mains plug from the mains socket. 2. close the water tap 3. unscrew the water inlet hose from the tap; 4. put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. empty the drain pump as described in the 'Emergency drain' section. 6. when the drain pump is empty, install the water inlet hose again. **Warning!** Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. 7. Screw the hose back to the machine and make sure the connection is tight. 8. Turn on the water tap. **EMERGENCY EMPTYING OUT** If the appliance cannot drain the water, proceed as follows to empty out the machine: 1. pull out the plug from the power socket; 2. close the water tap; 3. if necessary, wait until the water has cooled down; 4. open the pump door; 5. place a container on the floor below the recess of the drain pump; 6. press the two levers and pull forward the drainage duct to let the water flow out; **WHAT TO DO IF.**

.. Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red pilot light of button 8 blinks, one of the following alarm codes appears on the display and some acoustic signals sound every 20 seconds to indicate that the machine is not working: electrolux 19 : problem with the water supply. : problem with the water draining. : door open. Once the problem has been eliminated, press the button 8 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Possible cause/Solution The door has not been closed. · Close the door firmly. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation.

The main fuse has blown. · Replace the fuse. The selector dial is not correctly positioned and/or the button 8 has not been pressed. · Please turn the selector dial and press the button 8 again. The delay start has been selected. · If the laundry are to be washed immediately, cancel the delay start. The Child Safety Lock has been activated. · Deactivate the Child Safety Lock. The water tap is closed. · Open the water tap. The inlet hose is squashed or kinked. · Check the inlet hose connection. The filter in the inlet hose or in the inlet valve filter are blocked. · Clean the water inlet filters (see 'Cleaning the water inlet filters' for more details). The door is not properly closed.

· Close the door firmly. The washing machine does not start: The machine does not fill: The machine fills then empties immediately: The end of the drain hose is too low. · Refer to relevant paragraph in «Water drainage» section. The drain hose is squashed or kinked. · Check the drain hose connection. The drain filter is clogged. · Clean the drain filter. An option or a programme that ends with the water still in the tub or that eliminates all the spinning phases has been selected. · Select the draining or spinning programme. The laundry is not evenly distributed in the drum.

· Redistribute the laundry. The machine does not empty and/or does not spin: 20 electrolux Problem Possible cause/Solution Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.

· Check the water inlet hose connection. The drain or inlet hose is damaged. · Replace it with a new one. The filter has not been properly screwed in after cleaning action. · Screw the filter fully in. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load. · Reduce the laundry load. The programme is still running. · Wait the end of washing cycle.

The door lock has not been released. · Wait until the symbol or light (depending on the model) has gone out. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance. The support feet have not been adjusted · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum.

· Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. · Redistribute the laundry. The load is too small. · Add more items, redistribute the load manually and then select the spinning programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors.

This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. There is water on the floor: Unsatisfactory washing results: The door will not open: The machine vibrates is noisy: Spinning starts late or the machine does not spin: The machine makes an unusual noise: No water is visible in the drum: electrolux 21 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>

Mod.

... Prod. No.

.....

Ser. No. ...

TECHNICAL DATA Dimensions Width Height Depth Depth (Overall dimensions) 60 cm 85 cm 60 cm 63 cm Electrical connection Voltage - Overall power - Fuse Water supply pressure Maximum Load Spin Speed Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door. Minimum Maximum Cotton Maximum 0,05 MPa 0,8 MPa 8 kg 1400 rpm CONSUMPTION VALUES Programme White Cottons 90° Cottons 60° Cotton ECO 60° 1) Cottons 40° Synthetics 40° Delicates 40° Wool/ Handwash 30° Energy consumption (KWh) 2.6 1.6 1.36 0.95 0.6 0.7 0.35 Water consumption (litres) 69 65 59 65 55 69 58 For the duration of the programmes, please refer to the display on the control panel. Programme duration (Minutes) 1) «Cottons Eco» at 60°C with a load of 8 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. **INSTALLATION UNPACKING** All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 22 electrolux 5. Open the porthole and remove the polystyrene block fitted on the door seal. 2. Remove the power supply cable and the draining and inlet hose from the hose holders on the rear of the appliance. 6.

Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. 3. Unscrew the three bolts. 2 1 4. Slide out the relevant plastic spacers.

POSITIONING Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable.

If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. **Caution!** @@@@Do not place the inlet hose downwards. @@@@Mount the rubber feet to prevent vibration, noises and displacement of the appliance during operation. Read carefully the instructions supplied with the kit. **WATER INLET Warning!** This appliance must be connected to a cold water supply. 1. Connect the water inlet hose supplied with the machine to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

45° 35° 3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. The inlet hose must not be lengthened. @@@@Note ! Check if the water connections are tight. Important! @@@@In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. Important! Do not use the hose from your previous machine to connect to the water supply. 24 electrolux - In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground.

· Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked.

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.

ELECTRICAL CONNECTION Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use. Connect the machine to an earthed socket.

The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution. The power supply cable must be easily accessible after installing the machine. Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre. **ENVIRONMENT CONCERNS** The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. **PACKAGING MATERIALS** The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene electrolux 25 This means that they can be recycled by disposing of them properly in appropriate collection containers. **ECOLOGICAL HINTS** To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).

· The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 26 electrolux electrolux 27 www.electrolux.com/shop 132949961-A-302011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF 148420 user guide](http://yourpdfguides.com/dref/3978797)
<http://yourpdfguides.com/dref/3978797>