



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF1062EDU. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF1062EDU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF1062EDU
User guide AEG-ELECTROLUX EWF1062EDU
Operating instructions AEG-ELECTROLUX EWF1062EDU
Instructions for use AEG-ELECTROLUX EWF1062EDU
Instruction manual AEG-ELECTROLUX EWF1062EDU



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1062EDU user guide](http://yourpdfguides.com/dref/4583632)
<http://yourpdfguides.com/dref/4583632>

Manual abstract:

.....
.....
.....
.....

.....
.... *EN WASHING MACHINE USER MANUAL 2* www.electrolux.com *CONTENTS* 1. 2. 3. 4.
5. 6. 7. 8. 9. 10. 11. 12. 13. *SAFETY INFORMATION* .

.....
.....
.....
.....

.....
.....
.....
3 SAFETY INSTRUCTIONS

.....
.....
.....
.....

.....
4 PRODUCT DESCRIPTION

.....
.....

.....
.....
.....

..... **6 CONTROL PANEL** .

.....
.....
.....
.....

.....
.....
.....
..... **6 WASHING PROGRAMMES**

.....
.....
.....
.....

.....
..... **7 CONSUMPTION VALUES** . .

.....
.....

.....
.....
.....
.....

..... **9 OPTIONS**

.....
.....
.....

1 Children and vulnerable people safety WARNING! Risk of suffocation, injury or permanent disability. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. • Do not let children play with the appliance. • Keep all packaging away from children. • Keep all detergents away from children.

• Keep children and pets away from the appliance door when it is open. • If the appliance has a child safety device, we recommend you activate it. • Cleaning and user maintenance shall not be made by children without supervision. 1.2 General Safety @@ • Do not change the specification of this appliance.

• Obey the maximum load volume of 6 kg (refer to the "Programme chart" chapter). 4 www.electrolux.com • If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. • The operating water pressure (minimum and maximum) must be between 0,5 bar (0,05 MPa) and 8 bar (0,8 MPa) • The ventilation openings in the base (if applicable) must not be obstructed by a carpet. @@@@ • Keep the transit bolts. When you move the appliance again you must block the drum. • Do not install or use a damaged appliance. @@ • Obey the installation instruction supplied with the appliance. @@ • Do not install the appliance where the appliance door can not be fully opened.

• Always be careful when you move the appliance because it is heavy. Always wear safety gloves. • Make sure that there is air circulation between the appliance and the floor. • Adjust the feet to have the necessary space between the appliance and the carpet. WARNING! Risk of fire and electrical shock. • The appliance must be earthed. • Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician. •

Always use a correctly installed shockproof socket. • Do not use multi-plug adapters and extension cables.

• Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. • Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. • Do not pull the mains cable to disconnect the appliance.

Always pull the mains plug. • Do not touch the mains cable or the mains plug with wet hands. • This appliance complies with the E.E.C.

@@@ Old hose sets must not be reused. @@@@ Risk of injury or damage to the appliance. @@ • Do not use water spray and steam to clean the appliance. • Clean the appliance with a moist soft cloth. Only use neutral detergents. @@@@ • Use this appliance in a household environment. • Do not change the specification of this appliance. • Obey the safety instructions on the detergent packaging. • Do not put flammable products or items that are wet with flammable products in, near or on the appliance. • Do not touch the glass of the door while a programme operates.

The glass can be hot. • Make sure that you remove all metal objects from the laundry. 2.4 Disposal WARNING! Risk of injury or suffocation. • Disconnect the appliance from the mains supply. • Cut off the mains cable and discard it. • Remove the door catch to prevent children and pets to get closed in the appliance.

6 www.electrolux.com 3.

PRODUCT DESCRIPTION 1 2 3 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Drain pump filter 6 Rating plate 7 Feet for the appliance level 4 5 6 7 4. CONTROL PANEL 1 2 3 4 Синтетика Тонкие ткани Отжим Температура Быстро Освежить Шторы Джинсы Отжим Слив Полоскание Хлопок Хлопок Eco Предварит. Отсрочка старта стирка 5 6 7 Быстро Доп. полоскание Шерсть/ Ручная стирка Шелк Одеяла Старт/Пауза 9 1 Programme knob 2 Spin reduction touchpad 6 Extra rinse touchpad 8 (Отжим) 7 (Доп. полоскание) Quick touchpad (Быстро) (Старт/Пауза) 9 Programme status indicators: and functions indicators: No spin indicator Rinse hold indicator 3 Temperature touchpad 8 Start/Pause touchpad (Температура) 4 Prewash touchpad (Предварит.

стирка) 5 Delay start touchpad --- Door locked indicator End cycle indicator Child lock indicator (Отсрочка старта) ENGLISH 7 5. WASHING PROGRAMMES Programme Temperature range Хлопок 90° C - Cold Type of load and soil Maximum load, Maximum spin White cotton and coloured cotton (normal soil and light soil).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1062EDU user guide](http://yourpdfguides.com/dref/4583632)

<http://yourpdfguides.com/dref/4583632>

6 kg, 1000 rpm for model EWS1062EDU, 1200 rpm for model EWS1262EDU White cotton and colour-fast cotton. Normal soil. 6 kg, 1000 rpm for model EWS1062EDU, 1200 rpm for model EWS1262EDU Synthetic items or mixed fabric items.

Normal soil. 3 kg, 1000 rpm for model EWS1062EDU, 1200 rpm for model EWS1262EDU Delicate fabrics as acrylics, viscose, polyester items. Normal soil. 3 kg, 1000 rpm for model EWS1062EDU, 1200 rpm for model EWS1262EDU Machine washable wool, hand washable wool and delicate fabrics with «hand washing» care symbol. @@@@2 kg, 800 rpm To rinse and spin the laundry. All fabrics. @@All fabrics. 6 kg To spin the laundry. All fabrics. @@Also for items in dark colours.

@@@Light soil or items or items to refresh. @@Light soil and items to freshen up. @@@@Recommended load: cotton: 3 kg, synthetics and delicates: 1.5 kg. 6. CONSUMPTION VALUES The data of this table are approximate. @@2. A 3. 4. B •Position A for powder detergent (factory setting). •Position B for liquid detergent. @@–Do not put more liquid than the maximum level. –Do not set the prewash phase. @@@@The indicator of the set delay is on. is on.

@@@@@the To cancel the delay start: 1. @@Press the to pause the appliance. 2. 3. 4.

Wait until the door lock indicator goes off. You can open the door. Close the door and press the again. @@2. 3. 4. Press until the indicator of the set delay goes off. @@Wait for some minutes and then open the appliance door. Close the appliance door. @@•The acoustic signal operates (if it is activated).

•The indicator goes off. •The door lock indicator goes off. •The indicator is on. •You can open the door. •Remove the laundry from the appliance. Make sure that the drum is empty. •Keep the door ajar, to prevent the mildew and odours. •Close the water tap. •Turn the programme knob to deactivate the appliance. @@–The door lock indicator is on.

The flashes. The door stays indicator locked. –You must drain the water to open the door. To drain the water: 1. If necessary, decrease the spin speed. @@1. Press . The indicator flashes. 2. Change the options.

3. Press again. @@Turn the programme knob again to activate the appliance. Now, you can set a new washing programme. @@CAUTION! If the temperature and level of the water in there. Fully dry all the surfaces. CAUTION! @@2. 3. 4. 5.

6. ENGLISH 17 11.5 Cleaning the valve filter 1. 2. 3. 4. 11.6 Cleaning the drain filter WARNING! Do not clean the drain filter if the water in the appliance is hot. 1. @@@@If necessary, clean the pump. @@@@2. Start the programme to drain the water. 1. 2. 3. 4. 5. 6. Disconnect the mains plug from the mains socket. Close the water tap.

Remove the water inlet hose. @@Empty the drain pump. Refer to the emergency drain procedure. When the drain pump is empty, install the inlet hose again. WARNING! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. 11.8 Frost precautions If the appliance is installed in an area where the temperature can be less than 0° C, remove the remaining water from the inlet hose and the drain pump. 12. TROUBLESHOOTING The start of the appliance does not occur or it stops during operation.

First try to find a solution to the problem (refer to the table). If not, contact the Service. With some problems, the acoustic signals flashes operate. The red indicator and one of the indicators comes on, to show an alarm code: •- The appliance does not fill with water. •- The appliance does not drain the water. - The appliance door is open or not closed correctly. Check the door! WARNING! Deactivate the appliance before you do the checks. Problem The programme does not start. Possible solution Make sure that the mains plug is connected to the mains socket. Make sure that the appliance door is closed. Make sure that there is not a damaged fuse in the fuse box. Make sure that the Start/Pause has been pressed. If the delay start is set, cancel the setting or wait for the end of countdown. Deactivate the Child Lock function if it is on. The appliance does not fill with water.

Make sure that the water tap is open. 20 www.electrolux.com Problem Possible solution Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.

Make sure that the water tap is not clogged. Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to “Care and cleaning”. Make sure that the inlet hose has no kinks or bends. @@Make sure that the drain hose has no kinks or bends. Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to 'Care and cleaning'. Make sure that the connection of the drain hose is correct. Set the drain programme if you set a programme without drain phase.

@@Clean the filter, if necessary. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems. There is water on the floor. @@Make sure that the drain hose have no damages. Make sure you use the correct detergent and the correct quantity of it. You cannot open the appliance door. Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum.

The appliance makes an unusual noise. Make sure the levelling of the appliance is correct. Refer to 'Installation Instruction'. Make sure that the packaging and/or the transit bolts are removed. Refer to 'Installation Instruction'.

ENGLISH 21 Problem Possible solution Add more laundry in the drum. The load may be too small. The appliance fills with Make sure that the drain hose is in the correct position. water and drain imme- The hose may be too low. diately.

The washing results are not satisfactory. Increase the detergent quantity or use a different detergent. Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. Decrease the laundry load. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service. 13. TECHNICAL DATA Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 595 / 850 / 450 mm 490 mm 230 V 2000 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 6 kg 1000 rpm (EWS1062EDU) 1200 rpm (EWS1262EDU) 1) Connect the water inlet hose to a water tap with a 3/4" thread.

22 www.electrolux.com 14. ENVIRONMENT CONCERNS Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1062EDU user guide](http://yourpdfguides.com/dref/4583632)
<http://yourpdfguides.com/dref/4583632>

Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. ENGLISH 23 www.electrolux.com/shop 155219710-A-412012 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1062EDU user guide](http://yourpdfguides.com/dref/4583632)

<http://yourpdfguides.com/dref/4583632>