




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF10751. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF10751 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF10751
User guide AEG-ELECTROLUX EWF10751
Operating instructions AEG-ELECTROLUX EWF10751
Instructions for use AEG-ELECTROLUX EWF10751
Instruction manual AEG-ELECTROLUX EWF10751

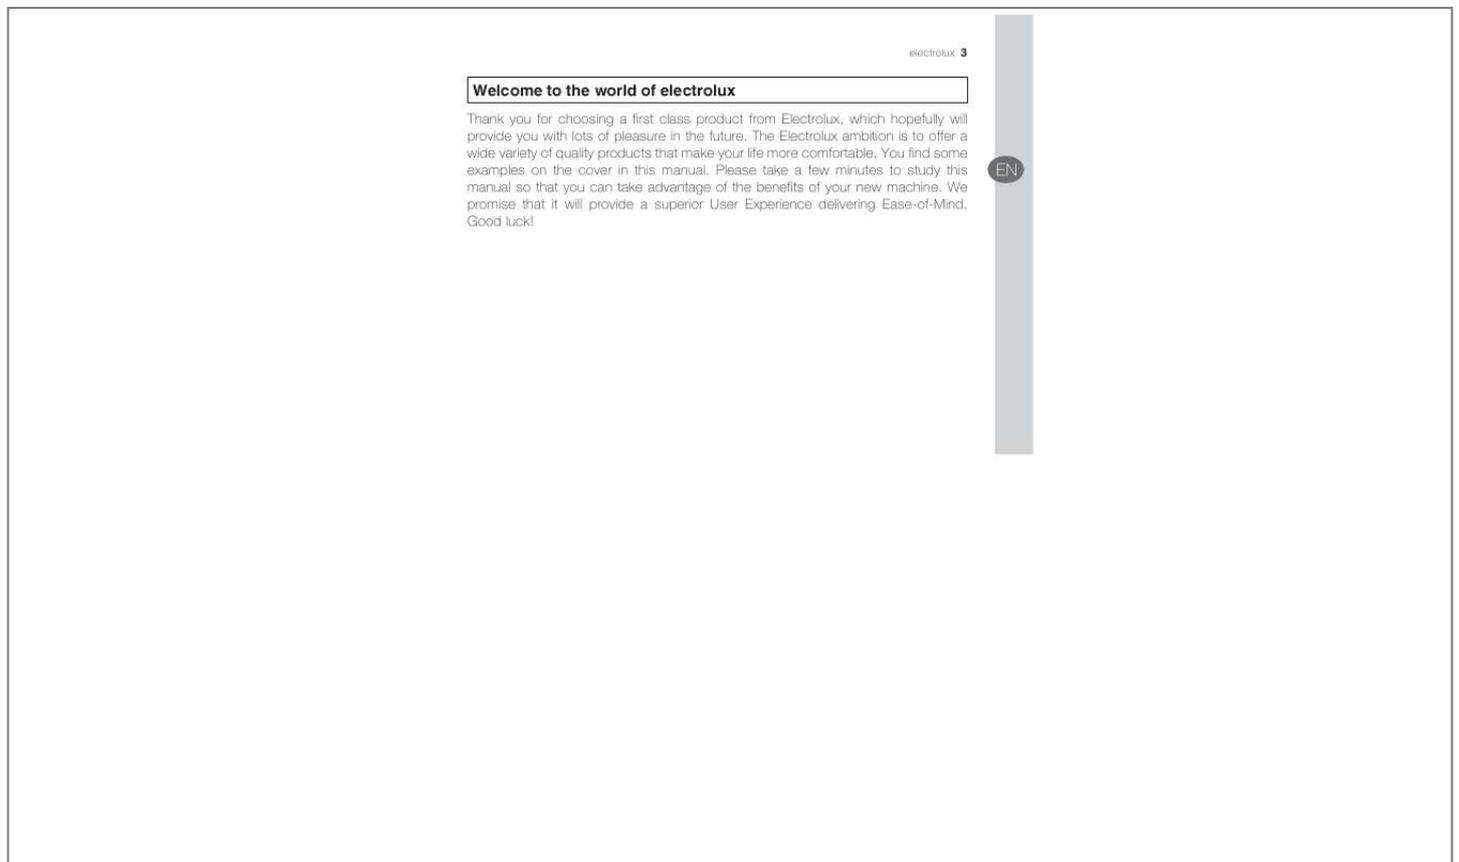

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF10751 user guide](http://yourpdfguides.com/dref/3896061)
<http://yourpdfguides.com/dref/3896061>

Manual abstract:

@@@ Good luck! EN 4 electrolux contents The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use environmentally friendly paper.

Contents Safety information

.....
.....
.....

... 5 Product description

.....
.....
.....

.. 7 Control panel

.....
.....
.....

..... 8 Use .

.....
.....
.....

.....
.....
.....
.....

9 Washing hints

.....
.....
.....

..... 15 International wash code symbols

... 18 Programme information.

.....
.....

..... 19 Washing programmes...

.....
.....
.....

.. 21 Care and cleaning

.....
.....
.....

.. 23 Something not working

.....
.....

..... 26 Technical data

.....
.....
.....
.....

30 Installation

.....
.....
.....
.....

.....
.....

..... 34 safety information electrolux 5 Safety information Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. @@@@ Contact your local Service Centre. Always insist on genuine spare parts. In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. EN General safety It is dangerous to alter the specifications or attempt to modify this product in anyway.

During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum.

To avoid this, please check into the drum before using. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you overfill. Refer to the manufacturer's recommendations of quantities.

Installation This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

6 electrolux safety information Always be sure, that there is no water leakage from hoses and their connections after the installation.

Any plumbing work required to install this appliance should be carried out by a qualified plumber. Any electrical work required to install this appliance should be carried out by a qualified electrician. Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin. Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.

Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. product description electrolux 7 Product description Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. 1 2 3 EN 8 9 4 12 10 11 7 13 56 1 Detergent Dispenser Drawer 2 Worktop 3 Control Panel 4 Door Opening Handle 5 Drain Filter 6 Rating Plate 7 Front Feet 8 Water Inlet Hose 9 Drain Hose Support 10 Mains Cable 11 Water Drain Hose 12 Hose Holders 13 Back Feet Detergent dispenser drawer Prewash Wash Fabric Softener 8 electrolux control panel Control panel 1 2 3 4 5 8 6 7 1 2 3 4 5 6 7 8 Programme selector dial See page 10. Temperature selector dial See page 10. Spin selector button See page 10. Options button See page 11.

Extra Rinse button See page 12. Start/Pause button See page 12. Delay Start button See page 13. Programme progress display See page 13. use electrolux 9 Use First Use Measure out the detergent and the fabric softener Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out the "prewash" phase, pour it into the compartment marked . EN Ensure that the electrical and water connections comply with the installation instructions. Run a cotton cycle at 90 °C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. Daily Use If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. Load the laundry Open the door by carefully pulling the door handle outwards.



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/3896061)

[ELECTROLUX EWF10751 user guide](http://yourpdfguides.com/dref/3896061)

<http://yourpdfguides.com/dref/3896061>

Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. 10 electrolux use Select the required programme Turn the programme selector dial to the required programme.

The green Start/Pause light starts to flash. Select the required temperature Turn the temperature selector dial to select the washing temperature. Maximum temperatures are: 90° C for cottons, 40° - 60° C for synthetic fabrics, 40° C for delicate fabrics, wool and fabrics to be hand-washed. By selecting position (Cold) the machine will wash with cold water. To be used for extremely delicate items, such as curtains.

The selector dial is divided into following sections: Cottons , Synthetics , Synthetics Easy Iron , Delicates Woollens , Hand Wash , Silk , Rinses . . . , Soak , Mini Program Delicate Rinses . Drain , Spin , Delicate Spin Programme Option buttons Depending on the programme, different functions can be combined.

These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. The selector dial can be turned either clockwise or anticlockwise. Position "O" to Reset programme/Switching OFF of the machine.

At the end of the programme the selector dial must be turned to position "O", to switch the machine off. Attention! If you turn the programme selector dial to another programme when the machine is working, the red Start/Pause pilot light will flash 3 times to indicate a wrong selection. The machine will not perform the new selected programme. use electrolux 11 Select the Spin Speed or No Spin () or Rinse Hold () option When the programme has finished the pilot lights (End) and (Door Lock) are on, the Start/Pause and the "wash" pilot lights are off and the door is locked to indicate that the water must be emptied out. To empty out the water: turn the programme selector dial to "O". @@The relevant light will light up. @@@@This programme will obtain good washing results by saving energy. @@@@The machine performs some additional rinses. @@@@Turn the programme selector dial to "O" to switch the machi additives Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. @@@@In this way ironing is easier.

Furthermore the machine will perform some additional rinses. @@Washing temperature is 40°C. @@@@Load Cottons - 30°C Cottons 40° - 90°C White and coloured cotton:e.g. sheets, tablecloths, linen, household, shirts, blouses,underwear. - Main wash from Spin Red./Prewash/ - 30°C Quick/ - Rinse - Long Spin - Main wash from 40° - 90°C - Rinse - Long Spin - Main wash from - 30°C - Rinse - Short Spin Spin Red./Prewash/ Economy/Quick/ EN 7.0 kg Synthetics Synthetic or mixed - 30°C fabrics, underwear, coloured garments, Synthetics non-shrink shirts, blouses. 40° - 60°C Synthetics 90°C Synthetics Easy Iron Spin Red.

(Max. 700)/ Quick/ 2.5 kg - Main wash from Spin Red.(Max. 700)/ 40° - 60°C Economy/Quick/ - Rinse - Short Spin Not available - Main wash from Spin Red.(Max. 700)/ - 30°C - Rinse - Short Spin - Main wash from Spin Red.(Max. 700)/ 40° - 60°C - Rinse - Short Spin Not available - Main wash from Spin Red.(Max.

700)/ - 40°C Quick/ 2.5 kg - Rinse - Short Spin Synthetic or mixed fabrics, underwear, coloured garments, Synthetics non-shrink shirts, Easy Iron blouses. 40° - 60°C - 30°C Synthetics Easy Iron 90°C Delicates Delicate fabrics, for example curtains. - 40°C 2.5 kg Delicates 60° - 90°C Not available 22 electrolux washing programmes Programme/ Temperature Woollens - 40°C Type of laundry Description of programme Options Spin Red./ M ax. Load Specially tested programme - Main wash from for wool garments bearing - 40°C the "Purenew wool, - Rinse non-shrink, machine - Short Spin washable" label. 2.0 kg Woollens 60° - 90°C Specially programme Hand Wash for hand washing Not available - Main wash from - 40°C - Rinse - Short Spin Spin Red./ 2.0 kg - 40°C Hand Wash fabrics. 60° - 90°C Silk only at 40°C Soak only at 30°C Mini Program only at 30°C Rinse Silk items to be gentle washed and spun. Heavily soiled clothes. Special short programme for lightly soiled synthetics, mixed fabrics and delicates Separate rinse cycle for cotton hand washed items. Separate rinse cycle for delicate, hand washed items.

For emptying out the last rinse water in programmes with the Rinse Hold option. Not available - Main wash at Spin Red.(Max. 700)/ 40°C 2.0 kg - Rinse - Short Spin This programme 7.0 kg allows you to soak heavily soiled clothes. Spin Red.(Max. 700)/ - Main wash at 30°C 2.5 kg - Rinse - Short Spin - Rinses - Long spin - Rinses - Long spin Spin Red./ 7.0 kg Spin Red.(Max. 700)/ 7.0 kg Delicate Rinse Drain Spin Delicate Spin - Drain of water Spin Red.

/ Spin Red.(Max. 700)/ 7.0 kg 7.0 kg - Drain Separate spin for cottons. - Long spin Separate spin for delicate. - Drain - Long spin * Cottons 60 °C programme with Eco option selected is recommended for a full load of normally soiled cottons, and is the water and energy rating label programme {in accordance with TISI1462 (IEC 60456 4th edition)}. care and cleaning electrolux 23 Care and cleaning Cleaning the dispenser drawer You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. The washing powder and additive dispenser drawer should be cleaned regularly.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. EN Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions.

This will help to prevent the formation of lime deposits. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. @@@@We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry.

Select the hottest cotton wash programme. @@@@The pump must be cleaned regularly. @@Unplug the appliance. Open the door.

@@@@@Unscrew the water inlet hose. Clean the filter using a hard bristle brush. @@Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red Start/Pause pilot light flashes to indicate that the machine is not working. Once the problem has been eliminated, press the Start/Pause button to restart the programme.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF10751 user guide](http://yourpdfguides.com/dref/3896061)
<http://yourpdfguides.com/dref/3896061>

If after all checks, the problem persists, contact your local Service Centre.

Malfunction Possible cause The door has not been closed. (Red Start/Pause pilot light flashes). The plug is not properly inserted in the power socket. **Solution** Close firmly the door. Insert the plug into the power socket. Please check your domestic electrical installation. Please turn the selector dial and press the Start/Pause button again. If the laundry are to be washed immediately, cancel the delay start. Open the water tap. The washing machine does not start: There is no power at the socket.

The selector dial is not correctly positioned and the Start/Pause button has not been depressed. The delay start has been selected. The water tap is closed. (Red Start/Pause pilot light flashes) The inlet hose is squashed or kinked. (Red Start/Pause pilot light flashes) The filter in the inlet hose is blocked. (Red Start/Pause pilot light flashes) The door is not properly closed. (Red Start/Pause pilot light flashes) Check the inlet hose connection. The machine does not fill: Clean the water inlet hose filter. Close firmly the door. The machine fills then empties immediately: The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section. something not working electrolux 27 **Malfunction Possible cause** The drain hose is squashed or kinked. (Red Start/ Pause pilot light flashes) The drain pump is clogged. (Red Start/Pause pilot light flashes) The option or has been selected. The laundry is not evenly distributed in the drum. Too much detergent or unsuitable detergent (creates too much foam) has been used. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose is damaged. Too little detergent or unsuitable detergent has been used.

Stubborn stains have not been treated prior to washing. The correct temperature was not selected. Excessive laundry load. The programme is still running. **Solution** Check the drain hose connection. Clean the drain filter. Disable the option or Select spin programme. Redistribute the laundry. Reduce the detergent quantity or use another one. The machine does not empty and/or does not spin: EN Check the water inlet hose connection.

There is water on the floor: Change it with a new one. Increase the detergent quantity or use another one. Use commercial products to treat the stubborn stains. Check if you have selected the correct temperature. Introduce into the drum less laundry. Wait the end of washing cycle. Wait about 3 minute. Select drain or spin programme to empty out the water. Unsatisfactory washing results: The door will not open: The door lock has not been released. There is water in the drum.

28 electrolux something not working **Malfunction Possible cause** The transit bolts and packing have not been removed. **Solution** Check the correct installation of the appliance. Check the correct levelling of the appliance. Redistribute the laundry. Load more laundry. The machine vibrates or is noisy: The support feet have not been adjusted. The laundry is not evenly distributed in the drum. Maybe there is very little laundry in the drum. unstable floors eg. @@The laundry is redistributed by reverse rotation of the drum.

@@@The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. Redistribute the laundry. Spinning starts late or the machine does not spin: The machine makes an unusual noise: No water is visible in the drum: something not working electrolux 29 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. EN 30 electrolux technical data Technical data Dim ensions W idt h Height Depth Power supply voltage/frequency Total power absorbed Minimum fuse protection Wat er supply pressure M inim um Maximum M ax im um L oad Cotton Synthetics and Delicates Woollens, Handwash and Silk Miniprogram Maximum 60 cm 85 cm 65 cm 220-240 V/50 Hz 2000 W 10A 0,05 MP a 0,8 MPa 7.0 2.5 2.0 2.

5 kg kg kg kg Spin Speed 1000 rpm installation electrolux 31 Installation Unpacking 5. @@in selected models only). 6. Set the machine upright and unscrew the remaining rear screw. 7.

Slide out the relevant pin. @@@@1. Using a spanner, unscrew and remove the two rear bottom screws. 2. Slide out the two plastic pins. 3. Lay the machine on its back ensuring that the hoses are not crushed. Place one of the polyethylene angle packings under the machine. 4. @@Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or cupboard units. Carefully level by screwing the adjustable feet in or out. 32 electrolux installation Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. In this case, make sure the end cannot come unhooked when the machine is emptying. Water inlet Connect the water inlet hose to a tap with 3/4" BSP thread.

Use the hose supplied with the washing machine. DO NOT USE OLD HOSES. The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks. This could be done by tying it to the tap with a piece of string or attaching it to the wall. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

90 cm Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine. For the correct functioning of the machine the drain hose must remain hooked on the proper support piece situated on the top part of back side of the appliance. 60 cm installation electrolux 33 Electrical Connection This machine is designed to operate on a 220-240 V, single-phase, 50 Hz supply.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF10751 user guide](http://yourpdfguides.com/dref/3896061)
<http://yourpdfguides.com/dref/3896061>

Check that your domestic electrical installation can take the maximum load required (2.0 kW), also taking into account any other appliances in use.
EN Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. Please ensure that when the appliance is installed the power supply cable is easily accessible. 34 electrolux environment concerns Environment concerns Packaging materials Ecological hints The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF10751 user guide](http://yourpdfguides.com/dref/3896061)
<http://yourpdfguides.com/dref/3896061>