



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF1284EDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF1284EDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF1284EDW
User guide AEG-ELECTROLUX EWF1284EDW
Operating instructions AEG-ELECTROLUX EWF1284EDW
Instructions for use AEG-ELECTROLUX EWF1284EDW
Instruction manual AEG-ELECTROLUX EWF1284EDW



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1284EDW user guide](http://yourpdfguides.com/dref/5028466)
<http://yourpdfguides.com/dref/5028466>

and mixed fabric items. Light soil and items to freshen up. For 5 - 6 shirts. @@@@ During the washing phase the programme duration is automatically calculated and can greatly be reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 8 kg, the programme duration exceeds 2 hours; real load 1 kg, the programme duration don't reach 1 hour).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1284EDW user guide](http://yourpdfguides.com/dref/5028466)
<http://yourpdfguides.com/dref/5028466>

When the appliance is calculating the real programme duration a dot blinks in the display. The data of this table are approximate. @@= cold water. Indicator The display shows the set temperature.

SPIN With this option you can change the default spin speed. The indicator of the set speed comes on. @@Only the drain phase is available. • The related indicator comes on. • Set this option for very delicate fabrics.

@@• The related indicator comes on. • There is a water in the drum when the programme is completed. • The drum turns regularly to prevent the laundry creases. • The door stays locked. • You must drain the water to unlock the door. @@@@Use this option for heavy soil. When you set this option the programme duration increases. The related indicator comes on. @@The display shows the related indicator. @@@@The related indicator comes on.

EASY IRO again until the display shows the delay you want to set. The related indicator comes on the display. : • Press – The appliance starts the countdown. @@You can cancel or change the set of. @@1. Press 2. Press until the display shows '. Press again to start the programme immediately. @@. The indicator flashes.

1. Press 2. Change the options. again. The programme con3.

Press tinues. CANCELLING A PROGRAMME 1. @@2. Turn the programme knob again to activate the appliance. Now, you can set a new washing programme.

The appliance does not drain the water. @@display shows the indicator Caution! @@Press to pause the appliance. 2. Wait until the door lock indicator goes off. 3. You can open the door. again. 4. Close the door and press The delay start continues to operate. Open the appliance door when the programme operates: 1.

Turn the programme knob to deactivate the appliance. 2. Wait for some minutes and then open the appliance door. 3. Close the appliance door. 4. Set the programme again. AT THE END OF THE PROGRAMME • The appliance stops automatically. • The acoustic signal operates (if it is activated). • In the display comes on.

goes off. • The indicator • The door lock indicator goes off. • Remove the laundry from the appliance. Make sure that the drum is empty. • Keep the door ajar, to prevent the mildew and odours.

• Close the water tap. • Turn the programme knob to deactivate the appliance. @@– The door lock indicator is on. The door stays locked. – You must drain the water to open the door.

To drain the water: 1. If necessary, decrease the spin, the applispeed. if you set ance only drains. . The appliance drains the 2. Press water and spins. 3. @@4. @@@@• All indicators and the display go off. @@@@• Do not wash together white and coloured items.

• Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. • Button up pillowcases, close zippers, hooks and poppers. Tiremaining water from the inlet hose and the drain pump. 1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3. Remove the water inlet hose.

4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Refer to the emergency drain procedure. 6. When the drain pump is empty, install the inlet hose again. Warning! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. 18 electrolux TROUBLESHOOTING The start of the appliance does not occur or it stops during operation.

First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: • - The appliance does not fill with water. Problem The programme does not start. - The appliance does not drain the water. • - The appliance door is open or not closed correctly. Please check the door! • - The mains supply is unstable. Wait until the mains supply is stable. Warning! @@Make sure that the appliance door is closed. Make sure that there is not a damaged fuse in the fuse box.

Make sure that the Start/Pause has been pressed. @@@@Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. Make sure that the water tap is not clogged. @@Refer to "Care and cleaning". Make sure that the inlet hose has no kinks or bends. @@Make sure that the drain hose has no kinks or bends. Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to 'Care and cleaning'.

Make sure that the connection of the drain hose is correct. Set the drain programme if you set a programme without drain phase. @@Clean the filter, if necessary. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again.

@@Possible solution Make sure that the couplings of the water hoses are tight and there is not water leakages. Make sure that the drain hose have no damages. Make sure you use the correct detergent and the correct quantity of it. You cannot open the appliance door. The appliance makes an unusual noise. Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum. Make sure the levelling of the appliance is correct. Refer to 'Installation'. Make sure that the packaging and/or the transit bolts are removed. Refer to 'Installation'. Add more laundry in the drum. The load may be too small. The appliance fills with water and drain immediately. The washing results are not satisfactory.

Make sure that the drain hose is in the correct position. The hose may be too low. Increase the detergent quantity or use a different detergent. Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. Decrease the laundry load. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service. If the display shows other alarm codes.

Deactivate and activate the appliance. If the problem continues, contact the Service. TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 522 mm 540 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply Spin speed 1) Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 8 kg 1200 rpm Maximum load Cotton Maximum 1) Connect the water inlet hose to a water tap with a 3/4" thread. www.electrolux.

com/shop 132916970-A-102013 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1284EDW user guide](http://yourpdfguides.com/dref/5028466)

<http://yourpdfguides.com/dref/5028466>