



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF14589W. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF14589W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF14589W
User guide AEG-ELECTROLUX EWF14589W
Operating instructions AEG-ELECTROLUX EWF14589W
Instructions for use AEG-ELECTROLUX EWF14589W
Instruction manual AEG-ELECTROLUX EWF14589W



Bruksanvisning
Brugsanvisning

Tvättmaskin
Vaskemaskine
EWF 14589 W



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF14589W user guide](http://yourpdfguides.com/dref/5112117)
<http://yourpdfguides.com/dref/5112117>

Manual abstract:

@@P1088 Använd inte slangen till din gamla maskin för att ansluta till vattenledningen. @@Plastfilm, polystyren) kan være farlig for børn fare for kvælning! Spin Easy Iron Extra Rinse Delay Start/Pause Special Wool Delicates Synthetics 1 2 3 4 5 6 7 8 9 1 2 3 4 5 6 7 8 9 Programvælger Knap til temperatur Knap til centrifugeringsreduktion Knap til strygelet Knap til ekstra skyl Knap for udskudt start Display for programforløb Start/Pause-knap Time Manager-knap 132979145_DANESE. @@@@Maksimumhastighederne er: •for bomuld: 1400 o/m ; •for syntetiske stoffer, håndvask og uld: 900 o/m. @@@@Separat centrifugering til bomuld Til annullering af det igangværende vaskeprogram og for at slukke for maskinen Reduc. @@@@Der er vand på gulvet: Der er anvendt for meget eller et uegnet vaskemiddel (danner for meget skum). @@Anbring aldrig pap, træ eller lignende materialer under maskinen for at kompensere for eventuelle ujævnheder på gulvet. @@.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF14589W user guide](http://yourpdfguides.com/dref/5112117)
<http://yourpdfguides.com/dref/5112117>