




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF1476GDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF1476GDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EWF1476GDW**  
**User guide AEG-ELECTROLUX EWF1476GDW**  
**Operating instructions AEG-ELECTROLUX EWF1476GDW**  
**Instructions for use AEG-ELECTROLUX EWF1476GDW**  
**Instruction manual AEG-ELECTROLUX EWF1476GDW**

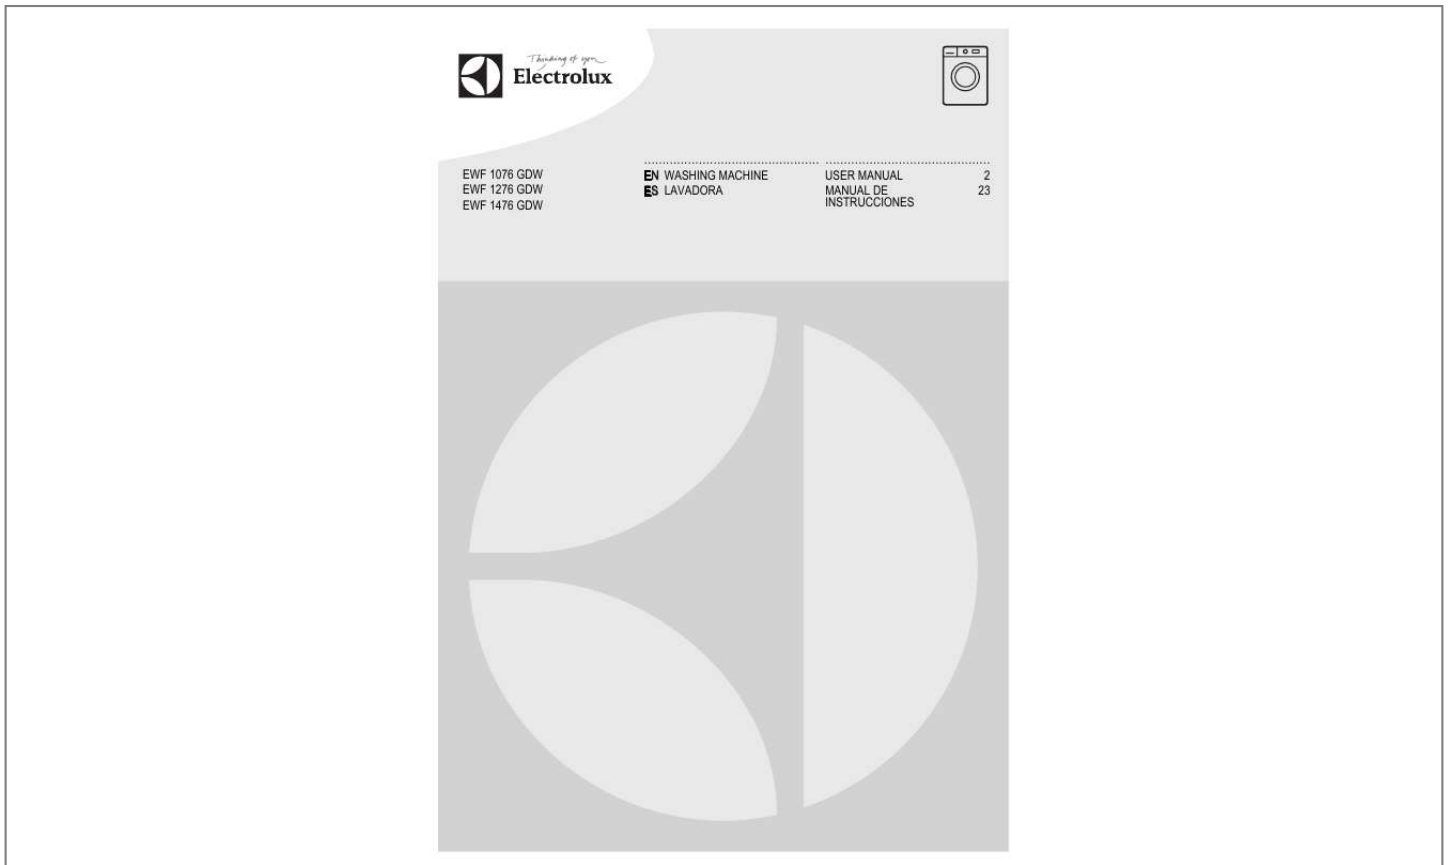

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1476GDW user guide](http://yourpdfguides.com/dref/4472494)  
<http://yourpdfguides.com/dref/4472494>



Rinse Hold • Set this option to prevent the laundry creases. □ The washing programme stops with the water in the drum. The drum turns regularly to prevent the laundry creases. • The door stays locked. You must drain the water to unlock the door. • The display shows the indicator . @@@@ □ The rinse phase uses more water for some washing programmes. □ The washing programme stops with the water in the drum.

The drum turns regularly to prevent the laundry creases. • The door stays locked. You must drain the water to unlock the door. • The display shows the indicator . @ @ 7.

@@@@The related indicator comes on. 7. @@@@The related indicator comes on. 7. @@ or to decrease or increase the Press programme duration.

The Time Manager is available only with the programmes in the table. @@@@: the appliance • Before you press cannot start. indicator Eco 7.

@@@@@@@@@@@@@@@@ 7. @@@Put 2 litre of water in the detergent compartment for washing phase. This activates the drain system. @@ 3. @@This removes all possible dirt from the drum and the tub. Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance.

Make sure not to put too much laundry in the drum. Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry. 9. @@@@ □ Do not put more liquid than the maximum level. □ Do not set the prewash phase. □ Do not set the delay start. 9. 3

Activating the appliance Press the On/Off button to activate or deactivate the appliance. A tune sounds when the appliance is activated.

@@@@If you set something incorrect, the display shows the message Err. @@ flashes. @@@@ – Use a washing bag to wash small items. □ A very small load can cause balance problems with the spin phase. @@ 10.

@@@@Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric. 3 Detergents and additives • Only use detergents and additives specially made for washing machines. □ Do not mix different types of detergents. □ To help the environment, do not use more than the correct quantity of detergent.

□ Obey the instructions that you find on the on packaging of these products. □ Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. □ If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. □

Always start a washing programme with the maximum load of laundry. □ If necessary, use a stain remover when you set a programme with a low temperature. □ To use the correct quantity of the detergent, check the water hardness of your domestic system 10. 5 Water hardness If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener. @@Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product.

10. @@Before maintenance, disconnect the appliance from the mains supply. @@Do this separately from the laundry wash. Always obey the instructions that you find on the packaging of the product. 11. 1 External cleaning Clean the appliance only with soap and warm water. Fully dry all the surfaces. 3

Maintenance wash With the low temperature programmes it is possible that some detergent stays in the drum. make regularly a maintenance wash. To do this: • Remove the laundry from the drum.

□ Set the cotton programme with the detergent quantity or use a different detergent. Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. Com After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Service. If the display shows other alarm codes. deactivate and activate the appliance. If the problem continues, contact the Service. 13.

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 522 mm 540 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum

Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 7 kg 1000 rpm (EWF 1076GDW) 1200 rpm (EWF1276GDW) 1400 rpm (EWF1476GDW) 1)

Connect the water inlet hose to a water tap with a 3/4" thread. 14. ENVIRONMENT CONCERNS Recycle the materials with the symbol . put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/4472494)

[ELECTROLUX EWF1476GDW user guide](http://yourpdfguides.com/dref/4472494)

<http://yourpdfguides.com/dref/4472494>