




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF1487HDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF1487HDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX EWF1487HDW**  
**User guide AEG-ELECTROLUX EWF1487HDW**  
**Operating instructions AEG-ELECTROLUX EWF1487HDW**  
**Instructions for use AEG-ELECTROLUX EWF1487HDW**  
**Instruction manual AEG-ELECTROLUX EWF1487HDW**

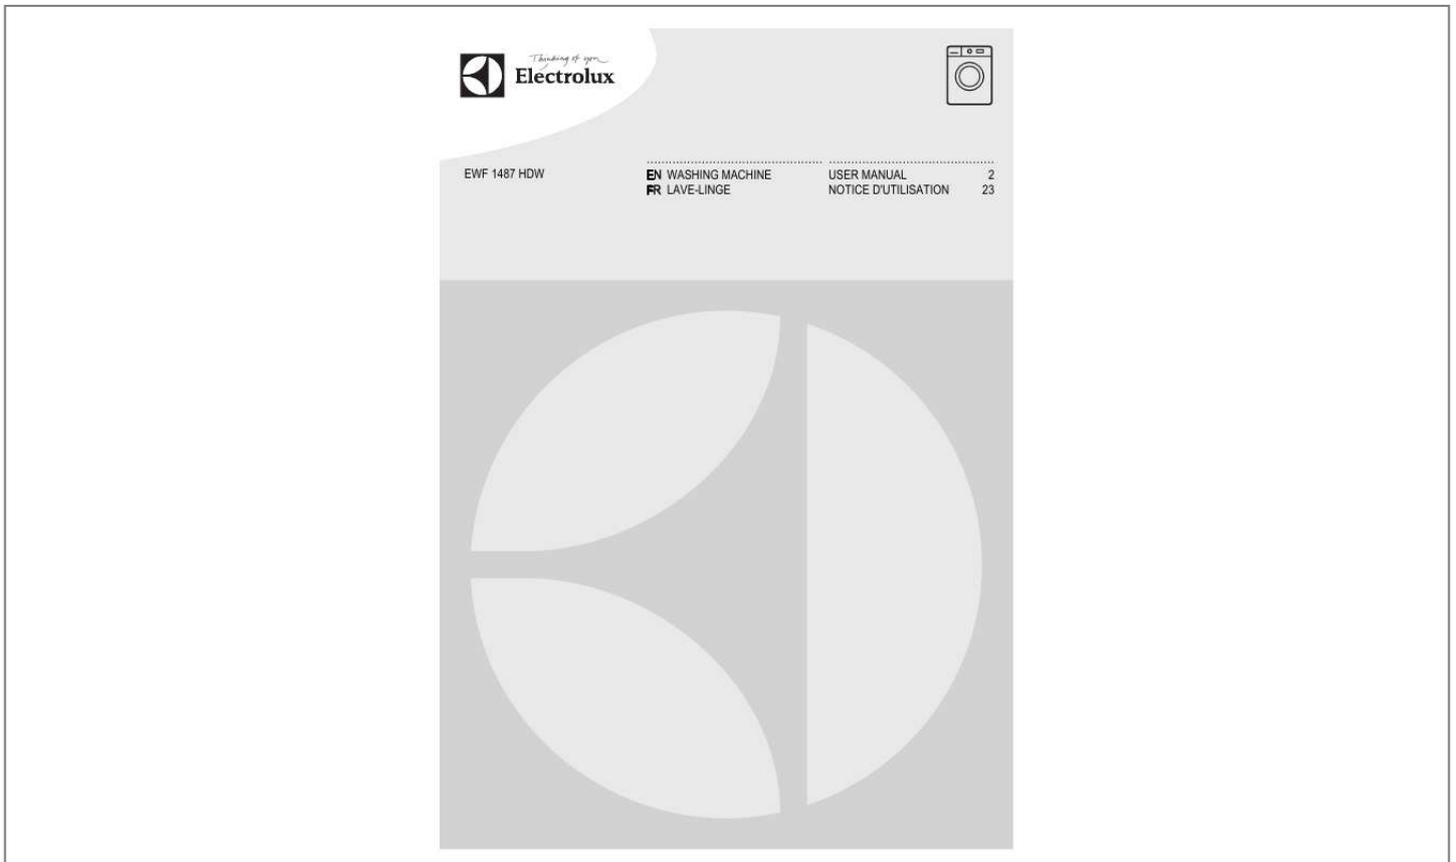

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1487HDW user guide](http://yourpdfguides.com/dref/4378430)  
<http://yourpdfguides.com/dref/4378430>



Different causes can change the data: the quantity and type of laundry, the water and ambient temperature. 1 Temperature Set this option to change the default temperature.

indicator = cold water. The display shows the set temperature. @ @ □ The display shows the indicator. Rinse Hold â€¢ Set this option to prevent the laundry creases. 7.

2 Spin With this option you can decrease the default spin speed. The display shows the indicator of the set speed. Com @@ The drum turns regularly to prevent the laundry creases. □ The door stays locked. You must drain the water to unlock the door. □ The display shows the indicator. @@ extra Silent â€¢ Set this option to remove all spin phases and to perform a silent washing. @@@@ The drum turns regularly to prevent the laundry creases. □ The door stays locked. You must drain the water to unlock the door.

□ The display shows the indicator. @@ The related indicator comes on. 7. @@ or to decrease or increase the Press programme duration. The Time Manager is available only with the programmes in the table. @@@@ Use this option for heavy soil. When you set this option the programme duration increases. The related indicator comes on. 3) 7. @@ The display shows the related indicator.

3) Longest: for laundry with heavy soil. 7. @@@@ The related indicator comes on. 7. @@ The appliance decreases the spin speed and uses more water. @@ □ 1 stripe: the less efficient setting. @@@@ â€¢ Set the possible lower washing temperature. â€¢ Do not set the Prewash option. @@@@ â€¢ Before you press : the appliance cannot start. 7.

@@@@ 7. @@@@ @@@@ □ Close the water tap. @@ 9. @@@@ @@@@ You must drain the water to open the door. To drain the water: If necessary, decrease the spin speed. If you set , the appliance only drains. The appliance drains the water and spins. 3. @@@@ @@@@ The display shows the end of the last set programme. Turn the programme knob to set a new cycle.

Press the button for some seconds to deactivate the appliance. @@ 1 The laundry load â€¢ Divide the laundry in: white, coloured, synthetics, delicates and wool. â€¢ Obey the washing instructions that are on the laundry care labels. â€¢ Do not wash together white and coloured items. â€¢ Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. â€¢ Empty the pockets and unfold the items. â€¢ Turn inside out multilayered fabrics, wool and items with painted illustrations. □ Remove hard stains. â€¢ Wash with a special detergent heavy soil stains. â€¢ Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. â€¢ Do not wash in the appliance : â€¢ Laundry without hems or with cuts â€¢ Underwired bras. □ Use a washing bag to wash small items. â€¢ A very small load can cause balance problems with the spin phase.

If this occurs, adjust manually the items in the tub and start the spin phase again. 10. 2 Stubborn stains For some stains, water and detergent is not sufficient. We recommend that you remove these stains before you put the items in the appliance. Special stain removers are available.

Use the special stain remover that is applicable to the type of stain and fabric. @@ â€¢ Do not mix different types of detergents. â€¢ To help the environment, do not use more than the correct quantity of d Make sure that the connection of the water inlet hose is correct. ENGLISH 21 Problem The appliance does not drain the water. Possible solution Make sure that the sink spigot is not clogged. Make sure that the drain hose has no kinks or bends. Make sure that the drain filter is not clogged. Make sure that the connection of the drain hose is correct. refer to 'Care and cleaning'. @@@@ set the spin programme.

Make sure that the drain filter is not clogged. Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems. There is water on the floor. Make sure that the couplings of the water hoses are tight and there is not water leakages. Make sure that the drain hose have no damages. Make sure you use the correct detergent and the correct quantity of it. You cannot open the appliance door. Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum.

The appliance makes an unusual noise. Make sure the levelling of the appliance is incorrect. refer to 'Installation'. Make sure that the packaging and/or the transit bolts are removed. refer to 'Installation'.

Add more laundry in the drum. The load may be too small. The appliance fills with Make sure that the drain hose is in the correct position. Water and drain inne- The hose may be too low. diately.

The washing results are not satisfactory. Increase the detergent quantity or use a different detergent. Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. If the display shows other alarm codes. deactivate and activate the appliance. If the problem continues, contact the Service. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service.

13. TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 605 mm 640 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 8 kg 1400 rpm 1) Connect the water inlet hose to a water tap with a 3/4" thread. 14. ENVIRONMENT CONCERNS Recycle the materials with the symbol . put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1487HDW user guide](http://yourpdfguides.com/dref/4378430)  
<http://yourpdfguides.com/dref/4378430>