




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF1697HDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF1697HDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF1697HDW
User guide AEG-ELECTROLUX EWF1697HDW
Operating instructions AEG-ELECTROLUX EWF1697HDW
Instructions for use AEG-ELECTROLUX EWF1697HDW
Instruction manual AEG-ELECTROLUX EWF1697HDW

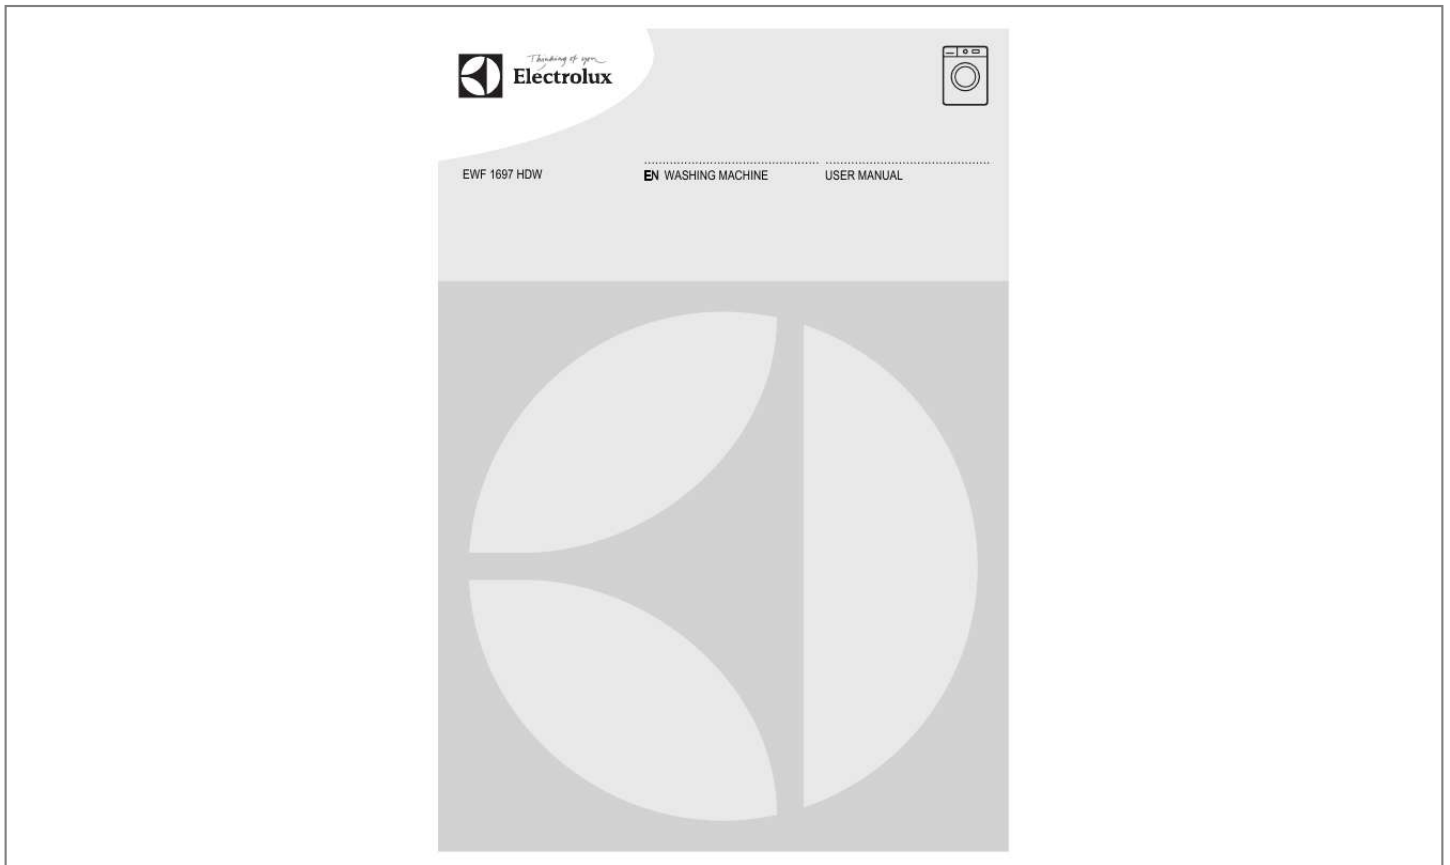

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1697HDW user guide](http://yourpdfguides.com/dref/4378518)
<http://yourpdfguides.com/dref/4378518>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. EN WASHING MACHINE USER MANUAL 2 www.electrolux.com CONTENTS 1. 2. 3. 4. 5. 6.
7. 8. 9. 10. 11.
12. 13. 14. SAFETY INFORMATION . .

.....

.....
.....
.....
.....

..... 3 SAFETY INSTRUCTIONS .

.....
.....
.....

.....
.....
.....

..... 3 PRODUCT DESCRIPTION .

.....
.....
.....
.....

.....
.....

... 5 CONTROL PANEL ...

.....

.....
.....
.....
.....

... 6 PROGRAMMES ...

.....
.....

.....
.....
.....
.....

7 CONSUMPTION VALUES

.....
.....

.....
.....
.....
.....

9 OPTIONS.....

.....
.....
.....

.....
.....
.....
.....

. 10 BEFORE FIRST USE.....

.....
.....
.....

.....
.....
.....

.... 12 DAILY USE.....

.....
.....
.....
.....

.....
.....
.....

.... 12 HINTS AND TIPS.....

.....
.....
.....
.....

.....
.....

.... 15 CARE AND CLEANING.

.....
.....
.....
.....

16 TROUBLESHOOTING.....

.....
.....

.....
.....
.....
.....

.. 20 TECHNICAL INFORMATION.....

.....
.....
.....

.....
.....

... 22 ENVIRONMENT CONCERNS .

.....
.....
.....
.....

... @@@@Ingenious and stylish, it has been designed with you in mind. @@Welcome to Electrolux. @@When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.

Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice. ENGLISH 3 1. SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety WARNING! Risk of suffocation, injury or permanent disability. • Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. • Do not let children play with the appliance.

• Keep all packaging away from children. • Keep all detergents away from children. • Keep children and pets away from the appliance door when it is open. • If the appliance has a child safety device, we recommend you activate it. 1.2 General Safety • Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. • Do not change the specification of this appliance. • Obey the maximum load volume of 9 kg (refer to the "Programme chart" chapter). 2. SAFETY INSTRUCTIONS 4 www.

electrolux.com 2.1 Installation • Remove all the packaging and the transit bolts. • Keep the transit bolts. When you move the appliance again you must block the drum. • Do not install or use a damaged appliance. • Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather. • Obey the installation instruction supplied with the appliance. • Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean. • Do not install the appliance where the appliance door can not be fully opened.

• Always be careful when you move the appliance because it is heavy. Always wear safety gloves. @@@@• This appliance complies with the E.E.C. @@@@Old hose sets must not be reused. • Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. • The first time you use the appliance, make sure that there is no leakage. 2.2 Use WARNING! Risk of injury, electrical shock, fire, burns or damage to the appliance.

• Use this appliance in a household only. • Do not change the specification of this appliance. • Obey the safety instructions on the detergent packaging. • Do not put flammable products or items that are wet with flammable products in, near or on the appliance. • Make sure that you remove all metal objects from the laundry. • Do not put a container to collect possible water leakage under the appliance. Contact the Service to ensure which accessories can be used. Electrical connection WARNING! Risk of fire and electrical shock. • The appliance must be earthed. • Make sure that the electrical information on the rating plate agrees with the power supply.

If not, contact an electrician. • Always use a correctly installed shockproof socket. • Do not use multi-plug adapters and extension cables. • Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. • Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. • Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. 2.

3 Care and Cleaning WARNING! Risk of injury or damage to the appliance. • Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. • Do not use water spray and steam to clean the appliance. • Clean the appliance with a moist soft cloth. Only use neutral detergents.

Do not use abrasive products, abrasive ENGLISH 5 cleaning pads, solvents or metal objects. 2.4 Disposal WARNING! Risk of injury or suffocation. • Disconnect the appliance from the mains supply. • Cut off the mains cable and discard it.

@@@@This prevents children or pets to be closed in the drum. @@@@Read carefully the instructions supplied with this accessory. You can buy it in all approved Service. 6 www.electrolux.com 4. @@@@When a phase is complete the indicator of the phase remains on. @@@@9 kg, 1600 rpm White cotton and colour-fast cotton. Normal soil. 9 kg, 1600 rpm Synthetic items or mixed fabric items.

Normal soil. 4 kg, 1200 rpm Delicate fabrics as acrylics, viscose, polyester items. Normal soil. 4 kg, 1200 rpm Machine washable wool, hand washable wool and delicate fabrics with «hand washing» care symbol. 2 kg, 1200 rpm Items in denim and jersey. Also for items in dark colours. The Extra Rinse option activates automatically. 8 kg, 1200 rpm To rinse and spin the laundry. All fabrics. 9 kg, 1600 rpm Rinçage Cold 8 www.

electrolux.com Programme Temperature range Essorage/Vidange Type of load and soil Maximum load, Maximum spin To spin the laundry and to drain the water in the drum. All fabrics. 9 kg, 1600 rpm Special programme for one synthetic blanket, duvet, bedspread and so on. 3 kg, 800 rpm Synthetic and delicate items.

Light soil or items or items to refresh. 3 kg, 800 rpm Synthetic and mixed fabric items. Light soil and items to freshen up. 1.5 kg, 800 rpm Steam programme for cotton and synthetic This cycle removes odours from the laundry.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1697HDW user guide](http://yourpdfguides.com/dref/4378518)
<http://yourpdfguides.com/dref/4378518>

You cannot open the appliance door.

Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum. The appliance makes an unusual noise. Make sure the levelling of the appliance is incorrect. Refer to 'Installation'.

Make sure that the packaging and/or the transit bolts are removed. Refer to 'Installation'. Add more laundry in the drum. The load may be too small. The appliance fills with water and drain immediately. The hose may be too low. The washing results are not satisfactory. Increase the detergent quantity or use a different detergent. Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. 22 www.electrolux.com
Problem Possible solution Decrease the laundry load. If the display shows other alarm codes.

Deactivate and activate the appliance. If the problem continues, contact the Service. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service. 13. TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 605 mm 640 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 9 kg 1600 rpm 1) Connect the water inlet hose to a water tap with a 3/4" thread. 14. ENVIRONMENT CONCERNS Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.

Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. ENGLISH 23 www.electrolux.com/shop 132921430-A-242012 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF1697HDW user guide](http://yourpdfguides.com/dref/4378518)
<http://yourpdfguides.com/dref/4378518>