




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWF85661. You'll find the answers to all your questions on the AEG-ELECTROLUX EWF85661 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWF85661
User guide AEG-ELECTROLUX EWF85661
Operating instructions AEG-ELECTROLUX EWF85661
Instructions for use AEG-ELECTROLUX EWF85661
Instruction manual AEG-ELECTROLUX EWF85661

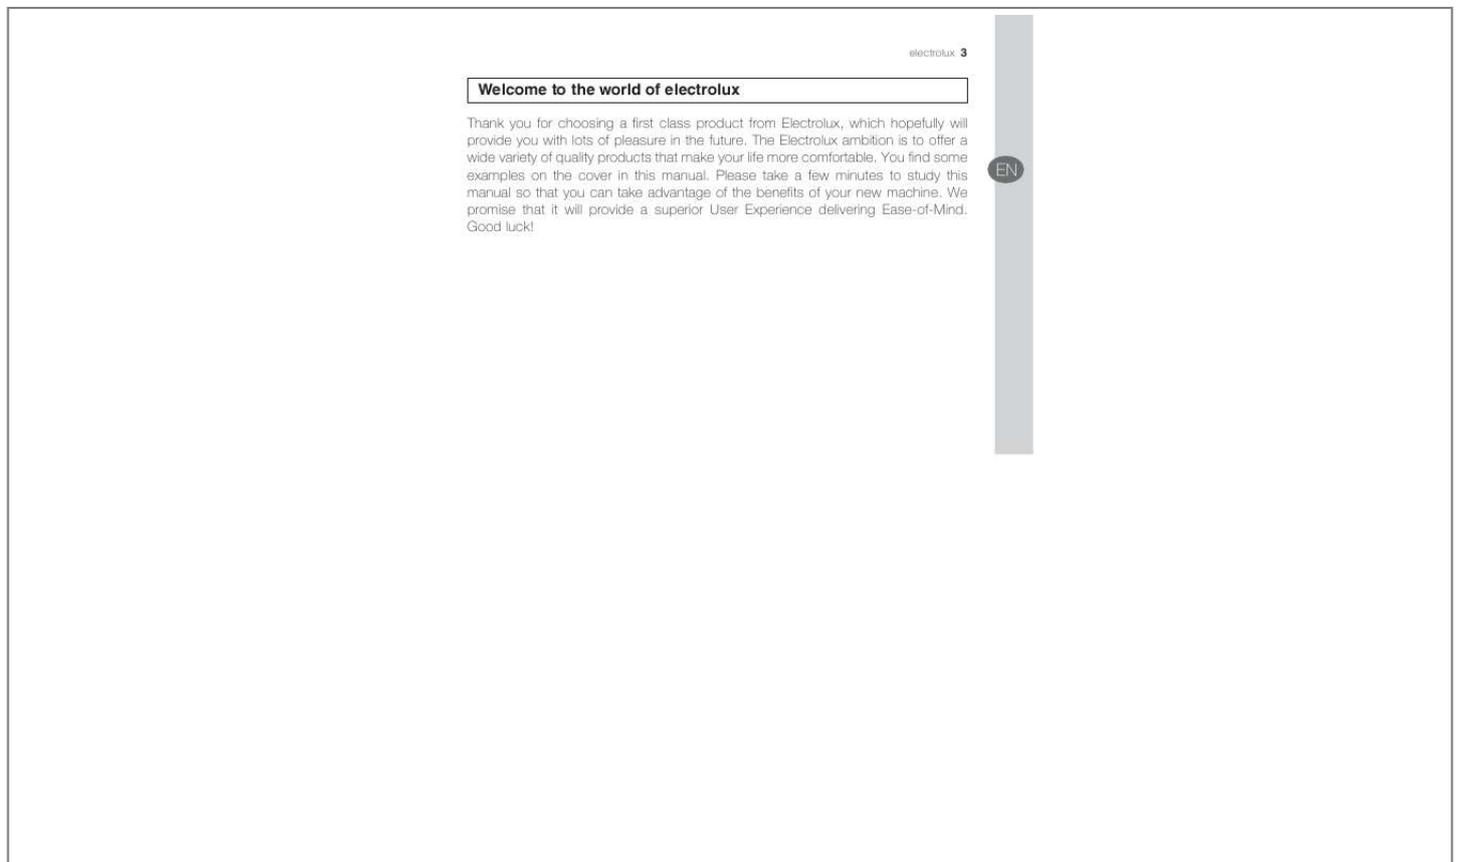

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF85661 user guide](http://yourpdfguides.com/dref/3895976)
<http://yourpdfguides.com/dref/3895976>

Manual abstract:

@@@ Good luck! EN 4 electrolux contents The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment: we use environmentally friendly paper.

Contents Safety information

.....
.....
.....

... 5 Product description

.....
.....
.....

.. 7 Control panel

.....
.....
.....

..... 8 Use .

.....
.....
.....

.....
.....
.....
.....

9 Washing hints

.....
.....
.....

..... 15 International wash code symbols

... 18 Programme information.

.....
.....

..... 19 Washing programmes...

.....
.....
.....

.. 20 Care and cleaning

.....
.....
.....

.. 22 Something not working

.....
.....

..... 25 Technical data

.....
.....
.....
.....

29 Installation

.....
.....
.....
.....

.....
.....

..... 33 safety information electrolux 5 Safety information Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. @@@@ Contact your local Service Centre. Always insist on genuine spare parts. In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. EN General safety It is dangerous to alter the specifications or attempt to modify this product in anyway.

During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum.

To avoid this, please check into the drum before using. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you overfill. Refer to the manufacturer's recommendations of quantities.

Installation This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

6 electrolux safety information Always be sure, that there is no water leakage from hoses and their connections after the installation.

Any plumbing work required to install this appliance should be carried out by a qualified plumber. Any electrical work required to install this appliance should be carried out by a qualified electrician. Child safety This washing machine is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin. Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.

Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. product description electrolux 7 Product description Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. 1 2 3 EN 8 9 4 12 10 11 7 13 56 1 Detergent Dispenser Drawer 2 Worktop 3 Control Panel 4 Door Opening Handle 5 Drain Filter 6 Rating Plate 7 Front Feet 8 Water Inlet Hose 9 Drain Hose Support 10 Mains Cable 11 Water Drain Hose 12 Hose Holders 13 Back Feet Detergent dispenser drawer Prewash Wash Fabric Softener 8 electrolux control panel Control panel 1 2 3 4 7 5 6 1 2 3 4 5 6 7 Programme selector dial See page 10. Spin selector button See page 10. Options button See page 11. Extra Rinse button See page 12.

Start/Pause button See page 12. Delay Start button See page 13. Programme progress display See page 13. use electrolux 9 Use First Use Measure out the detergent and the fabric softener Ensure that the electrical and water connections comply with the installation instructions. Run a cotton cycle at 90 °C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out the "prewash" phase, pour it into the compartment marked . EN Daily Use Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible.

Close the door. If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer).



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX EWF85661 user guide](#)

<http://yourpdfguides.com/dref/3895976>

Close the drawer gently. 10 electrolux use Select the required programme Turn the programme selector dial to the required programme. The green Start/Pause light starts to flash.

Programme Option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. The selector dial is divided into following sections: Cottons (Synthetics (Delicates ()) and)), Spin ().) Select the spin speed or No Spin () or Rinse Hold () option Hand Wash 30 ° (Hand Wash Cold (Rinses (), Drain (The selector dial can be turned either clockwise or anticlockwise. Position O to Reset programme/Switching OFF of the machine. At the end of the programme the selector dial must be turned to position "O", to switch the machine off. Attention! If you turn the programme selector dial to another programme when the machine is working, the red Start/Pause pilot light will flash 3 times to indicate a wrong selection. The machine will not perform the new selected programme. Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washing machine. The relevant light will light up. Maximum speeds are: Cottons , Synthetics Hand Wash: 850 rpm; Delicates : 650 rpm. @@@@To do this: turn the programme selector dial to "O". @@This option can be selected with only Cottons () programme.

The Prewash ends with a short spin in programmes for cotton fabrics. @@This programme will obtain good washing results by saving energy. @@@@The machine performs some additional rinses. @@Sorting the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, sg;C soiled items, shirts, - Rinses underwear, towels. - Long spin Non fast coloured cottonlightly soiled, shirts, blouses, underwear. Non fast coloured cotton lightly soiled, dirty use cloths. - Main wash at 40 °C - Rinses - Long spin - Main wash at cold - Rinses - Long spin - Main wash at 60 °C - Rinses - Short spin - Main wash at 40 °C - Rinses - Short spin Options Spin Red./ 6.5 kg 7.

0 kg Max. Load EWF EWF 85661 85761 Cottons 90 °C Spin Red./ 6.5 kg 7.0 kg Spin Red. / 6.5 kg 7.0 kg Cottons 60 °C Cottons 40 °C Spin Red./ 6.5 kg 7.

0 kg Cottons Cold Spin Red./ Synthetics Synthetic or mixed 60 °C fabrics, underwear, coloured garments, non-shrink shirts, Synthetics blouses. 40 °C Spin Red./ 2.0 kg 2.5 kg Synthetic or mixed - Main wash at cold Synthetics fabrics, delicate items. - Rinses Cold - Short spin Delicates 40 °C - Main wash at 40 °C - Rinses Delicate fabrics, for - Short spin example curtains. - Main wash at cold - Rinses - Short spin Spin Red./ 2.0 kg 2.

5 kg Spin Red.(max 650)/ 2.0 kg 2.5 kg Spin Red.(max 650)/ Delicates Cold 2.0 kg 2.5 kg washing programmes electrolux 21 Programme/ Temperature Type of laundry Description of programme Options Max. Load EWF EWF 85661 85761 - Main wash at Special programme 3 0 °C Hand Wash for hand washing - Rinses 3 0 °C fabrics. - Short spin Special programme - Main wash at cold Hand Wash for hand washing delicates cloths, - Rinses Cold hand curcheif. - Short spin Separate rinse cycle for hand washed items of cottons.

Spin Red./ 1.0 kg 2.0 kg EN Spin Red./ 1.

0 kg 2.0 kg Rinse - Rinses - Long spin Spin Red./ 6.5 kg 7.0 kg Drain For emptying out the last rinse water - Draining of in programmes with water the Rinse Hold.

Separate spin for cottons. - Drain - Short spin Spin Red./ 6.5 kg 7.0 kg Spin 6.5 kg 7.0 kg * Cottons 60 °C programme with Eco option selected is recommended for a full load of normally soiled cottons, and is the water and energy rating label programme [in accordance with TISI1462 (IEC 60456 4th edition)]. 22 electrolux care and cleaning Care and cleaning Cleaning the dispenser drawer You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out.

Flush it out under a tap, to remove any traces of accumulated powder. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. To aid cleaning, the top part of the additive compartment should be removed. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. care and cleaning electrolux 23 Replace the drawer and run the rinse programme without any clothes in the drum. Hold filter securely and pull upwards to remove it from its position. EN Remove eliminate the eventual fluff or small objects around the filter. Cleaning the drain filter Drain filter permits to hold fluff or foreign bodies left unawares in the laundry.

The pump must be cleaned regularly. To clean the filter, proceed as follows: Turn programme selector dial to position Off. Unplug the appliance. Open the door. @@@@Unscrew the water inlet hose. Clean the filter using a hard bristle brush. @@@@ (Red Start/Pause pilot light flashes). @@Insert the plug into the power socket. Please check your domestic electrical installation. Please turn the selector dial and press the Start/Pause button again.

If the laundry are to be washed immediately, cancel the delay start. @@The selector dial is not correctly positioned and the Start/Pause button has not been depressed. The delay start has been selected. The water tap is closed. (Red Start/Pause pilot light flashes) The inlet hose is squashed or kinked. (Red Start/Pause pilot light flashes) The filter in the inlet hose is blocked. (Red Start/Pause pilot light flashes) The door is not properly closed.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF85661 user guide](http://yourpdfguides.com/dref/3895976)
<http://yourpdfguides.com/dref/3895976>

(Red Start/Pause pilot light flashes) Check the inlet hose connection. The machine does not fill: Clean the water inlet hose filter. Close firmly the door. The machine fills then empties immediately: The end of the drain hose is too low. Refer to relevant paragraph in "water drainage" section. 26 electrolux something not working Malfunction Possible cause The drain hose is squashed or kinked. (Red Start/ Pause pilot light flashes) The drain pump is clogged. (Red Start/Pause pilot light flashes) The option or has been selected.

The laundry is not evenly distributed in the drum. Too much detergent or unsuitable detergent (creates too much foam) has been used. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose is damaged.

Too little detergent or unsuitable detergent has been used. Stubborn stains have not been treated prior to washing. The correct temperature was not selected. Excessive laundry load. The programme is still running. Solution Check the drain hose connection. Clean the drain filter. The machine does not empty and/or does not spin: Disable the option or Select spin programme. Redistribute the laundry. Reduce the detergent quantity or use another one.

Check the water inlet hose connection. There is water on the floor: Change it with a new one. Increase the detergent quantity or use another one. Use commercial products to treat the stubborn stains. Check if you have selected the correct temperature. Introduce into the drum less laundry. Wait the end of washing cycle. Wait about 3 minute. Select drain or spin programme to empty out the water. Unsatisfactory washing results: The door will not open: The door lock has not been released.

There is water in the drum. something not working electrolux 27 Malfunction Possible cause The transit bolts and packing have not been removed. Solution Check the correct installation of the appliance. Check the correct levelling of the appliance. Redistribute the laundry.

Load more laundry. The machine vibrates or is noisy: The support feet have not been adjusted. The laundry is not evenly distributed in the drum. Maybe there is very little laundry in the drum. unstable floors eg.

wooden floors The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. @@@@ Machines based on modern technology operate very economically using very little water without affecting performance. EN Redistribute the laundry. Spinning starts late or the machine does not spin: The machine makes an unusual noise: No water is visible in the drum: 28 electrolux something not working If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. technical data electrolux 29 Technical data EWF 85761 Dim ensions W idt h Height Depth Power supply voltage/frequency Total power absorbed Minimum fuse protection Wat er supply pressure M inim um Maximum Maximum Load Cottons Synthetics Delicates Hand Wash 60 cm 85 cm 65 cm EWF 85661 60 cm 85 cm 54 cm EN 220-240 V/50 Hz 2000 W 10A 0,05 MP a 0,8 MPa (EWF 85761) 7 (EWF 85661) 6.5 (EWF 85761) 2.5 (EWF 85661) 2 (EWF 85761) 2.

5 (EWF 85661) 2 (EWF 85761) 2 (EWF 85661) 1 (EWF 85761, EWF 85661) kg Spin Speed Maximum 850 rpm 30 electrolux installation Installation 4. Remove the polystyrene block(s) protecting the motor Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1. Using a spanner, unscrew and remove the two rear bottom screws. 5. @@(If any) 2. Slide out the two plastic pins. 6. @@7.

Set the machine upright and unscrew the remaining rear screw. 8. Slide out the relevant pin. @@Lay the machine on its back ensuring that the hoses are not crushed. @@Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

Check that the machine does not touch the wall or cupboard units. Carefully level by screwing the adjustable feet in or out. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. EN Water drainage The end of the drain hose can be positioned in three ways: Hooked over the edge of a sink using the plastic hose guide supplied with the machine.

In this case, make sure the end cannot come unhooked when the machine is emptying. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Water inlet Connect the water inlet hose to a tap with 3/4" BSP thread. Use the hose supplied with the washing machine. DO NOT USE OLD HOSES. The other end of the inlet hose which connects to the machine can be turned in any direction. Simply loosen the fitting, rotate the hose and retighten the fitting, making sure there are no water leaks. This could be done by tying it to the tap with a piece of string or attaching it to the wall. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground.

Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. Run it along the floor; only the part near the drainage point must be raised. 32 electrolux installation Electrical Connection This machine is designed to operate on a 220-240 V, single-phase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.0 kW), also taking into account any other appliances in use. 90 cm 60 cm For the correct functioning of the machine the drain hose must remain hooked on the proper support piece situated on the top part of back side of the appliance.

Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. Please ensure that when the appliance is installed the power supply cable is easily accessible. environment concerns electrolux 33 Environment concerns Packaging materials Ecological hints The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX EWF85661 user guide](#)

<http://yourpdfguides.com/dref/3895976>

EN To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWF85661 user guide](http://yourpdfguides.com/dref/3895976)
<http://yourpdfguides.com/dref/3895976>