



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWT704. You'll find the answers to all your questions on the AEG-ELECTROLUX EWT704 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWT704
User guide AEG-ELECTROLUX EWT704
Operating instructions AEG-ELECTROLUX EWT704
Instructions for use AEG-ELECTROLUX EWT704
Instruction manual AEG-ELECTROLUX EWT704



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWT704 user guide](http://yourpdfguides.com/dref/3964639)
<http://yourpdfguides.com/dref/3964639>

Manual abstract:

.. 3 Mesin Basuh

.... @@@@ You find some examples on the cover in this manual. @@@@ Good luck! 3 The symbols you will see on some paragraphs of this booklet have the following meaning: The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance. The information marked with this symbol provides additional instructions and practical tips on the use of the appliance. Tips and information about economical and ecological use of the machine are marked with this symbol. Our contribution to the protection of the environment; we use environmentally friendly paper. CONTENTS Safety information .

..... Out of Balance Interruption ..

.... 5 8 Product description .

. 7 Control panel

.... 9 Use .

... 10 Washing hints ..

.... 19 Washing program .

.... 21 Care and cleaning .

.... @@@@ 24 Troubleshooting.

... 26 Troubleshooting fault displays

.. 27 Environment concerns

.... @@@@ Always unplug the appliance and turn off the water supply after use, clean and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user

manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. General safety It is dangerous to alter the specifications or attempt to modify this product in anyway. Make sure that small pets do not climb into the washbowl . To avoid this, please check into the washbowl before using the appliance. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you overfill. Refer to the manufacturer's recommendations of quantities. 5

Installation This appliance is heavy.

Care should be taken when moving it. When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. After having installed the appliance, check that it is not standing on the inlet and drain hose. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

Always be sure, that there is no water leakage from hoses and their connections after the installation. Any plumbing work required to install this appliance should be carried out by a qualified plumber. Any electrical work required to install this appliance should be carried out by a qualified electrician. Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Child safety This washing machine is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the washbowl. Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. 6 PRODUCT DESCRIPTION Control Panel Safety Glass Lid Mains Cable Water Inlet Hose Drain Hose Front Feet Front Side View Back Feet Back Side View Dispenser Drawer Fabric Softener Dispenser Wash bowl Agitator Lint filter Bleach Dispenser In Side View 7 Out of Balance Interruption The washing machine can stop during the spin stage of a wash because of an out of balance condition. The display will show " " and you will hear a short beep every minute. Out of balance during spin is caused by an uneven distribution of clothes in the wash bowl.

To rectify the out of balance condition, open the lid and redistribute the clothes evenly in the space between the agitator and wall of the wash bowl. Closing the lid will start the machine and continue the spin stage of the wash. If you have frequent out of balance interruptions, it may be due to your washing machine not standing firm and level on the floor. This can be corrected by adjusting the washing machine legs as described in the Installation Instructions supplied with your machine. When you press a button you will get a short 'BEEP' to acknowledge the entry.

If the option is not available at the time, the machine will not allow you to select it, and you will here the long 'BEEP' to remind you the option is not available. After the machine has started, the entire wash option button will be disabled and machine will show " " on the display with three short beeps to indicate the button is disabled. The start button is still active but you need to press and hold the button for 1.2 seconds to pause machine. This is to confirm that you really want to pause the machine.

When in pause mode, all options will be able to be changed again. All functions of the washing machine will stop when the lid is open. Power failure recovery When there is power failure while machine is washing or rinsing or spinning. The machine tries to save the settings at which stage the machine is doing and then when the power returns back the machine shows " " on the digital display. If the Program dial or any other setting is not changed within 5 seconds then the machine starts washing from the stage where it is left off. Enabling/Disabling End-of-Wash Beeping Mode This mode permits you to either enable or disable the beeping (3 beeps every 4 minutes) at the end of the wash.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWT704 user guide](http://yourpdfguides.com/dref/3964639)
<http://yourpdfguides.com/dref/3964639>

As an example, you might wish to disable this beeping when you start a wash when going to bed, so that when the wash finished approximately 1 hour later, it will not disturb you through the night. NOTE: All error beeping is not disabled by this feature, such as a critical fault, or lid open during fill/agitate/spin, or out of balance during spinning. To change the "beeping" selection, proceed as follows: 8 Button Response and Lights Always press buttons gently. Watch the lights on the control panel to see the effect pressing a button or turning a program selector knob has, and listen for 'BEEPS'.

1. Turn programme selector knob to any program except 'O' position, before pressing the Start/Hold To Pause button (Standby Mode), press the "Wash Load" and "Soak Time" buttons simultaneously for about 2 seconds to enter Enabling/Disabling End-Of-Wash Beeping mode. The digital display will be " " when the end of wash beeping is enabled (this is the default factory setting). The digital display will be " " when the end of wash beeping is disabled. 2. Press the "Rinse Option" button to change the selection, then press the Start/Hold To Pause button to store the new selection. NOTE: If you do not press a button within 5 seconds the washing machine will return to the previous setting. @@Program Selector Dial 2. Wash Load Button 3. Soak Time Button 4. Rinse Option Button 5. Delay End Button 6. Start/Hold To Pause Button 7. Display Model: EWT704, EWT904 See page 17. @@Close all hooks and zippers to avoid snagging clothes.

@@@Colour fast and non-colourfast fabrics should be separated. @@@@For best results load small items first, followed by large items. Clothes must not be wrapped a round the agitator. The washing machine must not be overloaded. Clothes must be able to move around during washing. @@The rest of the load should be small items. @@To do this, proceed as follows: 1. Pull the dispenser drawer forward. 2. @3. Check the position of the flap at the rear of the detergent compartment in the dispenser drawer. (Factory setting is flap up for powder.) Detergent and fabric softener use Don't use the wrong type of detergent. You must use a low sudsing dready to wash your clothes. If the settings shown on the control panel are what you want to use and the PROGRAM SELECTOR is set to the correct wash program for your clothes load, press the "Start/Hold To Pause" button to start your wash.

Lid Soft Landing Feature ** Only applied for the model EWT113 When the lid is fully opened, to close just pull down initially the lid then the lid will close down slowly by itself. Lid soft landing device will not working if opened less than 80 degree (Please keep your hand away, lid will close rapidly and cimate time is calculated automatically on the basis of the maximum recommended load for each type of fabric. @@End Of Program When the program is completed the 3 zeros will flash. Alarm Codes In the event of operating problems, some alarm codes can be displayed, for example (see "Troubleshooting" and "Troubleshooting fault displays" on page 26, 27, 28). Incorrect Option Selection If an option which is not compatible with the set wash program is selected, the message " " is displayed for about 2 seconds and 3 consecutive short beeps. 18 Machine In Pause Mode You can tell when your washing machine is in pause mode. The time remaining is shown then " ". WASHING HINTS Sorting The Laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Removing Stains Stubborn stains may not be removed by just water and detergent.

It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water. Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times. Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole. Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone (*) as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach. 19 Before Loading The Laundry Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time. Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net. Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly. Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste. (*) do not use acetone on artificial silk. Quantity Of Detergent To Be Used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

@@@@@clothes items you have hand washed in a wash tub. - Delay End For very wet clothes to remove the water.

@@Switch off the electricity at the power point. Turn off the water taps. Leave lid open for a while.

@@Your washing machine collects this lint in the lint filter. It is important to clean out this lint filter, preferably after each wash. How to clean the lint filter : Remove the filter column from the centre of the agitator. Cleaning The Dispenser The dispenser needs to be cleaned regularly, preferably after each wash.

Inspect the dispenser after each wash to see if there is any residue of detergent.

To do this proceed as follows: Pull the dispenser drawer forward until it stops. @@Clean the dispenser drawer with hot water and a brush, eg. an old toothbrush. Dry the drawer. 22 Unclip the filter bag from the column. Cleaning Stains In The Washbowl Stains and residue in the washbowl can be caused by: Metal objects such as bobby pins, dress making pins and nails.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWT704 user guide](http://yourpdfguides.com/dref/3964639)
<http://yourpdfguides.com/dref/3964639>

Salt. Body oils and grease from very dirty or sweaty clothes being deposited around the top of the washbowl. Excessive foam during wash if incorrect or too much detergent is used. Turn the bag inside out and remove the lint.

Wash the filter bag in hot water. Clean the filter bag with an old brush, making sure water can flow through the bag mesh. Reassemble the filter to the column and place it back in the centre of the agitator. **Cleaning Your Washing Machine** To clean the inside and outside of your washing machine you should: Wipe the surface with a mild dishwashing detergent and warm water. Wipe dry with a soft cloth. Check all pockets before loading clothes into your washing machine. Don't leave wet clothing (especially swimwear) in the bowl for too long before you wash it. How to clean the washbowl: Wipe with a cleaning product which is suitable for stainless steel. Oily deposits can be removed by wiping surfaces with a mild dishwashing detergent and warm water. Never use solvents, aerosol cleaners, spray pack cleaners, glass cleaners, metal polishes, caustic materials, scourers or general household cleaners on or near the top panel and lid, control panel or other parts of your washing machine.

Never use bleach cleaners or steel wool to clean the stainless steel washbowl. **23 HELPFUL HINTS IN DEALING WITH WASHING PROBLEMS Residues On Washed Items** If you are experiencing residue on some clothes, the following tips will help: Pre-mix the detergent thoroughly in warm water to improve the dissolving. Reduce detergent dosage to between a 1/2 and 2/3 of the manufacturer's standard recommendation to avoid over concentration (the lower water usage requires lower detergent usage). Some residue may be re-deposited lint, so be careful to not have lint producing items in a load which has darker clothes. Select Deep rinse or Extra rinse and NOT Eco or Fast rinse to help flush more particles away.

If you use pre-treatment sprays or stain removers, apply them to the clothes items in a well ventilated area away from your washing machine. Use light strokes and don't rub the stain remover into the fabric. If you use a chlorine bleach, follow the instructions on the bottle and dilute it before putting it on clothing. Test coloured fabrics on an inside seam for colour fastness before using any stain removers or bleaches. Test synthetic fabric on an inside seam before using any chemicals or bleaches.

NOTE: Chemicals referred to for stain removal are available from your local supermarket, hardware store or the chemist. Some detergents have ingredients which do not fully dissolve and as a consequence, may leave white residue or particles evident on the surface of darker clothes in the finished wash load. @@Do no use dry cleaning fluids or solvents near your washing machine. @The longer you leave a stain the harder it will be to remove. @Re-sort load, then re-wash using of detergent on clothes. program selections suitable for the fabric. Using incorrect type or too 3. @performance. Mixing whites with very dirty clothes, eg work clothes. A build-up of oils in clothes that come into close contact with the skin, eg underwear, T-shirts.

Ageing of clothes. Iron deposits in the wash water. Use of chlorine bleaches on fabrics with resin finishes. Incorrect drying. 1. Re-sort load, then re-wash using wash program selections suitable for the fabric. 2. If the water is very dirty or very sudsy, repeat 1 above reducing the amount of detergent you use. What to do 1. ONLY use low sudsing detergent for washing machine.

Greyness Yellowing 25 **TROUBLESHOOTING** Before call for servicing if you notice the problem as guidance on the table below. It will be helpful your solution with some temporary symptom. @@@@@@@ Wiring is damaged. Machine has washed load but will not spin. Water in washbowl.

Will not fill with water Water flowing out from washbowl indefinitely Out of balance Lid not fully closed E20 Drain hose blocked Water taps not turned on Inlet hoses blocked Drain hose too low Refer to installation instructions for correct positioning of hose. Make the machine level Adjust feet to touch the floor Redistribute clothes evenly Machine not level Machine goes out of balance or vibrates excessively when spinning Levelling feet not adjusted Clothes not evenly distributed Too much water for load size 26 **Problem Display Code Possible Causes** Loose inlet hose connections What to do Check connections at taps and rear of machine Use low water level Check detergent use and rewash clothes Remove some clothes and rewash Reselect program or temperature and rewash Use a higher water level If the item is visible, remove it with pliers. Use a wash bag in future Normal noise Normal noise Water on floor Incorrect water level for size of load Not enough or no detergent Too many clothes in load Incorrect wash program or temperature selected Incorrect water level selected Bra wire or other thin items caught between inner and outer washbowls Bowl rotation at start of wash Brake activation when stopping after spin Clothes still dirty after wash program Scraping noise on spin Humming, clicking and other noises **TROUBLESHOOTING FAULT DISPLAYS** Fault information and a guide for when you should call for service. If you have a problem with your washing machine and before you call service, make sure you have followed ALL of the instructions that may remedy the problem. You will find instructions in the 'Troubleshooting' section and in the table below. When the washing machine detects a problem that requires your attention, you will be alerted. The machine will warn you of this problem by displaying a fault code in the digital display, accompanied by "Beeping". Fault information and the action you should take are described in the following table.

Description	Display Code	Customer action (Summary)
Make sure wall tap is on and hose filter are not blocked. Raise drain hose if water is flowing out of drain hose. Press 'Start/Hold To Pause' to re-start wash. If problem remains, call Service. Not filling with water	Flood / Water level problem	E30
If the water is pouring onto the floor, turn OFF wall tap. Wait a few minutes to see if the fault is corrected. If not, call Service.		

27 **Description** Draining problem **Display Code** Customer action (Summary) Turn off the washing machine and call Service. Raise the top of drain hose above the join between the top panel and the cabinet until the water stop flowing out of drain hose, replace to its position. Press 'Start/Hold To Pause' to re-start wash. If this problem is repeated, call Service. E20 Loss of water, while washing **Communication error** Machine in pause mode **Incorrect option selection** Out of balance interruption **Power down recovery** Call Service. SP Press Start/Hold To Pause. Choose the correct option. Make the machine level. Adjust feet to touch the floor. Redistribute clothes evenly, then close the Lid to continue.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWT704 user guide](http://yourpdfguides.com/dref/3964639)

<http://yourpdfguides.com/dref/3964639>

Wait, this fault may clear itself. 28 ENVIRONMENT CONCERNS Packaging materials Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. 29 www.electrolux.com .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWT704 user guide](http://yourpdfguides.com/dref/3964639)
<http://yourpdfguides.com/dref/3964639>