



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWW1486HDW. You'll find the answers to all your questions on the AEG-ELECTROLUX EWW1486HDW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWW1486HDW
User guide AEG-ELECTROLUX EWW1486HDW
Operating instructions AEG-ELECTROLUX EWW1486HDW
Instructions for use AEG-ELECTROLUX EWW1486HDW
Instruction manual AEG-ELECTROLUX EWW1486HDW



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWW1486HDW user guide](http://yourpdfguides.com/dref/4472861)
<http://yourpdfguides.com/dref/4472861>

Manual abstract:

@@ welcome to Electrolux. @@ electrolux. Com Register your product for better service: www. electrolux. @@ electrolux. Com/shop CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. model , PNC , Serial Number. Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice.

eNGLISH 3 1. SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. @@Always keep the instructions with the appliance for future reference. @@ Do not let children play with the appliance. @@@@ Cleaning and user maintenance shall not be made by children without supervision.

1. 2 General Safety • Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. Do not change the specification of this appliance. Obey the maximum load volume of 8 kg (refer to the “Programme chart” chapter). 1 Installation • Remove all the packaging and the transit bolts.

• Keep the transit bolts. When you move the appliance again you must block the drum. Do not install or use a damaged appliance. Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather. Obey the installation instruction supplied with the appliance. Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean. Do not install the appliance where the appliance door can not be fully opened. Always be careful when you move the appliance because it is heavy. Always wear safety gloves. Make sure that there is air circulation between the appliance and the floor.

Adjust the feet to have the necessary space between the appliance and the carpet. Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. Do not touch the mains cable or the mains plug with wet hands. Water connection • Make sure not to cause damage to the water hoses. The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused. Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. The first time you use the appliance, make sure that there is no leakage. Risk of injury, electrical shock, fire, burns or damage to the appliance.

• Use this appliance in a household only. Do not change the specification of this appliance. Do not put flammable products or items that are wet with flammable products in, near or on the appliance. Do not touch the glass of the door while a programme operates. The glass can be hot. Make sure that you remove all metal objects from the laundry. The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged. If you stop the appliance before the end of the drying cycle, immediately remove and spread out all items, so that the heat can dissipate. If you use detergent, fabric softener or similar products, obey the instructions on the packaging. Make sure that the electrical information on the rating plate agrees with the power supply.

Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. ENGLISH 5 • Wipe away lint that has accumulated around the appliance. Do not dry the damaged items which contain padding or fillings. Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles and rubber backed articles. Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent. Do not dry items if industrial chemicals have been used for cleaning. Make sure that no gas lighters or matches have been left in the pockets of the clothing.

Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label. Do not dry not washed items in the appliance. If you have washed your laundry with a stain remover start an extra rinse cycle before you start the appliance. Plastic items are not heat resistant. If you use a detergent ball, remove it before you set the drying programme. Do not use a detergent ball when you set a non-stop programme. wARNING! Risk of injury or damage to the appliance. Do not sit or stand on the open door. Obey the maximum load volume.

Do not dry dripping wet clothes in the appliance. Risk of injury or damage to the appliance. Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. Do not use water spray and steam to clean the appliance. Clean the appliance with a moist soft cloth.

Disconnect the appliance from the mains supply. • Cut off the mains cable and discard it. Remove the door catch to prevent children and pets to get closed in the appliance. 1 Child safety device When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum.

To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counter-clockwise, until the groove is vertical. If you install the appliance on a plinth, secure the appliance in the fixing plates. Follow the instructions supplied with the kit. / Descarga Aclarado On/Off Algodón Algodón+Prelavado Algodón Eco Temperatura Tiempo de Inicio Diferido secado 6 7 Centrifugado Nivel de secado Aclarado Extra Sintéticos Delicados Lana/A mano Mantas/ Edredones TimeManager Inicio/Pausa 8 9 11 10 ENGLISH 7 1 On Off button 7 Delay start touchpad (On/Off) 2 Programme knob 3 Spin reduction touchpad (Centrifugado) 4 Temperature touchpad (Inicio Diferido) 8 Extra rinse touchpad (Aclarado Extra) 9 Drying level touchpad (Nivel de secado) 10 Start pause touchpad (Temperatura) 5 Display 6 Drying time touchpad (Inicio/Pausa) 11 Time Manager touchpads (Tiempo de secado) 4. : The child safety lock indicator. @@ electrolux. @@@@ all fabrics. @@@@ steam programme for cotton and synthetic items. This cycle helps to dewrinkle the laundry.

@@@@The time of the washing programme is extended. @@ 5. @@@@2 Programmes for timed drying Dryness Level Type of fabric Load (Kg) 6 4 2 6 4 2 3 1 Spin speed (rpm) 1400 1400 1400 1400 1400 1400 1200 1200 1400 1400 1400 1200 Suggested times (mins) 225-245 135-155 95-105 215-235 125-145 85-95 135 - 145 40 - 50 185-205 95-115 75-85 110 - 130 Extra dry Cotton and linen For towelling materi- (bathrobes, bath towels, als etc) Cupboard dry1) For items to put away Cupboard dry For items to put away Cotton and linen (bathrobes, bath towels, etc) Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) Iron dry Suitable for ironing Wool dry 6 Cotton and linen (sheets, tablecloths, shirts, 4 etc.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWW1486HDW user guide](http://yourpdfguides.com/dref/4472861)
<http://yourpdfguides.com/dref/4472861>

) 2 Wool (jumpers) 1 1) Hints for test institute The test performance, in accordance with EN 50229, must be carried out with a FIRST drying load of 5 kg (load composition : pillowcase and towels) by setting the AUTOMATIC CUPBOARD DRY programme for Cotton. The SECOND drying load of 3 kg (load composition: 3 sheets and towels) must be tested by setting the AUTOMATIC CUPBOARD DRY programme for Cotton. 35 Water consumption (litres) 76 59 72 50 60 57 For the duration of the programmes, please refer to the display on the control panel. Programme duration (minutes) White Cottons 90° Cottons 60° Cotton Energy Saving Programme 60° 1) Cottons 40° Synthetics 40° Delicates 40° Wool/ Handwash 30° 72 1) «Cotton Energy Saving programme » at 60°C with a load of 8 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. 1 Temperature Set this option to change the default temperature. indicator = cold water.

The display shows the set temperature. □ The rinses phase uses more water for some washing programmes. Rinse Hold • Set this option to prevent the laundry creases. • The related indicator comes on. □ There is a water in the drum when the programme is completed.

□ The drum turns regularly to prevent the laundry creases. • The door stays locked. □ You must drain the water to unlock the door. To drain the water refer to 'At the end of the programme'. 7.

2 Spin With this option you can change the default spin speed. The indicator of the set speed comes on. □ Set this option for very delicate fabrics. Com With this option you can set the time for the fabrics you have to dry. The display shows the set value. @@ You cannot set all time values for different types of fabrics. 4 Delay Start With this option you can delay the start of a programme from 30 minutes to 20 hours. The display shows the related indicator. 3) □ 7. 5 Extra Rinse With this option you can add some rinses to a washing programme.

Use this option for persons allergic to detergents and in areas where the water is soft. The related indicator comes on. 3) Longest: Increasing th operates: 1. 6 Starting a programme with delay start • Press again and again until the display shows the delay you want to set. The related indicator comes on the display. : • Press – The appliance starts the countdown. □ When the countdown is completed, the programme starts automatically. You can cancel or change the set of the delay start before you press . Wait until the door lock indicator goes off. The delay start continues to operate.

Openical fabrics. To prevent the fluff in your laundry, we recommend that you: • To do not wash dark fabrics after you washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and the contrary. □ To dry this type of fabrics at open air when they are washed the first time. • To clean the drain filter. □ After the drying phase, clean the empty drum, the gasket and the door with a wet cloth.

To remove the fluff inside the drum, set a special programme: • Empty the drum. □ Clean the drum, the gasket and the door with a wet cloth. • Set the rinse programme. □ Press at the same time and to activate the cleaning function until the display shows CLE. 4 At the end of the programme The appliance stops automatically.

The acoustic signals operate (if they are active). 1 The laundry load • Divide the laundry in: white, coloured, synthetics, delicates and wool. □ Obey the washing instructions that are on the laundry care labels. □ Do not wash together white and coloured items. □ Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. □ Empty the pockets and unfold the items. □ Turn inside out multilayered fabrics, wool and items with painted illustrations. • Remove hard stains. □ Wash with a special detergent heavy soil stains.

□ Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. ENGLISH 19 • Do not wash in the appliance : – Laundry without hems or with cuts – Underwired bras. – Use a washing bag to wash small items. □ A very small load can cause balance problems with the spin phase. @@ 12. @@@@ Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product. 12. @@@@ Special stain removers are available.

@@ 12. 6 Drying hints Prepare the drying cycle • Open the water tap. □ Do a check if the connection of the drain hose is correct. refer to installation chapter for more information. @@@@ □ Do not mix different types of detergents.

□ To help the environment, do not use more than the correct quantity of detergent. □ Obey the instructions that you find on the on packaging of these products. □ Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. □ If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. 12.

4 Ecological hints • Set a programme without the prewash phase to wash laundry with normal soil. □ Always start a washing programme with the maximum load of laundry. □ If necessary, use a stain remover when you set a programme with a low temperature. □ To use the correct quantity of the detergent, check the water hardness of your domestic system 12. 7 Garment labels When you dry ther laundry, obey the indications on the labels of the manufacturers: • = The item can be tumble dried ••• = The drying cycle is at high temperature = The drying cycle is at reduced temperature = The item can not be tumble dried. 8 Drying cycle duration The drying time can change depending on: • speed of the last spin • dryness level • type of laundry • weight of the load size GENERAL TIPS Refer to the «Drying programmes» table to find the average drying times. The experience will help you to dry the laundry in a more correct way. Take note of the duration drying time of the cycles done before. To avoid the static charge at the end of the drying cycle: • Use fabric conditioner in the washing cycle. □ Use special fabric conditioner for tumble dryers.

When the drying programme is completed remove the laundry in a short time. 12. 9 Additional drying If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again. wARNING! To avoid creases of fabrics or shrinks of the clothing do not over dry the laundry. Before maintenance, disconnect the appliance from the mains supply. @@ Do this separately from the laundry wash. @@ 13. @@ Fully dry all the surfaces. @@ make regularly a maintenance wash. To do this: • Remove the laundry from the drum.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWW1486HDW user guide](http://yourpdfguides.com/dref/4472861)
<http://yourpdfguides.com/dref/4472861>

□ Set the cotton programme with the highest temperature with a small quantity of detergent. 13. 2 Descaling If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. 4 Door seal Regularly examine the seal and remove all objects from the inner part. Do not clean the drain filter if the water in the appliance is hot.

7 Cleaning the inlet hose and the valve filter 1. 8 Emergency drain Because of a malfunction, the appliance cannot drain the water. @@If necessary, clean the pump. @@@@ 2. Start the programme to drain the water.

Disconnect the mains plug from the mains socket. @@When the drain pump is empty, install the inlet hose again. WARNING! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. 13. 9 Frost precautions

If the appliance is installed in an area where the temperature can be less than 0° C, remove the remaining water from the inlet hose and the drain pump. TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: • - The appliance does not fill with water.

□ - The appliance does not drain the water. Wait until the mains supply is stable. WARNING! Deactivate the appliance before you do the checks. • Problem The programme does not start. Possible solution Make sure that the mains plug is connected to the mains socket. Make sure that the appliance door is closed. Make sure that there is not a damaged fuse in the fuse box. Make sure that the Start/Pause has been pressed. If the delay start is set, cancel the setting or wait for the end of countdown. deactivate the Child Lock function if it is on.

The appliance does not fill with water. Make sure that the water tap is open. Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. Make sure that the water tap is not clogged.

Make sure that the filter of the inlet hose and the filter of the valve are not clogged. refer to "Care and cleaning". Make sure that the inlet hose has no kinks or bends. Make sure that the connection of the water inlet hose is correct. The appliance does not drain the water.

Make sure that the sink spigot is not clogged. Make sure that the drain hose has no kinks or bends. Make sure that the drain filter is not clogged. Make sure that the connection of the drain hose is correct. Set the drain programme if you set a programme without drain phase. ENGLISH 25 Problem Possible solution Set the drain programme if you set an option which ends with water in the tub. The spin phase does not operate or the washing cycle lasts longer than usually. set the spin programme. Make sure that the drain filter is not clogged. Adjust manually the items in the tub and start the spin phase again.

This problem may be caused by balance problems. There is water on the floor. Make sure that the couplings of the water hoses are tight and there is not water leakages. Make sure that the drain hose have no damages. Make sure you use the correct detergent and the correct quantity of it. You cannot open the appliance door. Make sure that the washing programme is finished. Set the drain or the spin programme if there is water in the drum. The appliance makes an unusual noise. Make sure the levelling of the appliance is incorrect.

refer to 'Installation'. Make sure that the packaging and/or the transit bolts are removed. refer to 'Installation'. Add more laundry in the drum. The load may be too small.

The appliance fills with Make sure that the drain hose is in the correct position. Water and drain imme- The hose may be too low. diately. The washing results are not satisfactory. Increase the detergent quantity or use a different detergent.

Use special products to remove the stubborn stains before you wash the laundry. Make sure that you set the correct temperature. decrease the laundry load. The appliance does not dry or does not dry correctly. turn the water tap on. Make sure the drain filter is not clogged. reduce the laundry load. Make sure you have set the correct cycle. If necessary, set again a short drying time. There is a big quantity of fluff in the drum.

possible solution Set a drying cycle to remove some fluff. Clean the laundry with a fluff remover. Repeat this procedure again and again: • Clean the empty drum, the gasket and the door with a wet cloth. If the display shows other alarm codes. deactivate and activate the appliance. If the problem continues, contact the Service. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service. 15.

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 605 mm 640 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum wash load Maximum dry load Spin speed Cotton Cotton Synthetics Maximum 1) Connect the water inlet hose to a water tap with a 3/4" thread. minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 8 kg 6 kg 3 kg 1400 rpm ENGLISH 27 16. ENVIRONMENT CONCERNS Recycle the materials with the symbol . put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EWW1486HDW user guide](http://yourpdfguides.com/dref/4472861)
<http://yourpdfguides.com/dref/4472861>