



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EXD15DN3W. You'll find the answers to all your questions on the AEG-ELECTROLUX EXD15DN3W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EXD15DN3W
User guide AEG-ELECTROLUX EXD15DN3W
Operating instructions AEG-ELECTROLUX EXD15DN3W
Instructions for use AEG-ELECTROLUX EXD15DN3W
Instruction manual AEG-ELECTROLUX EXD15DN3W

Thinking of you
Electrolux

EXD15DN3W
EXD25DN3W

EN DEHUMIDIFIER
FR DÉSHUMIDIFICATEUR
EL ΑΦΥΓΡΑΝΤΗΡΑΣ
IT DEUMIDIFICATORE
PT DESUMIFICADOR
RO DEZUMIFICATOR
ES DESHUMIDIFICADOR
TR NEM ALMA CIHAZI

USER MANUAL 2
NOTICE D'UTILISATION 11
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ 21
ISTRUZIONI PER L'USO 31
MANUAL DE INSTRUÇÕES 41
INFORMAȚII PENTRU
UTILIZATOR 51
MANUAL DE
INSTRUCCIONES 61
KULLANMA KILAVUZU 70



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EXD15DN3W user guide](http://yourpdfguides.com/dref/4278743)
<http://yourpdfguides.com/dref/4278743>

Manual abstract:

Safety information Before first use Operating instructions 2 3 4 Care and cleaning 8 What to do if. This USER MANUAL provides specific operating instructions for your model. Use the room air conditioner only as instructed in this USER MANUAL. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating, and maintaining any appliance. Do not remove any prong from the power cord. Do not, under any circumstances, cut, remove, or bypass the grounding prong. Destroy the carton, plastic bags, and any packing materials immediately after the dehumidifier is unpacked. Children should never use these items for play. Do not leave children unattended in an area where the appliance is operating.

Do not allow them to sit or stand on the appliance. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings. Water is not potable and cannot be used for drinking. For your safety and protection, this dehumidifier is equipped with a three-prong grounding plug on the power cord.

Do not, under any circumstances, cut or remove the round ground prong from the plug. @@@@Never unplug the dehumidifier by pulling on the power cord. @@@@ Do not pinch, bend, or knot the power cord. @@@@ Do not start or stop the dehumidifier by unplugging the power cord or . Turning off the power at the electrical box. Do not cut or damage the power cord.

If the power cord is damaged, it should only be replaced by an authorized Electrolux servicer. in the event of a malfunction (sparks , burning smell , etc. @@@@Do not operate the dehumidifier with wet hands. Do not pull on the power cord. Do not drink any water from the dehumidifier. @@@@Do not hang objects off the unit. Do not place containers with liquids on the unit. Turn off the dehumidifier at the power source when it will not be used for an extended period of time. Do not block or cover the intake grille, discharge area and outlet ports. Ensure that any electrical/electronic equipment is one yard away from the unit.

Do not use or store flammable gases near the unit. Dehumidifier must be operated in an enclosed area to be most effective. Close all doors, windows, and other outside openings to the room. The effectiveness of the dehumidifier depends on the rate at which new moisture-laden air enters the room. Place dehumidifier in a location that does not restrict airflow through the front of the unit or out of the louvers on the left side of cabinet. 3. A dehumidifier operating in a basement will have little or no effect in drying an adjacent enclosed storage area, such as a closet, unless there is adequate circulation of air in and out of the area. @@@@ 4. @@@@ 5. @@@@The "Compressor" circuit has an automatic 3 minute time delayed start if the unit is turned off and on quickly.

this prevents overheating of the compressor and possible circuit breaker tripping. Make sure the tank is fitted correctly otherwise unit will not turn on. Allow the unit to reach room temperature before operating. To begin operating the dehumidifier, follow these steps: Unit must be upright for one hour prior to operating. 1.

Plug the power cord into a properly grounded 220 V AC outlet. To turn the unit on, press the ON/OFF . The unit will run in the factbutton tory setting of CONTINUOUS and high fan speed. In the CONTINUOUS mode, the unit will only display CO and not the room humidity. @@@@The indicator light will show the setting you have selected.

A higher fan speed will result in quicker moisture removal. @@@@ 5 hour to 24 hours. @@@@) until the unit either starts or stops. @@@@Once that happens the above steps have to be repeated. @@@@The CLEAN FILTER light will illuminate after 250 hours of operation. @@@@To shut the unit down, press the ON/ OFF button . Emptying the Bucket: When the bucket is full, the unit will shut down and the BUCKET FULL indicator will illuminate. Do not move the unit at this time otherwise water may spill on the floor. Press sides of bucket gently to unclip the bucket from the unit. Remove the bucket as shown in the photographs below and empty the bucket.

Replace the empty bucket back into the unit and once seated correctly, the unit will start up again. You should hear a click when the bucket is in the correct position Warning! discard water from bucket. Water is not potable and cannot be used for drinking. If the BUCKET FULL light does not extinguish, check that the float is correctly snapped in place as indicated by the diagram. @@@@Screw the garden hose onto the threaded portion of the connector. Make sure all the connection is secure and there are no leaks. 5. @@@@ Wash the filter with clean water then dry. @@@@Before calling for service, review this list. It may save you time and expense.

This list includes common occurrences that are not Push plug firmly into wall outlet. Dehumidifier automatically shuts off when selected amount of moisture has been removed from the air. If you want to remove more moisture, Select CONTINUOUS by using the humidity button or knob. After the dehumidifier starts, reset the control to the desired setting. Dehumidifier automatically turns off when this occurs.

Empty bucket and return bucket to position. DEHUMIDIFIER RUNS TOO MUCH Windows or doors near dehumidifier are open to outdoors. Close all windows or doors to outside. Area to be dehumidified is too large. Use brush attachment of vacuum cleaner to clean grill. see "Care and Cleaning". Dehumidifier must be placed in a space that does not restrict air flowing into the rear coil or out of the front grill. dehumidifier has been installed or restarted recently. @@@@Press the HUMIDITY button or rotate knob to a lower setting or choose CONTINUOUS for maximum dryness. dehumidifier has been installed or restarted recently. The higher the moisture in the room air, the longer it takes for the room air to become dry. Room temperature is too low. @@@@This is normal due to refrigerant rushing through the coil. Frost will usually disappear within 60 minutes. Room Temperature is too low.

@@@For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Do not vent R-134A into atmosphere: R-134A is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 1300. Il peut être nécessaire d'installer un second déshumidificateur dans la zone close pour obtenir un séchage satisfaisant. Un dezumidificator care funcioneaz într-un subsol va avea un efect redus sau nu va avea niciun efect de uscare a unei zone de depozitare închise adiacente, precum un dulap, dac nu exist o circulaie adecvat a aerului în i din zon. Dirijai furtunul spre canalul de scurgere, asigurându-v c nu exist rsuciri care vor opri curgerea apei.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX EXD15DN3W user guide](http://yourpdfguides.com/dref/4278743)
<http://yourpdfguides.com/dref/4278743>