




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX F55002VIOP. You'll find the answers to all your questions on the AEG-ELECTROLUX F55002VIOP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX F55002VIOP
User guide AEG-ELECTROLUX F55002VIOP
Operating instructions AEG-ELECTROLUX F55002VIOP
Instructions for use AEG-ELECTROLUX F55002VIOP
Instruction manual AEG-ELECTROLUX F55002VIOP

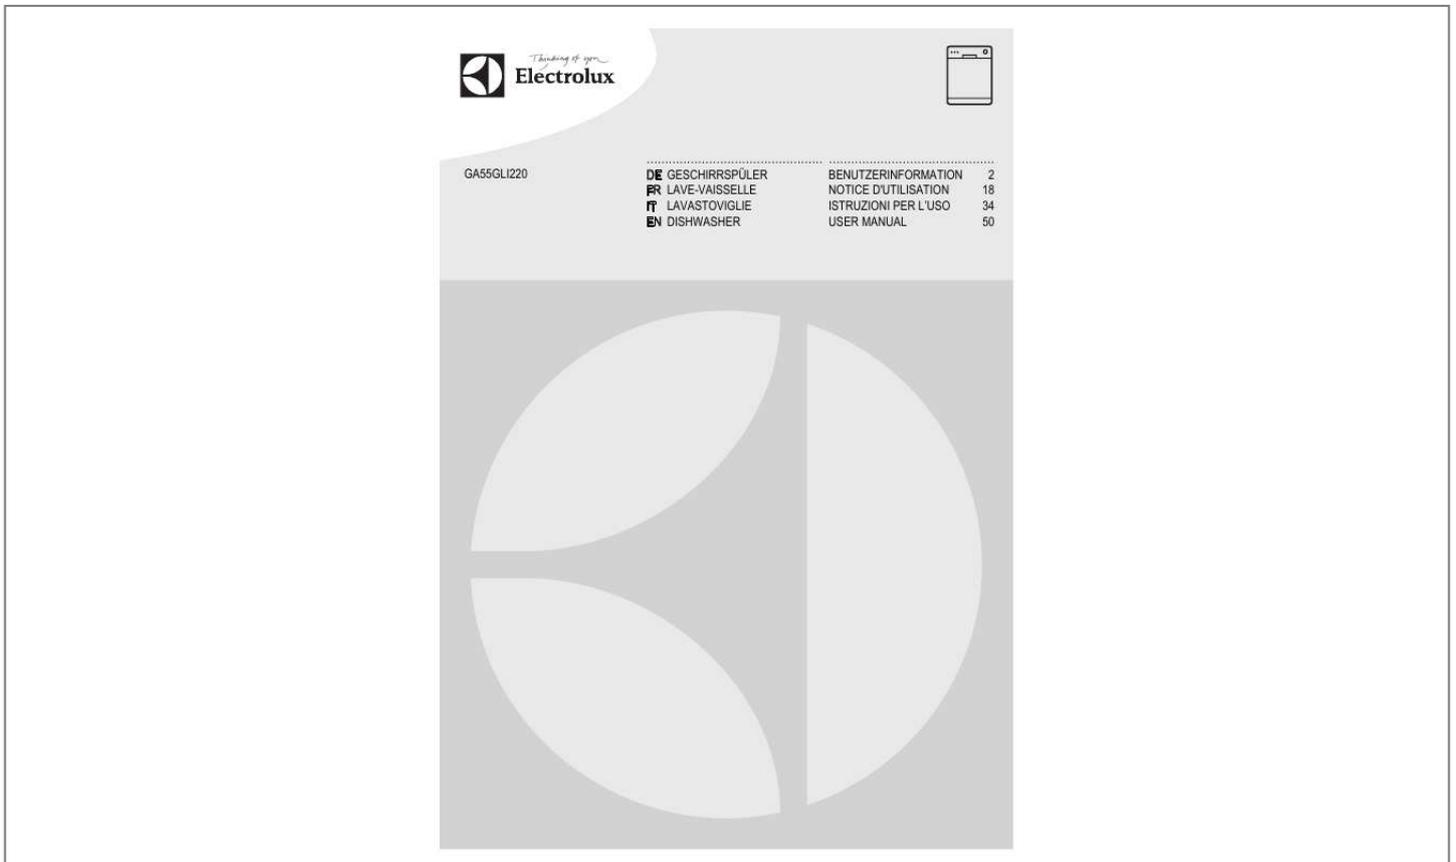

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F55002VIOP user guide](http://yourpdfguides.com/dref/4584525)
<http://yourpdfguides.com/dref/4584525>

Manual abstract:

ingenious and stylish , it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you will get great results every time. welcome to Electrolux. Visit our website for: Get usage advice, brochures, trouble shooter, service information: [www. electrolux. Com](http://www.electrolux.com) Register your product for better service: www. electrolux. Com/productregistration Buy Accessories, Consumables and Original spare parts for your appliance: www. electrolux. Com/shop CUSTOMER CARE AND SERVICE We recommend the use of original spare parts.

When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. model , PNC , Serial Number.

Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice. eNGLISH 51 1.

SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference. The water inlet hose has a safety valve and a sheath with an inner mains cable. Do not let children play with the appliance.

Contact the service to replace the water inlet hose. Make sure that the electrical information on the rating plate agrees with the power supply.

Make sure not to cause damage to the mains plug and to the mains cable. contact the Service or an electrician to change a damaged mains cable.

Always pull the mains plug. Do not install or use a damaged appliance. Do not install or use the appliance where the temperature is less than 0 °C. Obey the installation instruction supplied with the appliance. Make sure that the appliance is installed below and adjacent to safe structures. Water connection Make sure not to cause damage to the water hoses.

Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. The first time you use the appliance, make sure that there is no leakage. 1. 3 Use This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices and other working environments 52 www. electrolux. Com Farm houses By clients in hotels, motels and other residential type environments Bed and breakfast type environments. Do not change the specification of this appliance. Do not sit or stand on the open door. Dishwasher detergents are dangerous. Obey the safety instructions on the detergent packaging.

There can be detergent on the dishes. 1. 4 Internal light To replace the internal light, contact the Service. Disconnect the appliance from the mains supply. Cut off the mains cable and dispose of it.

Remove the door catch to prevent children and pets to get closed in the appliance. eNGLISH 53 2. PRODUCT DESCRIPTION 1 2 11 10 1 Upper spray arm 2 Lower spray arm 3 Filters 4 Rating plate 5 Salt container 6 Water hardness dial 7 Rinse aid dispenser 8 Detergent dispenser 9 8 7 6 5 4 3 9 Lower basket 10 Cutlery basket 11 Upper basket This appliance has an internal light that comes on when you open the door and goes off when the door is closed.

This indicator is off while the programme operates. rinse aid indicator.

This indicator is off while the programme operates. PROGRAMMES Programme 1) Degree of soil Type of load All Crockery, cutlery, pots and pans Heavy soil Crockery, cutlery, pots and pans Programme phases Prewash Wash 45 °C or 70 °C Rinses Dry Prewash Wash 70 °C Rinses Dry Options Energy Saver 2) Energy Saver ENGLISH 55 Programme 3) Degree of soil Type of load Fresh soil Crockery and cutlery Normal soil Crockery and cutlery Normal or light soil Delicate crockery and glassware Programme phases Wash 60 °C Rinse Prewash Wash 50 °C Rinses Dry Wash 45 °C Rinses Dry Prewash Options 4) Energy Saver Energy Saver 5) All 1) The appliance senses the degree of soil and the quantity of items in the baskets. It automatically adjusts the temperature and quantity of the water, the energy consumption and the programme duration. 2) This programme has a high temperature rinsing phase for better hygiene results. During the rinsing phase, the temperature stays at 70 °C for 10 to 14 minutes. 3) With this programme you can wash a load with fresh soil. It gives good washing results in a short time. 4) This is the standard programme for test institutes. With this programme you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil. 5) Use this programme to quickly rinse the dishes.

This prevents the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme.

Com Write down the product number (PNC) that is on the rating plate. This option deactivates the flow of rinse aid and salt. The related indicators are off. The programme duration can increase. The option stays on until you deactivate it. Press the multitab button, the related indicator goes off. Set the water softener to the highest level. 3.

4. 5. Adjust the water softener to the water hardness in your area. the energy consumption decreases by 25%. The dishes can be wet at the end of the programme.

5. If not, adjust the water softener. Processing residues can stay in the appliance. start a programme to remove them. Do not use detergent and do not load the baskets.

If you use the combi detergent tablets, activate the multitab option. 2) Do not use salt at this level. You must adjust the water softener manually and electronically. electronic adjustment 1. Press the on/off button to activate the appliance. Make sure that the appliance is in setting mode.

Press button (10) again and again to change the setting. Turn the cap counterclockwise and open the salt container. Put 1 litre of water in the salt container (only for the first time). Fill the salt container with dishwasher salt.

Remove the salt around the opening of the salt container. Turn the cap clockwise to close the salt container. CAUTION! Water and salt can come out from the salt container when you fill it. risk of corrosion. To prevent it, after you fill the salt container, start a programme. Press the release button (D) to open the lid (C). close the lid. Make sure that the release button locks into position. Press the on/off button to activate the appliance. Make sure that the appliance is in setting mode, refer to SETTING AND STARTING A PROGRAMME.

If the salt indicator is on, fill the salt container.



You're reading an excerpt. Click here to read official AEG-ELECTROLUX F55002VIOP user guide
<http://yourpdfguides.com/dref/4584525>

⌘ If the rinse aid indicator is on, fill the rinse aid dispenser. Set and start the correct programme for the type of load and the degree of soil. Press the release button (B) to open the lid (C). Put the detergent in the compartment (A).

If the programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door. If you use detergent tablets, put the tablet in the compartment (A). close the lid. Make sure that the release button locks into position. ⌘ 7.

⌘⌘⌘⌘⌘ Starting a programme without delay start 1. Press the on/off button to activate the appliance. 4. Make sure that the appliance is in setting mode. 5. ⌘⌘ If you want, you can set the options. Set the programme and the options. 2. ⌘⌘⌘ The delay time flashes in the display. ⌘⌘⌘ When the countdown is completed, the programme starts.

You can set a programme, options and the delay start also with the appliance door closed. In this condition, you only have 3 seconds after each setting before the appliance starts to operate. Opening the door while the appliance operates If you open the door, the appliance stops. When you close the door, the appliance continues from the point of interruption. Com Cancelling the delay start while the countdown operates Press the cancel button until all the programme indicators come on. ⌘⌘ 9. 2 Cleaning the spray arms Do not remove the spray arms. ⌘⌘3 External cleaning Clean the appliance with a moist soft cloth. 10. ⌘⌘ Before you contact the Service, refer to the information that follows for a solution to the problem.

With some problems, the display shows an alarm code: ⌘⌘ - The appliance does not fill with water. ⌘⌘ - The appliance does not drain the water. Deactivate the appliance before you do the checks. problem The programme does not start. Possible cause The mains plug is not connected in the mains socket.

the appliance door is open. The fuse in the fuse box is damaged. Cancel the delay start or wait for the end of the countdown. The appliance does not fill with water. the water tap is closed.

The water pressure is too low. eNGLISH 63 Problem Possible cause The water tap is clogged or there is limescale on it. The filter in the water inlet hose is clogged. There are water leakages in the appliance. Make sure that the position of the hose is correct. Close the water tap and contact the Service. clean the sink spigot. Make sure that the position of the hose is correct. refer to ⌘⌘⌘HINTS AND TIPS⌘⌘ for other possible causes. The appliance does not drain the water.

After the checks are completed, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the Service. If the display shows other alarm codes, contact the Service. Activating the rinse aid dispenser with the multitab option activated 1. Press the on/off button to activate the appliance. Make sure that the appliance is in setting mode. ⌘⌘⌘ The programme indicator above button (9) continues to flash. ⌘⌘ The display shows the setting of the rinse aid dispenser. 10.

1 If the washing and drying results are not satisfactory Whitish streaks or bluish layers on glasses and dishes ⌘⌘ The released quantity of rinse aid is too much. Adjust the rinse aid selector to a lower position. ⌘⌘ The quantity of detergent is too much. ⌘⌘ Adjust the rinse aid selector to a higher position. ⌘⌘ The quality of the detergent can be the cause.

⌘⌘ ⌘⌘ The rinse aid dispenser is empty. ⌘⌘ The quality of the rinse aid can be the cause. ⌘⌘⌘⌘ 10 W 546 / 759 / 571 1) Connect the water inlet.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F55002VIOP user guide](http://yourpdfguides.com/dref/4584525)
<http://yourpdfguides.com/dref/4584525>