



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX F99705VI1P. You'll find the answers to all your questions on the AEG-ELECTROLUX F99705VI1P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX F99705VI1P
User guide AEG-ELECTROLUX F99705VI1P
Operating instructions AEG-ELECTROLUX F99705VI1P
Instructions for use AEG-ELECTROLUX F99705VI1P
Instruction manual AEG-ELECTROLUX F99705VI1P

NL	Gebruiksaanwijzing	2	FAVORIT 99705 V11P
EN	Atvvas automa at User Manual	23	
FR	Dishwasher Notice d'utilisation Lave-vaisselle	43	



AEG
perfekt in form und funktion



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F99705VI1P user guide](http://yourpdfguides.com/dref/5586265)
<http://yourpdfguides.com/dref/5586265>

Manual abstract:

@ Please spend a few minutes reading to get the very best from it. Visit our website for: Get usage advice, brochures, trouble shooter, service information: www.aeg.com. Register your product for better service: www.registreaeg.com Buy Accessories, Consumables and Original spare parts for your appliance: www.aeg.com/shop CUSTOMER CARE AND SERVICE Always use original spare parts. When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number. The information can be found on the rating plate.

Warning / Caution-Safety information General information and tips Environmental information Subject to change without notice. SAFETY INFORMATION Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference. 1.

1 General Safety This appliance is intended to be used in household and similar applications such as: farm houses; staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels, bed & breakfast and other residential type environments. Do not change the specification of this appliance. The operating water pressure (minimum and maximum) must be between 0.8 bar (Mpa). Obey the maximum number of 15 place settings. If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

Put knives and cutlery with sharp points in the cutlery basket with the points down or in a horizontal position. Do not keep the appliance door open without supervision to prevent it from falling on it. Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. Do not use water spray and steam to clean the appliance. The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused. ENGLISH 25 1. 2 Children and vulnerable people safety This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not let children play with the appliance. Keep all detergents away from children.

Keep children and pets away from the appliance door when it is open. Cleaning and user maintenance shall not be made by children without supervision. To be replaced, this must be carried out by our Authorised Service Centre. Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. This appliance complies with the E. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse. Do not install or use a damaged appliance.

Do not install or use the appliance where the temperature is less than 0°C. Obey the installation instruction supplied with the appliance. Make sure that the appliance is installed below and adjacent to safe structures. Make sure that the electrical information on the rating plate agrees with the power supply. Make sure not to cause damage to the mains plug and to the mains cable.

should the mains cable need 2. 3 Water connection Make sure not to cause damage to the water hoses. Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. The first time you use the appliance, make sure that there is no leakage. The water inlet hose has a safety valve and a sheath with an inner mains cable.

Do not put flammable products or items that are wet with flammable products in, near or on the appliance. This appliance has an internal lamp that comes on when you open the door and goes off when the door is closed. The lamp in this appliance is not suitable for household room illumination. To replace the lamp, contact the Service. If the water inlet hose is damaged, immediately disconnect the mains plug from the mains socket. Contact the Authorised Service Centre to replace the water inlet hose. 2. 4 Use Do not sit or stand on the open door. Dishwasher detergents are dangerous. Obey the safety instructions on the detergent packaging.

Do not drink and play with the water in the appliance. Do not remove the dishes from the appliance until the programme is completed. There can be detergent on the dishes. The appliance can release hot steam if you open the door while a programme operates. Disconnect the appliance from the mains supply. Cut off the mains cable and discard it. Remove the door catch to prevent children and pets to get closed in the appliance. When the delay start starts, the countdown duration and DELAY come on. 1 TimeBeam The TimeBeam is a display that shows on the floor below the appliance door. When the programme starts, the programme duration comes on.

CONTROL PANEL 1 2 3 4 6 5 1 2 3 4 5 6 On/off button Navigation key (up) Display Option key OK key Navigation key (down) 4. 1 Key behaviour Navigation keys (up and down) Use these keys to scroll the lists and information texts that show on the display. option key Short press will enter the option list. Short press in the option list takes you back to the programme list. Short press in the settings list takes you back to the option list. Long press (3 sec.) when a delay start or a programme is running will delete the delay start, the programme and options. The display shows the default programme: ECO. OK key Short press: Confirms the selection of the programme, options and settings. Long press: Starts the MyFavourite programme.

If no programme has been saved it will display the setting Set MyFavourite. 5. PROGRAMMES Programme ECO 50° 1) Degree of soil Type of load Normal soil Crockery and cutlery All Crockery, cutlery, pots and pans Mixed soil Crockery, cutlery, pots and pans Programme phases Prewash Wash 50°C Rinses Dry Options Hygiene AutoOpen Multitab Extra Hygiene Multitab AutoSense 45°-70° 2) Prewash Wash from 45°C to 70°C Rinses Dry Prewash Wash 50°C and 65°C Rinses Dry ProZone 50°-65° 3) Multitab ENGLISH 29 Programme Pro 70° 4) Degree of soil Type of load Heavy soil Crockery, cutlery, pots and pans Light soil Crockery and cutlery Fresh soil Crockery and cutlery Normal or light soil Delicate crockery and glassware Normal soil Crockery and cutlery All Programme phases Prewash Wash 70°C Rinses Dry Options ProBoost 5) Multitab 60 Minutes 55° Wash 55°C Rinses Wash 60°C Rinses Wash 45°C Rinses Dry Extra Hygiene Multitab Extra Hygiene Multitab Multitab 30 Minutes 60° 6) Glass 45° Extra silent 50° 7) Prewash Wash 50°C Rinses Dry Multitab Prewash 8) Prewash 1) With this programme you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F99705VI1P user guide](http://yourpdfguides.com/dref/5586265)
<http://yourpdfguides.com/dref/5586265>

(This is the standard programme for test institutes). 2) The appliance senses the degree of soil and the quantity of items in the baskets. It automatically adjusts the temperature and the quantity of water, the energy consumption and the programme duration. 3) With this programme you can wash a load with mixed soil. Very heavy soil in the lower basket and normal soil in the upper basket. The pressure and the temperature of the water in the lower basket are higher than in the upper basket. 4) This programme has a high temperature rinsing phase for better hygiene results.

During the rinsing phase, the temperature stays at 70 °C for at least 10 minutes. 5) If you set the condition Fast, the option ProBoost is automatically deactivated. 6) With this programme you can wash a load with fresh soil. It gives good washing results in a short time. 7) This is the most silent programme. The pump works at a very low speed to decrease the level of noise. Because of the low speed, the programme duration is long. 8) With this programme you can quickly rinse dishes to prevent remains of food to bond on dishes and odours to form in the appliance. Do not use detergent with this programme. 1 Duration (min) 139 - 149 154 - 164 55 - 65 30 75 - 85 219 - 229 14 1) The pressure and the temperature of the water, the variations of the mains supply, the options and the quantity of dishes can change the values.

5. 2 Information for test institutes For all the necessary information for test performance, send an email to: info.test@dishwasher-production.com Write down the product number (PNC) that is on the rating plate. 1 Settings list To see the settings list, select Settings in the option list. Informs you when the programme is completed. factory setting: off. Set the sound of the keys when pressed. adjustment of the sound volume. Change the brightness of the display.

End sound ON OFF Off Click Beep From level 1 to level 10. From level 0 to level 9. Key tones Volume Brightness ENGLISH 31 Settings Contrast Water hardness Values From level 0 to level 9. From level 1 to level 10. Description Change the contrast of the display. Set the level of the water softener according to the water hardness in your area. Factory setting: level 5. Set the level of the rinse aid dispenser according to the necessary quantity of rinse aid. Factory setting: level 4. Set the colour of the TimeBeam Reset the appliance to factory settings.

Rinse aid level From level 0 to level 6. Level 0 = no release of rinse aid. 2 How to change a setting with 2 values (ON and OFF) When a setting is changed it will remain valid even if the programme is completed or a running programme is cancelled. Press the OK key to change the value from ON to OFF or vice versa. 6. Press repeatedly the Option key until the display shows the programme list. Press the OK key to enter the next level. 6. Select the new value or the number of hours for the delay start. 7.

Press the OK key to confirm. 8. Press repeatedly the Option key until the display shows the programme list. 6. 3 How to change a setting with multiple values When a setting is changed it will remain valid even if the programme is 6.

4 How to save the MyFavourite programme You can only save 1 programme at a time. A new setting cancels the previous one. Ther. Com At the end of the programme, the device retracts but the appliance door can remain ajar or retract without closing. cAUTION! Do not try to close the appliance door while the device keeps the door ajar.

This can cause damage to the appliance. 8. BEFORE FIRST USE The first time you activate the appliance it is necessary to set the language. Scroll the list of available languages for a new language and press OK to confirm. 2. If not, adjust the level of the water softener. Do not use detergent and do not load the baskets. It seems that the appliance is not working. The washing phase starts only after this procedure is completed. The higher the content of these minerals, the harder your water is.

water hardness is measured in equivalent scales. Only use salt specifically designed for dishwashers. Water and salt can come out from the salt container when you fill it. risk of corrosion. To prevent it, after you fill the salt container, start a programme. When the salt container needs refilling, the display shows a message. How to fill the salt container 1. Turn the cap of the salt container counterclockwise and remove it. 2. Put 1 litre of water in the salt container (Only for the first time).

3. Fill the salt container with dishwasher salt. 8. The rinse aid is automatically released during the hot rinse phase. Factory setting: level 4. How to fill the rinse aid dispenser 4. Remove the salt around the opening of the salt container. a B 5. Only use rinse aid specifically designed for dishwashers. 3.

Make sure that the lid locks into position. Fill the rinse aid dispenser when the indicator (A) becomes clear. Press the on/off button to activate the appliance. If you use multitablets, activate the option Multitab. 5. cAUTION! Only use detergent specifically designed for dishwashers. 1. Press the release button (A) to open the lid (C). 2. Put the detergent, in powder or tablets, in the compartment (B).

3. Make sure that the lid locks into position. The function comes into operation: 5 minutes after the completion of the programme. After 5 minutes if the programme has not started. C Starting a programme When you activate the appliance, the display shows the programme list. Once options are set, go back to the programme list to start the selected programme. If the programme is applicable to the option TimeSaver, you have to confirm Fast or Normal. 4. Close the appliance door to start the programme Opening the door while the appliance operates If you open the door while a programme is running, the appliance stops. When you close the door, the appliance continues from the point of interruption.

If the door is opened for more than 30 seconds during the drying phase, the running programme will end. This will not happen when programme ECO with AutoOpen is running. How to delay the start of a programme It is not possible to set the delay start with the MyFavourite programme. The display shows the option list. Select the number of hours desired for the delay start.

You can delay the start of a programme from 1 to 24 hours. You can select other applicable options. 8. Press repeatedly Option until the display shows the selected programme. Close the appliance door to start the countdown of the delay start.

When the countdown is completed, the programme starts automatically. Cancelling the delay start while the countdown operates When you cancel the delay start the programme and the options are set to their default values. Press and hold Option for about 3 seconds until the display shows Stop washing?

Cancelling a running programme When you cancel the running programme the options are set to their default values.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F99705VI1P user guide](http://yourpdfguides.com/dref/5586265)
<http://yourpdfguides.com/dref/5586265>

Press and hold Option for about 3 seconds until the display shows Stop washing? Press and hold OK for about 3 seconds until the display shows the MyFavourite setting. 2. Close the appliance door to start the programme. End of programme When the programme is completed the TimeBeam shows 0:00 and CLEAN. Com appliance is automatically deactivated when you open the door. 1 General The following hints will ensure optimal cleaning and drying results in daily use and also help to protect the environment. **Remove larger residues of food from the dishes into the waste bin.**

Do not pre-rinse dishes by hand. When needed, use the prewash programme (if available) or select a programme with a prewash phase. Always use the whole space of the baskets. When loading the appliance, make sure that the dishes can be completely reached and washed by the water released from the spray arm nozzles. Make sure that items do not touch or cover each other. You can use dishwasher detergent, rinse aid and salt separately or you can use the multi-tablets (e. Follow the instructions written on the packaging. Multi-tablets are usually suitable in areas with a water hardness up to 21 dH . In areas exceeding this limit, rinse aid and salt must also be used. If you use multi-tablets you can select the Multitab option (if available).

This option increases the cleaning and drying results with the use of multitablets. Select the programme according to the type of load and degree of soil. With the ECO programme you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil. dH . In areas exceeding this limit, rinse aid and salt must be used in addition to the multi-tablets.

However, in areas with hard and very hard water we recommend to use solo-detergent (powder, gel, tablets without additional functions), rinse aid and salt separately for optimal cleaning and drying results. If you use multi-tablets you can select the Multitab option (if available). This option increases the cleaning and drying results with the use of multitablets. Detergent tablets do not fully dissolve with short programmes. To prevent detergent residues on the tableware, we recommend that you use the tablets with long programmes.

Do not use more than the correct quantity of detergent. Refer to the instructions on the detergent packaging. 10. 3 What to do if you want to stop using multi-tablets Before you start to use separately detergent, salt and rinse aid do the following procedure. 1. Set the highest level of the water softener. 2. Make sure that the salt and rinse aid containers are full. 3. Start the shortest programme with a rinsing phase.

Do not add detergent and do not load the baskets. 4. When the programme is completed, adjust the water softener according to the water hardness in your area. 2 Using salt, rinse aid and detergent Only use salt, rinse aid and detergent for dishwasher. Other products can cause damage to the appliance.

Multi-tablets are usually suitable in areas with a water hardness up to 21 10. 4 Loading the baskets Only use the appliance to wash items that are dishwasher-safe. ENGLISH 39 Do not put in the appliance items made of wood, horn, aluminium, pewter and copper. Do not put in the appliance items that can absorb water (sponges, household cloths). Remove larger residues of food from the dishes into the waste bin.

Make soft the remaining burned food on the items. Put hollow items (cups, glasses and pans) with the opening down. Make sure that glasses do not touch other glasses. Put cutlery and small items in the cutlery drawer. Put light items in the upper basket.

Make sure that the items do not move. Make sure that the spray arm can move freely before you start a programme. The position of the items in the baskets is correct. The programme is applicable for the type of load and for the degree of soil. Let the tableware cool down before you remove it from the appliance.

Hot items can be easily damaged. 2. First remove items from the lower basket, then from the upper basket. At the end of the programme water can still remain on the sides and on the door of the appliance. 10. 5 Before starting a programme Make sure that: 11. **cARE AND CLEANING WARNING!** Before maintenance, deactivate the appliance and disconnect the mains plug from the main socket. Dirty filters and clogged spray arms decrease the washing results. Make a check regularly and, if necessary, clean them. c B 11.

1 Cleaning the filters The filter system is made of 3 parts. Put back the filter (B) in the flat filter (A). Turn it clockwise until it locks. 2. Remove the filter (C) out of filter (B). An incorrect position of the filters can cause bad washing results and damage to the appliance. 11. 2 Cleaning the spray arms Do not remove the spray arms. If the holes in the spray arms are clogged, remove remaining parts of soil with a thin pointed object. Make sure that there are no residues of food or soil in or around the edge of the sump.

6. Put back in place the flat filter (A). Make sure that it is correctly positioned under the 2 guides. Clean the appliance with a moist soft cloth. 4 Internal cleaning Carefully clean the appliance, including the rubber gasket of the door, with a soft moist cloth.

12. Problem You cannot activate the appliance. With some problems, the display shows a message. Possible solution Make sure that the mains plug is connected to the mains socket. Make sure that there is no a damage fuse in the fuse box.

Make sure that the appliance door is closed. If the delay start is set, cancel the setting or wait for the end of the countdown. The appliance has started the procedure to recharge the resin inside the water softener. The duration of the procedure is approximately 5 minutes. Make sure that the water tap is open. Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. Make sure that the water tap is not clogged. Make sure that the filter in the inlet hose is not clogged. Make sure that the inlet hose has no kinks or bends.

The programme does not start. The appliance does not fill with water. The display shows the message: Appliance is not filling water. The appliance does not drain the Make sure that the sink spigot is not clogged. water. Make sure that the drain hose has no kinks or The display shows the message: bends. The display shows the message: Appliance is flooding or has an error in the water inlet.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F99705VI1P user guide](http://yourpdfguides.com/dref/5586265)
<http://yourpdfguides.com/dref/5586265>

â Close the water tap and contact an Authorised Service Centre. Once you have checked the appliance, deactivate and activate the appliance. If the problem occurs again, contact an Authorised Service Centre.

For other alarm messages or problems not described in the table, contact an Authorised Service Centre. 1 The washing and drying results are not satisfactory

Problem There are whitish streaks or bluish layers on glasses and dishes. There are stains and dry water drops on glasses and dishes. The dishes are wet.

Possible solution â The release quantity of rinse aid is too much.

Adjust the rinse aid selector to a lower position. Adjust the rinse aid selector to a higher position. â The quality of the rinse aid can be the cause. â The programme does not have a drying phase or has a drying phase with low temperature. â The rinse aid dispenser is empty.

â The quality of the rinse aid can be the cause. â The quality of the multi-tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid and multi-tablets together. 10 1) Refer to the rating plate for other values. 2) If the hot water comes from alternative source of energy, (e. g. Solar panels, aeolian energy), use the hot water supply to decrease energy consumption. 14. ENVIRONMENTAL CONCERNS Recycle the materials with the symbol . put the packaging in applicable containers to recycle it.

Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX F99705VI1P user guide](http://yourpdfguides.com/dref/5586265)

<http://yourpdfguides.com/dref/5586265>