



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX FAVORIT 84470 VI. You'll find the answers to all your questions on the AEG-ELECTROLUX FAVORIT 84470 VI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX FAVORIT 84470 VI**  
**User guide AEG-ELECTROLUX FAVORIT 84470 VI**  
**Operating instructions AEG-ELECTROLUX FAVORIT 84470 VI**  
**Instructions for use AEG-ELECTROLUX FAVORIT 84470 VI**  
**Instruction manual AEG-ELECTROLUX FAVORIT 84470 VI**

FAVORIT 84470 VI

Dishwasher

Instruction book



PERFEKT IN FORM UND FUNKTION

**AEG**



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>

**Manual abstract:**

@@Notes that concern your personal safety. Attention! Notes that show how to avoid damage to the appliance. @@@@It is for this reason that the noise level varies during the dishwashing cycle. Printed on paper manufactured with environmentally sound processes. He who thinks ecologically acts accordingly... 2 Contents CONTENTS Operating instructions Safety instructions Disposal Economical and ecological dishwashing Description of the appliance The control panel Prior to using for the first time Setting the water softener Filling with salt Rinse aid In daily use Loading cutlery and dishes The lower basket The cutlery basket The upper basket Adjusting the height of the upper basket Use of detergent Different kinds of detergent Washing programmes Starting a washing programme Unloading the dishwasher Maintenance and cleaning Cleaning the filters What to do, when...

4 4 6 6 7 7 10 10 13 14 17 17 19 20 21 22 23 24 26 27 29 30 30 33 36 37 39 40 40 40 41 42 43 44 45 3 Service Guarantee terms Technical specifications Installation instructions Building-in Levelling Fixing to the adjacent units Water supply connections Water inlet hose with safety valve Water outlet hose connection Electrical connection Hints for test centres Operating instructions OPERATING INSTRUCTIONS Safety instructions The safety of AEG electrical appliances conforms to accepted rules of technology and the Appliance Safety Act. We as manufacturers, however, see ourselves as being obliged to familiarise you with the following safety instructions. @@@@This information has been provided in the interest of your safety. @@Never connect a damaged machine. If your dishwasher is damaged, you should contact your supplier.

@@Any electrical and plumbing work required to install this appliance should be carried out by a qualified and competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. The sides of the dishwasher must never be drilled to prevent damage to hydraulic components. Child safety This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.

Packaging parts may be dangerous for children, who could even be suffocated! You should therefore keep all packaging well away from children. 4 Operating instructions The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine. Keep children well away from your dishwasher when the door is open. Keep all detergents in a safe place out of children's reach. Your dishwasher in day-to-day use Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals must not be washed in this dishwasher. Under no circumstances should you open the door whilst the appliance is in operation, especially during the washing phase, hot water may escape. However, if the door is opened, a safety device ensures that the machine stops. Only use products (detergent, salt and rinse aid) specifically designed for use in dishwashers. Long bladed knives stored in an upright position are a potential hazard.

Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket. When finishing loading or unloading close the door, as an open door can be a hazard. Do not sit or stand on the open door. Isolate the appliance from the power supply and turn off the water supply after use. This product should be serviced by an authorised service engineer, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. 5 Operating instructions Disposal Dispose of the dishwasher packaging material correctly.

All packaging materials can be recycled. Plastic parts are marked with standard international abbreviations: >PE< for polyethylene, e.g. sheet wrapping material. >PS< for polystyrene, e.

g. padding material (always CFC-free). >POM< for polyoxymethylene, e.g. plastic clips.

Cardboard packaging is manufactured from recycled paper and should be deposited in the waste paper collection for recycling. As and when you cease to use your dishwasher and withdraw it from service, you should render it unserviceable before having it disposed of. Warning! Children at play could lock themselves in your dishwasher or otherwise endanger their lives. Therefore cut off the power supply cable and make the door closing device unusable to prevent children from being trapped inside. To dispose of the appliance please take it to a recycling centre or to your dealer who may, for a small contribution to the costs, dispose of it for you. Economical and ecological dishwashing Ensure that the water softener is correctly adjusted. Do not pre-wash under running water. Select the wash programme to suit the nature and degree of the soiling on the dishes. Do not use more detergent, dishwasher salt and rinse aid than is recommended in these operating instructions and by the manufacturer of the respective product. 6 Operating instructions Description of the appliance Upper spray arm Water hardness dial Salt container Lower spray arm Filters Detergent dispenser Rinse aid dispenser Rating plate The control panel Function buttons Digital display 1 Indicator lights On/Off button Delay start option button 3 IN 1 option button Programme selection buttons 7 Operating instructions Function buttons: in addition to the dishwashing programme selected and "delay start", the following functions can also be set with the help of these buttons: - water softener setting, - deactivation/activation of the rinse aid dispenser, - deactivation/activation of the audible signals, - the cancelling of a washing programme.

"Programme selection" buttons: allows the selection of the desired washing programme (see "Washing programmes" chart). "Delay start" option button: this option allows the start of the programme to be delayed from 1 to 19 hours. The digital display indicates: the level of hardness to which the water softener is set if the audible signals are activated/deactivated if the rinse aid dispenser is activated/deactivated the delay start the approximate remaining time of the running programme fault codes concerning malfunction of the dishwasher Indicator lights: have the following meanings: Salt refilling indicator light, illuminates when the salt has run out Rinse aid refilling indicator light, illuminates when the rinse aid has run out The salt and rinse aid indicator lights are never illuminated while a washing programme is running even if the salt or rinse aid dispenser require refilling. "3 in 1" option button: this appliance is equipped with the option "3 in 1", which allows the use of the "3 in 1" combi detergent tablets.



**[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)**

<http://yourpdfguides.com/dref/2374705>

This function can be selected with all washing programmes. With the selection of this function the dosage of rinse aid and salt from each respective supply container is automatically deactivated and also the indicator lights for salt and rinse aid are deactivated. Once selected this option button (indicator light illuminated) it will remain active also for the following washing programmes, to deactivate the function, press the button (indicator light off). 8 Operating instructions Audible signals Audible signals have been introduced to help indicate which operations the dishwasher is performing: "Setting of the water softener" "End of programme" "Something not working with the machine" Deactivation/activation of the audible signals (The dishwasher must be switched off) 1. Press the On/Off button. All programme selection buttons indicator lights will illuminate (setting mode).

If only one programme selection button indicator light is illuminated, this means that a washing programme has been selected. The programme must be cancelled: press simultaneously the function buttons 2 and 3 for about 2 seconds, the indicator light of the set programme button starts flashing for about 2 seconds. After about 2 seconds the indicator lights of all the programme selection buttons will illuminate indicating that the set programme has been cancelled and that the machine is now in setting mode. 2. Press simultaneously function push buttons 2 and 3, the indicator lights of the function push buttons 1, 2 and 3 start flashing.

3. Press the function button 3, the indicator lights of function buttons 1 and 2 turn off while the indicator light of the button 3 goes on flashing, the digital display indicates the current setting. Audible signals deactivated Audible signals activated (factory set) 4. To change the current setting, press again the function button 3, the digital display will indicate the new setting. 5.

To memorise the operation, switch off the dishwasher by pressing the On/Off button or wait about 60 seconds after which the dishwasher will automatically return to setting mode. 9 Operating instructions Prior to using for the first time Before using your dishwasher for the first time: 1. Ensure that the electrical and water connections comply with the installation instructions 2. Remove all packaging from inside the appliance 3. Set the water softener 4. Pour 1 litre of water inside the salt container and then fill with special dishwasher salt. 5. Fill the rinse aid dispenser. Setting the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is.

Water hardness is measured in equivalent scales, German degrees, French degrees and mmol/l (millimol per litre). The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. The water softener must be set in both ways: manually, using the water hardness dial and electronically, using the function push buttons on the control panel. Water hardness °dH (german degrees) °TH mmol/l Range (french degrees) (millimol per litre, international unit for the hardness of water) Level indicated in the of audible digital dissignals Manually Electronically play 10 9 8 7 6 5 4 3 1 2 1 no salt necessary Adjusting the water hardness setting 51 - 70 43 - 50 37 - 42 29 - 36 23 - 28 19 - 22 15 - 18 11 - 14 4 - 10 < 4 91 - 125 76 - 90 65 - 75 51 - 64 40 - 50 33 - 39 26 - 32 19 - 25 7 - 18 < 7 9,0 - 12,5 7,6 - 8,9 6,5 - 7,5 5,1 - 6,4 4,0 - 5,0 3,3 - 3,9 2,6 - 3,2 1,9 - 2,5 0,7 - 1,8 < 0,7 IV 2 10 9 8 7 6 5 4 3 2 1 III II I/II I 10 Operating instructions a) Setting manually 1. Open the dishwasher door. 2. Remove the lower basket from the dishwasher. 3. Turn the water hardness dial to position 1 or 2 (see table).

4. Replace the lower basket. The dishwasher is factory set at position 2. AA07 b) Setting electronically (The dishwasher must be switched off) The dishwasher is factory set at level 5. 1.

Press the On/Off button. All programme selection buttons indicator lights will illuminate (setting mode). If only one programme selection button indicator light is illuminated, this means that a washing programme has been selected. The programme must be cancelled: press simultaneously the function buttons 2 and 3 for about 2 seconds, the indicator light of the set programme button starts flashing for about 2 seconds. After about 2 seconds the indicator lights of all the programme selection buttons will illuminate indicating that the set programme has been cancelled and that the machine is now in setting mode. 2. Press simultaneously function push buttons 2 and 3, the indicator lights of the function push buttons 1, 2 and 3 start flashing.

3. Press the function button 3, the indicator lights of function buttons 1 and 2 turn off while the indicator light of the button 3 goes on flashing, the digital display indicates the current setting. Audible signals deactivated Audible signals activated (factory set) 4. To change the current setting, press again the function button 3, the digital display will indicate the new setting. 5. To memorise the operation, switch off the dishwasher by pressing the On/Off button or wait about 60 seconds after which the dishwasher will automatically return to setting mode. 9 Operating instructions Prior to using for the first time Before using your dishwasher for the first time: 1. Ensure that the electrical and water connections comply with the installation instructions 2. Remove all packaging from inside the appliance 3. Set the water softener 4. Pour 1 litre of water inside the salt container and then fill with special dishwasher salt. 5. Fill the rinse aid dispenser. Setting the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, German degrees, French degrees and mmol/l (millimol per litre). The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. The water softener must be set in both ways: manually, using the water hardness dial and electronically, using the function push buttons on the control panel. Water hardness °dH (german degrees) °TH mmol/l Range (french degrees) (millimol per litre, international unit for the hardness of water) Level indicated in the of audible digital dissignals Manually Electronically play 10 9 8 7 6 5 4 3 1 2 1 no salt necessary Adjusting the water hardness setting 51 - 70 43 - 50 37 - 42 29 - 36 23 - 28 19 - 22 15 - 18 11 - 14 4 - 10 < 4 91 - 125 76 - 90 65 - 75 51 - 64 40 - 50 33 - 39 26 - 32 19 - 25 7 - 18 < 7 9,0 - 12,5 7,6 - 8,9 6,5 - 7,5 5,1 - 6,4 4,0 - 5,0 3,3 - 3,9 2,6 - 3,2 1,9 - 2,5 0,7 - 1,8 < 0,7 IV 2 10 9 8 7 6 5 4 3 2 1 III II I/II I 10 Operating instructions a) Setting manually 1. Open the dishwasher door. 2. Remove the lower basket from the dishwasher. 3. Turn the water hardness dial to position 1 or 2 (see table).

4. Replace the lower basket. The dishwasher is factory set at position 2. AA07 b) Setting electronically (The dishwasher must be switched off) The dishwasher is factory set at level 5. 1. Press the On/Off button. All programme selection buttons indicator lights will illuminate (setting mode). If only one programme selection button indicator light is illuminated, this means that a washing programme has been selected. The programme must be cancelled: press simultaneously the function buttons 2 and 3 for about 2 seconds, the indicator light of the set programme button starts flashing for about 2 seconds. After about 2 seconds the indicator lights of all the programme selection buttons will illuminate indicating that the set programme has been cancelled and that the machine is now in setting mode. 2. Press simultaneously function push buttons 2 and 3, the indicator lights of the function push buttons 1, 2 and 3 start flashing.

3. Press the function button 3, the indicator lights of function buttons 1 and 2 turn off while the indicator light of the button 3 goes on flashing, the digital display indicates the current setting. Audible signals deactivated Audible signals activated (factory set) 4. To change the current setting, press again the function button 3, the digital display will indicate the new setting. 5. To memorise the operation, switch off the dishwasher by pressing the On/Off button or wait about 60 seconds after which the dishwasher will automatically return to setting mode. 9 Operating instructions Prior to using for the first time Before using your dishwasher for the first time: 1. Ensure that the electrical and water connections comply with the installation instructions 2. Remove all packaging from inside the appliance 3. Set the water softener 4. Pour 1 litre of water inside the salt container and then fill with special dishwasher salt. 5. Fill the rinse aid dispenser. Setting the water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, German degrees, French degrees and mmol/l (millimol per litre). The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. The water softener must be set in both ways: manually, using the water hardness dial and electronically, using the function push buttons on the control panel. Water hardness °dH (german degrees) °TH mmol/l Range (french degrees) (millimol per litre, international unit for the hardness of water) Level indicated in the of audible digital dissignals Manually Electronically play 10 9 8 7 6 5 4 3 1 2 1 no salt necessary Adjusting the water hardness setting 51 - 70 43 - 50 37 - 42 29 - 36 23 - 28 19 - 22 15 - 18 11 - 14 4 - 10 < 4 91 - 125 76 - 90 65 - 75 51 - 64 40 - 50 33 - 39 26 - 32 19 - 25 7 - 18 < 7 9,0 - 12,5 7,6 - 8,9 6,5 - 7,5 5,1 - 6,4 4,0 - 5,0 3,3 - 3,9 2,6 - 3,2 1,9 - 2,5 0,7 - 1,8 < 0,7 IV 2 10 9 8 7 6 5 4 3 2 1 III II I/II I 10 Operating instructions a) Setting manually 1. Open the dishwasher door. 2. Remove the lower basket from the dishwasher. 3. Turn the water hardness dial to position 1 or 2 (see table).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>

Glasses with long stems can be placed upside-down in the raised cupracks.

The cup-rack on the left folds upwards to increase your loading flexibility. Arrange items on and underneath the fold-down cup racks so that water can reach all surfaces. Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move. US75 US74 Before closing the door, ensure that the spray arms can rotate freely.

21 Operating instructions Adjusting the height of the upper basket If washing very large plates you can load them in the lower basket after moving the upper basket to the higher position. Maximum height of the dishes in: upper basket lower basket With upper basket raised With upper basket lowered 20 cm 24 cm 31 cm 27 cm To move to the higher position proceed as follows: 1. Pull out the basket until it stops 2. Carefully lift both sides upwards until the mechanism is engaged and the basket is stable. Attention! Never lift or lower the basket on one side only. When the basket is in the higher position you will not be able to use the cup rack(s). RC09 To lower the basket to the original position 1. Pull out the basket until it stops 2. Carefully lift both sides upwards and then allow the mechanism to drop back down slowly, keeping hold of it. After loading your machine always close the door, as an open door can be a hazard.

22 Operating instructions Use of detergent Only use detergents specifically designed for use in dishwashers. We recommend the use of Finish detergents. Using no more than the correct amount of detergent contributes to reducing pollution. Prior to the start of a wash programme (not for the "Rinse and Hold" programme). The detergent is released during the washing phase. Please observe the manufacturer's dosing and storage recommendations as stated on the detergent packaging. Fill with detergent 1. If the lid is closed: press release button (1). The lid springs open. 2.

Fill the detergent dispenser (2) with detergent. The marking indicates the dosing levels: 20 = approximately 20 g of detergent 30 = approximately 30 g of detergent DE19 DE22 3. All programmes with prewash need an additional detergent dose (5/10 g) that must be placed in the prewash detergent chamber (3).

This detergent will take effect during the prewash phase. 4.

Close the lid and press until it locks in place. 23 Operating instructions Different kinds of detergent Detergent tablets Detergent tablets of different brands dissolve at different speeds. For this reason some detergent tablets cannot dissolve and develop their full cleaning power during short programmes. Therefore please use long programmes when using detergent tablets, to ensure the complete removal of detergent residuals. @@@@- low alkaline concentrated detergents with natural enzymes.

@@@@@@@1. @@2. @@3. @@@@@@@@ (60°) Crockery and cutlery Light soil INTENSIV 70° Crockery, cutlery, pots and pans Heavy soil ECO 50° 2

Crockery and cutlery Normal soil (1) The consumption values were obtained under standardised conditions. They depend on how full the baskets for the dishes are. Variations are therefore possible in practice. (2) Testing programme for EN 50242 (see "Hints for Test Centres). @@@@@@@@ @@@@@@ When selecting a programme, the door needs to be open. 1. @@ Turn on the water tap 3.

@@@@@@@ (1h). @@ Close the dishwasher door. @@@@@@@@ The opening of the door will not modify or interrupt the countdown.

@@@@ Hot steam may escape when the door is opened. Open the door carefully. @@@@@ Cancel a washing programme in progress Open the dishwasher door. Press simultaneously the function buttons 2 and 3 for about 2 seconds, the indicator light of the button corresponding to the running programme starts flashing for about 2 seconds. After about 2 seconds the indicator lights of all the programme buttons will illuminate indicating that the running programme has been cancelled and that the machine has returned to setting mode. It is now possible to select and start a new washing programme. (If a new washing programme will be selected, check that there is detergent in the detergent dispenser).

6. To cancel a delay start in progress Open the dishwasher door. The remaining delay time before the start of the programme is visible in the digital display. Press simultaneously the function buttons 2 and 3 for about 2 seconds. After about 2 seconds the indicator lights of all the programme buttons will illuminate indicating that the delay start in progress has been cancelled and that the machine has returned to setting mode.

28 Operating instructions With the cancelling of the delay start also the set programme has also been cancelled. Set the washing programme again. 7. End of the washing programme The dishwasher will automatically stop and an audible signal informs you of the end of the washing programme. The point-shaped optical signal disappears on the floor beneath the appliance's door.

Do not open the dishwasher door before this optical signal turns off. If the door is not immediately opened at the end of the programme, air will circulate inside the dishwasher to prevent residual steam recondensing on the dishes as water droplets. This device operates intermittently for about 20 minutes, as long as the dishwasher is switched on. If the On/Off button is pressed or the door is opened during these 20 minutes, the device will be automatically cancelled. Hot steam may escape from the appliance when opening the door immediately after the end of the programme, therefore, open the door carefully. The end of programme indicator light is illuminated. Switch off the dishwasher by pressing the On/Off button. 8. Unloading the dishwasher Hot dishes are sensitive to knocks. The dishes should therefore be allowed to cool down before removing from the appliance.

Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one. Water may appear on the sides and the door of the dishwasher as the stainless steel will eventually become cooler than the dishes. When the washing programme has finished, it is recommended that the dishwasher is unplugged and the water tap turned off. 29 Operating instructions Maintenance and cleaning Clean the external surfaces of the machine and control panel with a damp soft cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent (acetone, trichloroethylene etc....).

Ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth. We recommend every 3 months to run a 65°C wash programme without dishes using detergent. Cleaning the filters The filters must be checked and cleaned from time to time. Dirty filters will degrade the washing result. 1.

Open the door, remove the lower basket. 2. The dishwashers filter system comprises a coarse (A/B), a microfilter (C) and a flat filter (D).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>

@@@5. Clean all filters thoroughly under running water.

6. Put the flat filter (D) back in the base of the washing compartment. 8. Under no circumstances may the dishwasher be used without filters. NEVER try to remove the upper spray arm. 2. Unplug the appliance and then turn off the water. 3. Leave the inside of the machine clean.

Frost precautions Avoid placing the machine in a location where the temperature is below 0°C. If this is unavoidable, empty the machine, close the appliance door, disconnect the water inlet pipe and empty it. Moving the machine If you have to move the machine (moving house etc...): 1. Unplug it. 2. Turn the water tap off.

3. Remove the water inlet and discharge hoses. 4. Pull the machine out together with the hoses. Avoid over tilting the machine during transportation. 32 Operating instructions What to do, when... Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the instructions given here, without calling out an engineer. .

.a flashing fault code appears The dishwasher will not start or stops during operation. The intervention of an alarm is indicated by an intermittent audible signal and, if your appliance is equipped with an optical floor signal, in the event of an error a dot-shaped optical signal will flash on the floor: open the dishwasher door, a fault code is visible in the digital display (see following chart). Carry out the following suggested corrective actions. Fault code / Malfunction in the digital display appears Possible cause The water tap is blocked or furred with limescale. The water tap is turned off. The machine does not fill with water The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. The water inlet hose has not been correctly laid or it is bent or squashed. in the digital display appears The sink spigot connection is blocked.

The water drain hose has not been correctly laid or it is bent or squashed. Protection against flooding is active. Solutions Clean the water tap. Turn the water tap on. Clean the filter in the threaded hose fitting. Check the water inlet hose connection. Clean out the sink spigot connection. Check the water drain hose connection. The dishwasher will not drain in the digital display appears Close the water tap and contact your local Service Force Centre. Once the checks have been carried out, to continue the programme press the button of the programme that was running before the intervention of the alarm and close the door.

The programme will continue from the point in which it was interrupted. If the fault code reappears contact your local Service Force Centre. For other combinations of fault codes not described in the above chart will appear, please contact your local Service Force Centre. 33 Operating instructions .. there are problems when operating the dishwasher Fault Possible cause The dishwasher door has not been properly closed. The programme does not start The main plug is not plugged in. The fuse has blown in the household fuse box. For dishwasher models with delay start option: Delay start has been selected. There is a whistling noise during washing The whistling is not a cause for concern. Solutions Close the door. Insert the mains plug. Replace the fuse. If dishes are to be washed immediately, cancel the delay start. Use a different brand of detergent. 34 Operating instructions ...the wash results are not satisfactory The dishes are not clean The wrong washing programme has been selected.

The dishes were arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded. The spray arms do not rotate freely due to wrong arrangement of the load. The filters in the base of the washing compartment are dirty or incorrectly positioned. Too little or no detergent has been used. Where there are limescale deposits on the dishes; the salt container is empty or the wrong level of the water softener has been selected. The drain hose connection is not correct. The salt container cap is not properly closed. The dishes are wet and dull Rinse aid was not used. The rinse aid dispenser is empty.

There are streaks, milky spots or a bluish coating on glasses and dishes Decrease rinse aid dosing. Water drops have dried onto glasses and dishes Increase rinse aid dosing. The detergent may be the cause. Contact the detergent manufacturer's consumer care line. 35 Service Service In the event of your appliance requiring service, or if you wish to purchase spare parts, contact your local AEG Service Force Centre by telephoning 08705 929 929 Your call will be automatically routed to the Service Centre covering your post code area.

For the address of your local Service Force Centre and further informations about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk) Help us to help you Please determine your type of enquiry before writing or telephoning. When you contact us we need to know, 1 Your name, address and post code 2 Your telephone number RA07 3 Clear and concise details of the fault code 4 Date of purchase 5 PNC (product number) S. N. (serial number) This information can be found on the rating plate located on the right inside edge of the door. Mod. . .....

. o. .... Prod.

N . Ser. No. ...

.....

.. Customer Care For general enquiries concerning your AEG appliance, or for further information on AEG products, you are invited to contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.aeg.co.uk](http://www.aeg.co.uk) Customer Care Department AEG Domestic Appliances 55-77 High Street Slough Berkshire SL1 1DZ Tel.: 08705 350350 (\*) \* calls to this number may be recorded for training purposes 36 Guarantee terms Guarantee conditions Standard Guarantee Conditions We, AEG, undertake that if within 12 months of the date of purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre.

Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>

Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of AEG manufacture which are not marketed by AEG.

37 Guarantee terms European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. This guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.

e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliance.

France Germany Italy Sweden UK Senlis Nurnberg Pordenone Stockholm Slough +33 (0) 344 62 29 29 +49 (0) 800 234 7378 +39 (0) 800 117511 +46 (0) 8 672 53 60 +44 (0)1753 219899 38 Operating instructions Technical specifications Dimensions: Width Height Max depth Max depth with open door 44.6 cm 81.8 - 87.8 cm 55.5 cm 114 cm Electrical connection: Voltage Overall power Fuse Water supply pressure: Capacity: Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door. Minimum Maximum 50 kPa (0.5 bar) 800 kPa (8 bar) 9 place settings This appliance complies with the following E.E.C. Directives: - 73/23 or 19.

2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 or 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 39 Installation instructions Installation instructions Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person. Remove all packaging before positioning the machine. If possible, position the machine next to a water tap and a drain. Building-in This dishwasher is designed to be fitted under a kitchen counter or worksurface. Attention! Carefully follow the instructions on the enclosed template for building in the dishwasher and fitting the furniture panel. No further openings for the venting of the dishwasher are required, but only to let the water fill and drain hose and power supply cable pass through.

The dishwasher incorporates adjustable feet to allow the adjustment of the height. During all operations that involve accessibility to internal components the dishwasher has to be unplugged. When inserting the machine, ensure that the water inlet hose, the drain hose and the supply cable are not kinked or squashed. Levelling Good levelling is essential for correct closure and sealing of the door. When the appliance is correctly levelled, the door will not catch on either side of the cabinet.

If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level. Fixing to the adjacent units The dishwasher must be secured against tilting. Therefore make sure that the counter it is fixed under, is suitably secured to a fixed structure (adjacent kitchen units cabinets, wall).

40 Installation instructions Water supply connections For making the connection itself, the coupling nut fitted to the machine's supply hose is designed to screw onto either a 3/4" inch gas thread spout. The water pressure must be within the limits given in the "Technical specifications". Your local Water Authority will advise you on the average mains pressure in your area. The water inlet hose must not be kinked, crushed, or entangled when it is being connected up. The dishwasher features fill and drain hoses which can be turned either to the left or the right to suit the installation by means of the locknut. The locknut must be correctly fitted to avoid water leaks. A (Attention! NOT all models of dishwashers have fill and drain hoses provided with locknut. In this case, this kind of facility is not possible). @@@@If the water inlet hose starts to leak during this operation, the safety valve cuts off the running water. Please take care when installing the water inlet hose: - The electrical cable for the safety valve is in the double-walled water inlet hose. Do not immerse the water inlet hose or the safety valve in water. - If water inlet hose or the safety valve is damaged, remove the mains plug immediately.

- A water inlet hose with safety valve must only be replaced by a Service Force Engineer. - Place the water inlet hose in such a way that it is never higher than the bottom edge of the safety valve. @@@@This will prevent waste water from the sink running into the machine. 2. @@3. @@The waste connection must be at a height of between 30 cm (minimum) and 100 cm (maximum) from the bottom of the dishwasher. The drain hose can face either to the right or left of the dishwasher Ensure the hose is not bent or squashed as this could prevent or slow down the discharge of water. The sink plug must not be in place when the machine is draining as this could cause the water to syphon back into the machine. If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided. CS18 Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.

Attention! Our appliances are supplied with a security device to protect against the return of dirty water back into the machine. If the spigot of your sink has a "no return valve" incorporated this can prevent the correct draining of your dishwasher. We advise you therefore to remove it. 43 Installation instructions Electrical connection If the plug that is fitted to your appliance is not suitable for the socket, it must be cut off and the appropriate plug fitted. Important! The wires on the mains lead are coloured in accordance with the following code: Green and Yellow -Earth Blue -Neutral Brown -Live If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug.

Proceed as follows: 1. Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol or coloured green and yellow. 2. Connect the Blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>

3.

Connect the Brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red. The plug moulded onto the lead incorporates a 13amp BSI362 fuse. Only ASTA or E BSI fuses should be used. The plug must not be used if the fuse cover/carrier is lost. L The cover/carrier is indicated N by the coloured insert at the base of the product. A replacement cover/carrier must be obtained from your local Service Force Centre. CE04 This appliance must be earthed. The manufacturer declines any responsibility should this safety measure not be observed. Warning! A cut-off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure that the cut-off plug is disposed of safely.

44 13 A Hints for test centres Hints for test centres Testing in accordance with EN 60704 must be carried out with appliance fully loaded and using the test programme (see "Washing programmes" chart). Testing in accordance with EN 60242 must be carried out when the salt dispenser and rinse aid container have been filled with salt and rinse aid respectively and using the test programme (see "Washing programmes" chart). Load: Rinse aid setting Detergent dosage: 9 standard place settings Position 4 (type III) 5 g + 20 g (type B) Arrangement upper basket: without smaller bowl and salad-bowl Arrangement upper basket: with smaller bowl and salad-bowl Arrangement lower basket Arrangement cutlery basket Cup racks: position A 45 F rom the Electrolux Group. The world's No.1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world. AEG Hausgeräte GmbH Postfach 1036 D-90327 Nürnberg <http://www.aeg.hausgeraete.de> © Copyright by AEG 152 963 03/0 Subject to change without notice .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX FAVORIT 84470 VI user guide](http://yourpdfguides.com/dref/2374705)  
<http://yourpdfguides.com/dref/2374705>