



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX HK 654400 XB. You'll find the answers to all your questions on the AEG-ELECTROLUX HK 654400 XB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX HK 654400 XB
User guide AEG-ELECTROLUX HK 654400 XB
Operating instructions AEG-ELECTROLUX HK 654400 XB
Instructions for use AEG-ELECTROLUX HK 654400 XB
Instruction manual AEG-ELECTROLUX HK 654400 XB

HK654400XB

EN INDUCTION HOB

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX HK 654400 XB user guide](http://yourpdfguides.com/dref/3945260)
<http://yourpdfguides.com/dref/3945260>

Manual abstract:

We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. ACCESSORIES AND CONSUMABLES In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: www.aeg-electrolux.com/shop Contents 3 CONTENTS 4 5 7 8 12 14 15 16 Safety information Installation instructions Product description Operating

instructions Helpful hints and tips Care and cleaning What to do if..

· Environment concerns The following symbols are used in this user manual: Important information concerning your personal safety and information on how to avoid damaging the appliance. General information and tips Environmental information Subject to change without notice 4 Safety information SAFETY INFORMATION For your safety and correct operation of the appliance, read this manual carefully before the installation and use. @@@@ They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. · Keep all packaging away from children. There is the risk of suffocation or injury. @@WARNING! @@ · Set the cooking zones to "off" after each use. · The risk of burns! @@They can become hot. @@WARNING! Fire risk! Too hot fats and oils can occur with ignition very quickly. Correct operation Always monitor the appliance during operation. The appliance is only for domestic use! Do not use the appliance as a work or a storage surface. Do not put or keep very flammable liquids and materials, easy fusible objects (made of plastic or aluminium) on or near the appliance. · Be careful when you connect the appliance to the near sockets. Do not let the electricity bonds touch the appliance or hot cookware. Do not let the electricity bonds to tangle. · · · · How to prevent a damage to the appliance. · If the objects or cookware fall on the glass, the surface can be damaged. · Cookware made of cast iron, cast aluminium or with damaged bottoms can cause scratch of the glass. Do not move them on the surface. Installation instructions · · · · 5 Do not let cookware boil dry to prevent the damage to cookware and glass .

Do not use the cooking zones with empty cookware or without cookware. Do not put the aluminium foil on the appliance. Make sure that the airflow space of 5 mm between the worktop and front of the unit below it stays opened. WARNING! @@@@You must read these! @@Do not connect a damaged appliance. If it is necessary, speak to the supplier. @@Use only original spare parts. @@Do not change the specifications or change this product. Risk of injury and damage to the appliance. @@Keep the minimum distances to other appliances and units! @@Keep safe the cut surfaces of the worktop from moisture with a correct sealant! Seal the appliance to the work top with no space between with a correct sealant! Keep safe the bottom of the appliance from steam and moisture, e.g.

from a dishwasher or oven! Do not install the appliance adjacent to doors and below windows! If not, when you open the doors or windows they can push off hot cookware from the appliance. WARNING! Risk of injury from electrical current. Carefully obey the instructions for electrical connections. · The electrical mains terminal is live. 6 · · · · Installation instructions Make electrical mains terminal free of voltage.

Install correctly to give shock protection. Loose and incorrect plug and socket connections can make the terminal become too hot. A qualified electrician must install the connections in the clamps correctly. Use a strain relief clamp on cable. Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.

· Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak your local Service Centre. The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm. You must have correct devices to isolate: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors. Assembly min. 500mm min. 50mm min. 50mm min. 5mm R 5mm = 600mm 560+1mm 490+1mm = min. 20 mm min.

25 mm min. 5 mm min. 38 mm min. 5 mm Product description If you use a protection box (the additional accessory), the front airflow space of 5 mm and protective floor directly below the appliance are not necessary. 7 PRODUCT DESCRIPTION General overview 1 2 5 3 4 1 Induction cooking zone 1800W, with Power function 2600W 2 Induction cooking zone 1800W, with Power function 2600W 3 Induction cooking zone 1800W, with Power function 2600W 4 Control panel 5 Induction cooking zone 1800W, with Power function 2600W Control panel layout 1 2 3 4 5 11 10 9 8 7 6 Use the sensor fields to operate the appliance The displays, indicators and sounds tell which function operate. sensor field 1 2 3 4 5 6 function It activates and deactivates the appliance. @@It shows the time in minutes. It activates the Power function. @@It increases or decreases the time. It selects the cooking zone.

@@The function operates. The Automatic Heat Up function operates. Power function operates. + digit // There is a malfunction. @@Lock/The Child Safety functions operates.

Not correct cookware or too small or no cookware on the cooking zone. The Automatic Switch Off function operates. @@\ The risk of burns from residual heat! OptiHeat Control shows the level of the residual heat. @@@@The sound operates some time and the appliance deactivates. Remove the object or clean the control panel.

· The appliance become too hot (e.g. when, a saucepan boils dry). Before you use the hob again, the cooking zone must be cool. · You use not correct cookware. @@@@After some time, comes on and the appliance deactivates. @@Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. @@First set the heat setting for one of the cooking zone. @@@@To deactivate the Bridge function touch / .

@@@@To start the Automatic Heat Up function for a cooking zone: 1. Touch (comes on in the display). 2. Immediately touch the necessary heat setting. After 3 seconds comes on in the display. @@The Power function is activated for 10 minutes at most. @@To activate, touch , comes on. To deacti. @@@@@@@@Set the Count Down Timer after the selection of the cooking zone.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX HK 654400 XB user guide](http://yourpdfguides.com/dref/3945260)
<http://yourpdfguides.com/dref/3945260>

You can set the heat setting before or after you set the timer.

@@@. To see the remaining time: set the cooking zone with . The indicator of the cooking zone starts to quickly. The display shows the remaining time. @@. To deactivate the timer: set the cooking zone with . Touch .

The remaining time counts back to 00 . The indicator of the cooking zone goes out. @@@@. ...

@@. ... a magnet pulls on to the bottom of the cookware. The bottom of the cookware must be as thick and flat as possible. 13 The noises during operation If you can hear · crack noise: cookware is made of different materials (Sandwich construction). · whistle sound: you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction). · humming: you use high power levels. · clicking: electric switching occurs. · hissing, buzzing: the fan operates.

The noises are normal and do not refer to appliance malfunction. Energy saving · If it is possible, always put the lids on the cookware. · Put cookware on a cooking zone before you start it. Öko Timer (Eco Timer) To save the energy, the heater of the cooking zone deactivates before the count down timer signal. The difference in the operation time is depends of the heat setting level and the time you cook. The examples of cooking applications The data in the table is for guidance only. Heat setting 1 1-3 1-3 3-5 Use to: Keep cooked foods warm Hollandaise sauce, melt: butter, chocolate, gelatine Solidify: fluffy omelettes, baked eggs Time as necessary 5-25 min 10-40 min Hints Put a lid on a cookware. Mix from time to time. Cook with a lid on. Add the minimum two times as much liquid as rice, mix milk dishes at some point of the procedure through.

@@ ¼ l water for 750 g of potatoes. Up to 3 l liquid plus ingredients. @@@@ Thus, we recommend that you cook at the lowest temperatures and do not brown food too much. CARE AND CLEANING Clean the appliance after each use. Always use cookware with clean bottom.

WARNING! The sharp objects and abrasive cleaning agents can cause damage to the appliance. For your safety, do not clean the appliance with steam cleaners or high-pressure cleaners. Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates. To remove the dirt: 1.

Remove immediately: melted plastic, plastic foil, and food with sugar.

If not, the dirt can cause damage to the appliance. Use a special scraper waste disposal facilities in your municipality. 17 18 19 www.aeg-electrolux.com/shop 892934495-A-452010 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX HK 654400 XB user guide](http://yourpdfguides.com/dref/3945260)

<http://yourpdfguides.com/dref/3945260>