



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX HK654250FB. You'll find the answers to all your questions on the AEG-ELECTROLUX HK654250FB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX HK654250FB**  
**User guide AEG-ELECTROLUX HK654250FB**  
**Operating instructions AEG-ELECTROLUX HK654250FB**  
**Instructions for use AEG-ELECTROLUX HK654250FB**  
**Instruction manual AEG-ELECTROLUX HK654250FB**

HK654250FB

EN INDUCTION HOB

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX HK654250FB user guide](http://yourpdfguides.com/dref/4060868)  
<http://yourpdfguides.com/dref/4060868>

**Manual abstract:**

We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. ACCESSORIES AND CONSUMABLES In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: [www.aeg.com/shop](http://www.aeg.com/shop) Contents 3 CONTENTS 4 5 7 9 13 14 15 16 17 Safety information Installation instructions Product description Operating instructions Helpful hints and tips Care and cleaning What to do if.

. Environment concerns ISRAEL - Customer Service The following symbols are used in this user manual: Important information concerning your personal safety and information on how to avoid damaging the appliance. General information and tips Environmental information Subject to change without notice. 4 Safety information SAFETY INFORMATION For your safety and correct operation of the appliance, read this manual carefully before the installation and use. Always keep these instructions with the appliance also if you move or sell it.

The users must fully know the operation and safety functions of the appliance. Children and vulnerable people safety WARNING! Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. · Keep all packaging away from children. There is the risk of suffocation or injury.

@@WARNING! @@ · Set the cooking zones to "off" after each use. · The risk of burns! @@They can become hot. @@WARNING! Fire risk! Too hot fats and oils can occur with ignition very quickly. Correct operation Always monitor the appliance during operation. The appliance is only for domestic use! Do not use the appliance as a work or a storage surface. Do not put or keep very flammable liquids and materials, easy fusible objects (made of plastic or aluminium) on or near the appliance. · Be careful when you connect the appliance to the near sockets. Do not let the electricity bonds touch the appliance or hot cookware. Do not let the electricity bonds to tangle. @@@@Do not use the cooking zones with empty cookware or without cookware.

Do not put the aluminium foil on the appliance. Make sure that the airflow space of 5 mm between the worktop and front of the unit below it stays opened.

WARNING! If there is a crack on the surface, disconnect power supply to prevent the electrical shock. INSTALLATION INSTRUCTIONS Before the installation, note down the serial number (Ser. Nr.) from the rating plate. The rating plate of the appliance is on its lower casing. 949 595 002 00 HK654250FB 58 GAD C8 AU 220-240 V 50-60-Hz Induction 7,4 kW 7,4 kW AEG The Safety Instructions WARNING! You must read these! · Make sure that the appliance is not damaged because of transportation. Do not connect a damaged appliance. If it is necessary, speak to the supplier.

· Only an authorized servicing technician can install, connect or repair this appliance. Use only original spare parts. · Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards. · Do not change the specifications or change this product.

Risk of injury and damage to the appliance.

· Fully obey the laws, ordinances, directives and standards in force in the country where you use the appliance (safety regulations, recycling regulations, electrical safety rules etc.)! · Keep the minimum distances to other appliances and units! @@@@from a dishwasher or oven! @@@@Risk of injury from electrical current. Carefully obey the instructions for electrical connections. @@Make electrical mains terminal free of voltage. Install correctly to give shock protection.

Loose and incorrect plug and socket connections can make the terminal become too hot. A qualified electrician must install the connections in the clamps correctly. Use a strain relief clamp on cable. Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection. · Replace the damaged mains cable with a special cable (type H05BB-F Tmax 90°C; or higher). Speak to your local Service Centre. The appliance must have the electrical installation which lets you disconnect the appliance from the mains at all poles with a contact opening width of minimum 3 mm. You must have correct devices to isolate: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors. Assembly min. 500mm min.

50mm min. 50mm min. 5mm R 5mm = 600mm 490+1mm 560+1mm = Product description 7 min. 20 mm min. 25 mm min. 5 mm min. 38 mm min. 5 mm If you use a protection box (the additional accessory I)), the front airflow space of 5 mm and protective floor directly below the appliance are not necessary. You can not use the protection box if you install the appliance above an oven. PRODUCT DESCRIPTION General overview 1 2 180 mm 170 mm 265 mm 210 mm 145 mm 3 5 4 1 Induction cooking zone 1800 W, with Power function 2800 W (minimum cookware diameter =145mm).

2 Oval induction cooking zone 2300 W, with Power function 3200 W (minimum cookware diameter =145mm). 3 Induction cooking zone 1400 W, with Power function 2500 W (minimum cookware diameter =125mm). 4 Control panel 5 Induction cooking zone 2300 W, with Power function 3700 W (minimum cookware diameter =180mm). 1) The protection box accessory may not be available in some countries. @@@@It shows the time in minutes.

It activates the Power function. It shows the heat setting. To set the heat setting. It increases or decreases the time. It selects the cooking zone.

@@The function operates. The Automatic Heat Up function operates. Power function operates. + digit // There is a malfunction. @@Lock/The Child Safety functions operates. Not correct cookware or too small or no cookware on the cooking zone. @@\ The risk of burns from residual heat! OptiHeat Control shows the level of the residual heat. @@@@The sound operates some time and the appliance deactivates. Remove the object or clean the control panel. · The appliance become too hot (e.

g. when, a saucepan boils dry). Before you use the hob again, the cooking zone must be cool. · You use not correct cookware. @@@@After some time, comes on and the appliance deactivates. @@Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. @@@@To start the Automatic Heat Up function for a cooking zone: 1.



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/4060868)

[ELECTROLUX HK654250FB user guide](http://yourpdfguides.com/dref/4060868)

<http://yourpdfguides.com/dref/4060868>

Touch ( comes on in the display). 2.

Immediately touch the necessary heat setting. After 3 seconds comes on in the display. @@The Power function is activated for 10 minutes at most. @@To activate, touch , comes on. To deacti.

@@@@@@@@@@@@Set the Count Down Timer after the selection of the cooking zone. You can set the heat setting before or after you set the timer.

@@@@@@· To see the remaining time: set the cooking zone with . @@@@Cookware is correct for an induction hob if ..

· ... @@· ... a magnet pulls on to the bottom of the cookware. The bottom of the cookware must be as thick and flat as possible. Cookware dimensions: induction cooking zones adapt to the dimension of the bottom of the cookware automatically to some limit.

The noises during operation If you can hear · crack noise: cookware is made of different materials (Sandwich construction). · whistle sound: you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction). · humming: you use high power levels. · clicking: electric switching occurs. · hissing, buzzing: the fan operates. The noises are normal and do not refer to appliance malfunction. Energy saving · If it is possible, always put the lids on the cookware. · Put cookware on a cooking zone before you start it. Öko Timer (Eco Timer) To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

The examples of cooking applications The data in the table is for guidance only. 14 Care and cleaning Heat setting 1 1-3 1-3 3-5 Use to: Keep cooked foods warm Hollandaise sauce, melt: butter, chocolate, gelatine Solidify: fluffy omelettes, baked eggs Time as necessary 5-25 min 10-40 min Hints Put a lid on a cookware. Mix from time to time. Cook with a lid on. @@Add some tablespoons of liquid.

Use max. ¼l water for 750 g of potatoes. Up to 3 l liquid plus ingredients. @@@@Thus, we recommend that you cook at the lowest temperatures and do not brown food too much. CARE AND CLEANING Clean the appliance after each use.

Always use cookware with clean bottom. WARNING! The sharp objects and abrasive cleaning agents can cause damage to the appliance. For your safety, do not clean the appliance with steam cleaners or high-pressure cleaners. Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates. What to do if... 15 To remove the dirt: 1. Remove immediately: melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance.

Use a special scraper for the glass . Put the scraper on the glass surface at an acute angle and move the blade on the surface . Remove after ce agencies overseas In these countries our respective agents' own guarantee conditions are applicable. Please obtain further details directly. Customer Service Centres Israel ELECTRICITY & ELECTRONIC SERVICES-EVIS LTD. 19 Hataasia st. Raanana, Industrial area 43654 Tel: 972-9-7448112 Fax: 972-9-7603618 e-mail: evis@evis.co.il 18 19 www.aeg.com/shop 892951905-A-412011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX HK654250FB user guide](http://yourpdfguides.com/dref/4060868)  
<http://yourpdfguides.com/dref/4060868>