



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX KS7415001M. You'll find the answers to all your questions on the AEG-ELECTROLUX KS7415001M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX KS7415001M**  
**User guide AEG-ELECTROLUX KS7415001M**  
**Operating instructions AEG-ELECTROLUX KS7415001M**  
**Instructions for use AEG-ELECTROLUX KS7415001M**  
**Instruction manual AEG-ELECTROLUX KS7415001M**

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...

Visit the webshop at:  
[www.aeg-electrolux.com/shop](http://www.aeg-electrolux.com/shop)



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX KS7415001M user guide](http://yourpdfguides.com/dref/3854725)  
<http://yourpdfguides.com/dref/3854725>

### Manual abstract:

@@ Please spend a few minutes reading to get the very best from it. @@@@ Check that the input voltage indicated on the characteristics plate is the same as the voltage of the power outlet you are going to use. The front surface of the oven may be covered in a protective film. Before using the oven for the first time, carefully remove this film, starting on the inside. Make sure that the oven is not damaged in any way. Check that the oven door closes correctly and that the interior of the door and the front of the oven opening are not damaged. If you find any damage contact our Customer Care Centre. DO NOT USE THE OVEN if the power cable or the plug is damaged, if the oven does not function correctly or if it has been damaged or dropped. The oven must not be installed close to any sources of heat, radios or televisions. During installation, make sure that the power cable does not come into contact with any moisture or objects with sharp edges and the back of the oven.

high temperatures can damage the cable. Warning: after the oven is installed you must make sure you can access the plug. The oven is equipped with a power cable and a plug for single phase (household) current, 230 - 240V ~ 50Hz, if the oven is to be installed on a permanent basis it must be installed by a qualified technician. In such a case, the oven should be connected to a circuit with an all-pole circuit breaker with a minimum separation of 3 mm between contacts. wARNING: THE OVEN MUST BE EARTHED. The manufacturer and retailers do not accept responsibility for any damage that may be caused to persons, animals or property if these installation instructions are not observed. The oven only functions when the door is closed correctly. Before the first use, clean the inside of the oven and the accessories, following the cleaning instructions given in the "Oven cleaning" section. During installation, follow the instructions supplied separately.

If you see smoke or fire, keep the door closed in order to smother the flames. @@@ Overheated fat and oil can easily catch fire. @@@ Smother the flames with a damp cloth and keep all doors and windows closed. warning! This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. warning! During use the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven. Accessible parts may become hot during use. Young children should be kept away. warning! When opening the door during or upon completion of the cooking cycle, be careful of the flow of hot air and/or steam and water drops coming out of the cooking chamber.

Make sure you never catch the power cables of other electrical appliances in the hot door or the oven. The appliance is designed for use in the home for preparing food. no liability is assumed for any damage caused by improper or incorrect use. Avoid damaging the oven or other dangerous situations by following these instructions: · Do not keep any inflammable object inside the oven as it may burn if the oven is switched on. Always wear protective gloves or use oven cloths. To avoid being burnt, always use oven gloves for handling dishes and containers and touching the oven. This may damage the oven, especially in the hinge zone. The door can bear a maximum weight of 8 kg. The Wire shelves can bear a maximum load of 8 kg. To avoid damaging the oven, do not exceed this load.

cleaning: · The appliance will remain hot for some time after it is switched off and cool down only slowly to room temperature. Please allow sufficient time for the appliance to cool down before, for instance, cleaning it. @@@@ Furthermore, special tools are required for this task. @@@@ Confirm the selection with the Confirmation key 1 . Confirm the selection with the Confirmation key 1 .

Select the Clock Symbol with the Parameter selection keys 3 . @@ To show the clock again, repeat the described procedure again. @@3 The hardness number will start to flash on the Descaler display (not necessary if your Steam oven is first plugged in or after a power failure). Press the "+" and "-" keys 4 , to set the correct water hardness parameter value, according to the below table. Confirm the selection with the confirmation key 1 .

After 1 minute compare with the gauge scale printed in the test strip packaging. The oven functioning can be blocked (for example, to stop it being used by children). To block the oven, press the Cancel key 6 for 3 seconds. You will hear a sound signal and the clock display will show the word "SAFE". The oven is blocked in this state and cannot be used. To unblock the oven, press the Cancel key 6 again for 3 seconds. You will hear a sound signal and the clock display will show the time again. Fill the water tank up to the "MAX" mark with cold, fresh drinking water and introduce it into the slot located above the cavity (approximately 1,2 Liters). If the indication "rES" appears, it means that the water tank was not properly inserted. If, however, the water tank needs to be refilled this is signalled by the message "- L0 -" and the water level light, meaning that the water tank is empty.

5 litres to ensure that the water does not overflow when it is pumped back to the water tank. To clear the message, open the door and push the water tank to the correct position until the message "rES" disappears. Emptying the water tank When the appliance is switched off, the residual water is pumped back into the water tank. While the water is being pumped the display shows "PUMP". This message stays on until the temperature of the water reaches 75°C before it can be pumped back to the water tank. After the water is pumped back to the water tank, the display will show the message "DEP" requiring the following actions: · Dry the water tank and introduce it back into the slot located above the cavity. Clean and dry the cooking space. Leave the appliance door open so that the cooking space can cool down and dry completely. IMPORTANT NOTE: It is advisable to remove the water tank and empty it after a cooking cycle.

@@@@@ Select the Steam function with the Function selection keys 5 .

Select the Temperature with Parameter selection keys 3 . @@@@ Select the Food group with Parameter selection keys 3 . @@ Use this function cook the vegetables described in the table below. @@ Select the Food group with Parameter selection keys 3 . @@@@ Cut the food in pieces as similar in size as possible.

Do not fill the food more than 3 cm high in the ovenware. Use this function cook the fish types described in the table below. Select the Cooking Fish function with the Function selection keys 5 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX KS7415001M user guide](http://yourpdfguides.com/dref/3854725)  
<http://yourpdfguides.com/dref/3854725>

Select the Food group with Parameter selection keys 3 . @@@@Cut the food in pieces as similar in size as possible.

Do not fill the food more than 3 cm high in the ovenware. Use this function cook the meat types described in the table below. Select the Cooking Meat function with the Function selection keys 5 . Select the Food group with Parameter selection keys 3 . @@@@Cut the food in pieces as similar in size as possible. Do not fill the food more than 3 cm high in the ovenware. Use this function cook the foods described in the table below. Select the Food group with Parameter selection keys 3 . @@Cut the food in pieces as similar in size as possible. Do not fill the food more than 3 cm high in the ovenware.

It can be used at any time and independently of all other functions. Select the Timer Symbol with the Function selection keys 5 . @@While the Timer is running the Timer light is on. @@@@@@It can also be cooked with two Wire shelves. @@@@@@This way the appliance is kept clean.

@@@@@@@The perforated container with the food should be inserted into the second level. The Wire shelf is used when cooking with small containers, as for example, dessert bowls and to regenerate plate dishes. for more precise information refer to the tables. The suggested times and temperatures are guideline values. The actual cooking time can vary according to the type and quality of the foods.

For ease of cleaning, the shelf guides can be removed (see the following chapter). Unscrew and remove the knurled nuts 1 in the front of the shelf guides in an anti-clockwise direction. Unscrew and loosen the knurled nuts 2 in the back of the shelf guides in an anti-clockwise direction. Do not completely remove these nuts. Pull the shelf guides to the inside of the cavity and remove from the front.

Care and Maintenance To put them back, insert the shelf guides into the knurled nuts 2 in the back and position on the screws in the front. Screw the knurled nuts 1 and 2 in a clockwise direction till tight. Close the appliance door just enough that it can be lifted out. To reassemble, push the hinges into the holes from the front. The time interval between descaling depends on the hardness of the water and frequency of use.

@@If the Descaling procedure is not performed, some cooking cycpliance still makes a noise after the cooking process is finished! This is not a problem. The cooling fan keeps on working for some time. @@@@ The oven switches on but the interior light does not go on! If all the functions work properly it is probable that the lamp has blown. You can keep on using the oven. Disconnect the oven from the power supply. Take the plug out of the socket or switch off the oven's power circuit. The bulb may be very hot. Fit a new G9 250V/25W bulb. Screw the glass light cover into place. Connect the oven again to the power supply.

Importante @@@@Indication that cold water is entering the boiler and hot water is being pumped to the water tank. @@@@@@The perforated container with the food should be inserted into the second level. The Wire shelf is used when cooking with small containers, as for example, dessert bowls and to regenerate plate dishes. for more precise information refer to the tables. 4 The suggested times and 3 temperatures are guideline values. 2 The actual cooking time can vary 1 according to the type and quality of the foods. Push oven completely into the cabinet and centre it. Insert the screws through the front holes. .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX KS7415001M user guide](http://yourpdfguides.com/dref/3854725)  
<http://yourpdfguides.com/dref/3854725>