



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L 14950 A. You'll find the answers to all your questions on the AEG-ELECTROLUX L 14950 A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L 14950 A
User guide AEG-ELECTROLUX L 14950 A
Operating instructions AEG-ELECTROLUX L 14950 A
Instructions for use AEG-ELECTROLUX L 14950 A
Instruction manual AEG-ELECTROLUX L 14950 A

L 14950 A

User manual

Washer-dryer



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

Manual abstract:

We wish you much joy with your new appliance. Contents Operating instructions Safety information General safety Installation Use Child Safety Product description Detergent dispenser drawer Control panel Display Stand by First use 3 3 3 4 4 5 5 6 6 7 8 9 Opening the door after the programme has started 14 At the end of the programme 14 Use - Drying 15 Drying only 15 Automatic washing and drying (NON-STOP programme) 16 Washing programmes 17 Drying Programmes Automatic Programmes Timed Programmes Helpful hints and tips Sorting out the laundry Before loading the laundry Removing stains Detergents and additives Quantity of detergent to be used Degrees of water hardness Drying Hints Preparing the drying cycle Laundry not suitable for drying Garment labels Drying cycle duration Additional drying Care and cleaning Descaling After each wash Maintenance wash External cleaning Detergent dispenser drawer Washing drum Door seal Drain pump Cleaning the water inlet filters Frost precautions Emergency emptying out 20 20 20 21 21 21 21 22 22 22 22 23 23 23 23 24 24 24 24 24 25 25 25 27 28 28 Personalization 9 Acoustic signals 9 Child safety lock 9 Daily use 10 Load the laundry 10 Washing Only 10 Measure out the detergent and the fabric softener 10 Select the required programme by turning the programme selector dial (1) 11 Select the spin speed, NIGHT CYCLE or RINSE HOLD option (button 2) 11 Programme option buttons 11 PREWASH option 12 STAIN option 12 SENSITIVE option 12 DAILY option 12 SUPER QUICK option 13 EXTRA RINSE option (additional rinse) 13 Select the START/PAUSE (button 7) 13 Select the DELAY START (button 8) 13 Altering an option or a running programme 14 Interrupting a programme 14 Cancelling a programme 14 Safety information What to do if... Technical data Consumption values Installation instructions Installation Unpacking Positioning and levelling 28 32 32 33 33 33 35 Water inlet Water-stop device Water drainage Electrical connection Environment concerns Packaging materials Ecological hints 3 36 37 37 38 38 39 39 Subject to change without notice Operating instructions Safety information Read carefully & keep for future reference. · The safety of Your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes. @@@@Never connect up a damaged appliance. If parts are damaged, contact your supplier. If the appliance is delivered in the winter months when there are minus temperatures.

Store it at room temperature for 24 hours before using for the first time. General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · During high temperature wash programmes the door glass may get hot. Do not touch it! · Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.

· Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. · Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.

· Do not use your washing machine to wash articles with whalebones, material without hems or torn material. 132 957 780 - 00 - 282009 4 Safety information · Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.

· All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · Always be sure, that there is no water leakage from hoses and their connections after the installation. · If the appliance is installed in a location subject to frost, please read the "dangers of freezing" chapter. · Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Use · This appliance is designed for domestic use.

It must not be used for purposes other than those for which it was designed. · Only wash and dry fabrics which are designed to be machine washed or dried. Follow the instructions on each garment label · Do not overload the appliance. See the Washing Programme Table. · Before washing, ensure that all pockets are empty and buttons and zips are fastened.

Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. · Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.

· The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. · Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing. Product description 5 · Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-todry you should use the conventional detergent dispenser drawer. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

· Never use your new appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the appliance is accessible. Child Safety · This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · The packaging components (e.

g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Make sure that children or pets do not climb into the drum. To prevent children or pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical. Product description Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The NEW JET system allows total use of detergent and reduces water consumption so saving energy.

6 Control panel 2 1 3 4 6 5 1 2 3 4 5 6 Detergent dispenser drawer Control panel Door opening handle Rating plate Drain pump Adjustable feet Detergent dispenser drawer Compartment for prewash phase or stain remover. The prewash detergent is added at the beginning of the wash programme. The stain remover is added during the STAIN-Action phase in the main wash. Compartment for powder or liquid detergent used for main wash . Compartment for liquid additives (fabric softener, starch).

Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme. Control panel Below is a picture of the control panel. It shows the programme selector dial as well as the buttons and the display. These are presented by relevant numbers on the following pages.

7 9 1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8 9 Programme selector dial SPIN reduction button AUTODRY button DRYING TIME button OPTION button OK button START/PAUSE button DELAY START button Display 9.1 9.2 9.3 9.4 9.9 9.8 9.5 9.6 9.7 Display 9.

1 - Spin Speed indicator, RINSE HOLD , NIGHT CYCLE - symbols , CUPBOARD 9.2 - Drying degree indicator, allowed by the set programme: IRON DRY DRY and EXTRA DRY - symbols, selectable by pressing the button 3 ; indicator AUTO, connected to the drying programme and to button 4 . , SPIN 9.3 - Programme progress indicator: PREWASH , MAIN WASH , RINSE , OVERDOSAGE , EXTRA RINSE , DRYING , DRYING ANTI-CREASE phase symbols, The programme progress display shows the washing or drying phases of the selected programme. During a cycle, a black line blinks under the phase symbol of the running programme. At the end of each phase, the line under the corresponding symbol becomes fixed. 8 If the OVERDOSAGE symbol lights up at the end of the programme, it indicates that too much detergent has been used. 9.4 - DOOR - symbol (Door locked) · This symbol indicates if the door can be opened: the symbol is on: the door cannot be opened. The appliance is performing a washing or drying programme.

the symbol is blinking (in displays where it is set) : the door is opening in a few minutes. the symbol is off: the door can be opened. The washing programme or drying is finished. , STAIN , SENSITIVE , DAILY , SUPER QUICK 9.5 - Options: PREWASH symbols 9.

6 - CHILD SAFETY LOCK - symbol 9.7 - The display shows the following information: · Duration of the selected programme After selecting a programme, the duration is displayed in hours and minutes (for example). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. @@ - Delay start The selected delay (20 hours max) set by pressing the relevant button appears on the), then the duration of the previously selected display for a few seconds (for example programme is displayed. The DELAY START symbol will appear on the display.

The delay time value decreases by one unit every hour and then, when 1 hour remains, the time decreases every minute. · Selected drying time After selecting a drying programme, the drying time is displayed in minutes and/or hours (max 250 min the type of laundry. By selecting a programme, the programme progress indicator symbols and the symbol corresponding to the drying degree allowed by the set programme appear on the display. The pilot light of button 7 starts blinking and the display shows the duration of the selected programme. The selector dial can be turned either clockwise or anticlockwise. to Reset programme/ Switching Position corresponds to a cold wash, the position OFF of the man the display. This option cannot be selected together with Extra Rinse option. This option is recommended for non fast coloured items and for frequently washed items. DAILY option By selecting this option, you will be able to modify the washing duration to wash daily soiled laundry. The display will show the corresponding symbol and the reduced washing time.

To be used for daily soiled laundry. Daily use 13 SUPER QUICK option By selecting this option, it will be possible to reduce the washing duration to wash lightly soiled laundry. The display will show the corresponding symbol and the reduced washing time. To be used for very lightly soiled laundry only. We recommend that you reduce the laundry load. EXTRA RINSE option (additional rinse) This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water (extra rinse). The relevant symbol will appear on the display and this option is active for selected washing programme. If you wish to activate this option permanently press simultaneously buttons 2 and 3 for a few seconds: the relevant symbol appears on the display. If you wish to cancel it press the same buttons until the symbol disappears.

Select the START/PAUSE (button 7) To start the selected programme, press the button 7 , the corresponding red pilot light stops blinking. The DOOR symbol appears on the display to indicate that the appliance has started operating and the door is locked. To interrupt a programme which is running, press the button 7 : the corresponding red pilot light starts blinking. To restart the programme from the point at which it was interrupted, press the button 7 again. If you have chosen a delayed start the machine will begin the countdown.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)

<http://yourpdfguides.com/dref/2634516>

If an incorrect option is selected, the yellow pilot light of the button 7 blinks 3 times and the message Err is displayed for a few seconds. Select the DELAY START (button 8) The corresponding symbol will appear on the display. The wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button. Before you start the programme, if you wish to delay the start, press this button repeatedly, to select the desired delay. The delay time value will appear on the display for about 3 seconds, then the duration of the programme will appear again.

The selected symbol appears on the display. You must select this option after you have set the programme and before you press the button 7. You can modify or cancel the delay time at any moment, before you press the button 7. The door will be locked throughout the delay time. If you wish to add laundry in the machine during the delay time, press the button 7 to set the machine to pause. When the Door symbol disappears, the door can be opened. Add the laundry, close the door and press the button 7 again. Selecting the delayed start. · Select the programme and the required options. · Select the delay start.

· Press button 7 : the appliance starts its hourly countdown. The programme will start after the selected delay has expired. 14 Daily use Cancelling the delayed start · Set the washing machine to PAUSE by pressing the button 7 ; · Press button 8 until the symbol ' is displayed; · Press the button 7 again to start the programme. The selected delay can be changed only after selecting the washing programme again. The Delay Start can not be selected with the draining programme. Altering an option or a running programme It is possible to change some options before the programme carries it out. Before you make any change, you must pause the washing machine by pressing the button 7. Changing a running programme is possible only by resetting it. Turn the programme and then to the new programme position. Start the new programme by selector dial to pressing the 7 button again.

The washing water in the tub will not emptied out. Interrupting a programme Press the button 7 to interrupt a programme which is running, the corresponding light starts blinking. Press the button again to restart the programme. Cancelling a programme Turn the selector dial to a new programme. to cancel a programme which is running.

Now you can select Opening the door after the programme has started When the machine is working and through the delay time, the door is locked. If, for any reason, it is necessary to open it, set firstly the machine to pause by pressing the button 7. · If the DOOR symbol disappears from the display, the door can be opened. · If the DOOR symbol stays on, and the door remains locked, this means that the machine is already heating or that the water level is too high. In this case the door can not be opened.

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to . After a few minutes the door can be opened (pay attention to the water level and temperature !). After closing the door, it is necessary to select the programme and options again and to press button 7. At the end of the programme The machine stops automatically. The pilot light of button 7 goes off and a blinking appears on the display. The acoustic signal sounds for a few minutes. If you have chosen a programme or an option that ends with water left in the tub, follow the below instruction to empty the water out: · turn the programme selector dial to · select the draining or spinning programme · reduce the spin speed if needed, by pressing the relevant button · press the button 7 Use - Drying 15 · when the programme has finished the display shows a blinking . On the display the DOOR symbol disappears. The door can now be opened. to switch the machine off.

Remove the laundry Turn the programme selector dial to from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. Use - Drying Drying only The recommended load size is 4 kg for cottons and linen, and 3 kg for synthetic items. By pressing Drying Time button it is also possible to dry up to 6 kg of cotton items (see the «Drying Programme » table). The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe. 1. Load the laundry. 2. Select a spin cycle at the maximum spin speed allowed for the type of laundry in order to obtain the best drying performances. 3. Select the drying programme for Cottons or Synthetic in the Drying sector of the programme selector dial. The DRYING and the ANTI-CREASE symbols corresponding to the phases making up the programme appear on the display. At the same time, the symbols corresponding to the level degrees allowed by the set programme/fabric and «AUTO» lights up. 4.

Select the automatic drying by pressing the button 3. With this button you can select the degree of dryness by an electronic drying. The machine adapts automatically the duration of the drying cycle to the selected degree of dryness. If you press this button, a black dash appears under the selected symbol to indicate that a degree has been set. The message «AUTO» disappears.

The display shows the duration of the drying cycle. The pilot light of button 7 starts blinking. Press then button 7 to start the programme. A black dash flashes under the DRYING symbol. Select the timed drying by pressing the button 4 With this button is possible to select the duration of the drying cycle from 10 to 250 minutes according to the type of fabric (cotton or synthetic). Press this button, until the time you want appears on the display. @@@@Press then button 7 to start the programme. A black dash flashes under the DRYING symbol. Note! The programme time will automatically increase by a few minutes. 5.

Press button 7 to start the programme. @@@@6. At the end of the drying programme, the buzzer sounds. A blinking « 0 » appears on the display. @@During this time the ANTI-CREASE symbol appears on the display. The DOOR symbol remains lit. The door cannot be opened. @@(In any case do not try to open the door if it is locked!) · 7. Turn the selector dial to the O position to switch the machine off.

8. @@@@CAUTION! @@1. Load the laundry. 2. Add detergent and fabric softener.

3. @@4. Select the required options by pressing the relevant buttons. @@@@The lowest values you can select are the following: 900 r.p.m. for cottons and synthetic with electronic drying; 900 r.p.m. for cottons and 700 r.p.m. for fabrics with timed drying. 5. @@@@6.

Start the programme by pressing button 7. @@7. @@8. @@@@load 1,5 kg Synthetic fabrics to be gentle washed and spun.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

@@In this way ironing is easier. Furthermore the machine will perform additional rinses. @@@@Note : A single or bulky item may cause imbalance. @@SILK 30° Main wash - Rinses - Short spin at 1200 rpm Max. @@DELICATE RINSES Rinses - Short spin at 1200 rpm Max. @@The machine performs some rinses, followed by a final spin.

DRAIN Draining of water Max. @@load 8 kg Separate spin for hand washed cotton garments and after programmes with the option selected, which ends with water left in the tub. Before selecting this . programme the selector dial must be turned to You can choose the spin speed by pressing the relevant button to adapt it to the fabrics to be spun. 20 MIN.

- 3 KG 30° Main wash - Rinses - Short spin at 1200 rpm Max. load 3 kg This programme may be used for a quick washing of sport items or cotton and synthetic items , lightly soiled or worn once. **QUICK INTENSIVE** 60° - 40° Main wash - Rinses - Short spin at 1200 rpm Max. load 5 kg Quick washing programme, to be used for lightly soiled white/fast coloured cottons and mixed fabrics. **ECONOMY** 60° Main wash - Rinses - Long spin at the maximum spin speed Max.

load 8 kg White and fast coloured cotton . This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy. = OFF For cancelling the programme which is running or to switch the machine off . 19 Options **SPIN REDUCTION** Detergent Compartment **SPIN REDUCTION** **SPIN REDUCTION** **RINSE HOLD** **EXTRA RINSE** **SPIN REDUCTION** **NIGHT CYCLE** **RINSE HOLD** **PREWASH2**) **STAIN SENSITIVE** **EXTRA RINSE** 1) If you select the Super Quick option by pressing button 5 , we recommend that you reduce the maximum load as indicated. Full loading is possible however with somewhat reduced cleaning results. 2) @@3) Stain option can be selected only at the temperature of 40°C or higher. 20 Drying Programmes Drying Programmes Automatic Programmes Degree of Drying **EXTRA DRY** Suitable for items to put away without ironing **CUPBOARD DRY** Suitable for items to put away without ironing Type of Fabric Cotton and linen (bathrobes, bath towels, etc) Cotton and linen (bathrobes, bath towels, etc) Max Load 4 kg 4 kg **CUPBOARD DRY** Synthetics and mixed fab Suitable for items to put away without iron- rics (jumpers, blouses, undering wear, household linen) **IRON DRY** Suitable for ironing Cotton and linen (sheets, tablecloths, shirts, etc.) 3 kg 4 kg Timed Programmes Degree of Drying **EXTRA DRY** Suitable for items to put away without ironing **CUPBOARD DRY** Suitable for items to put away without ironing **CUPBOARD DRY** Suitable for items to put away without ironing Type of Fabric Cotton and linen (bathrobes, bath towels, etc) Cotton and linen (bathrobes, bath towels, etc) Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) Cotton and linen (sheets, tablecloths, shirts, etc.

) Drying Load 6 kg 4 kg 2 kg 6 kg 4 kg 2 kg 3 kg 1 kg 6 kg 4 kg 2 kg Spin Speed Suggested drying time in Minutes 200-220 125-135 75-85 190-210 115-125 65-75 105-115 40-50 160-180 95-105 55-65 1400 1400 1200 **IRON DRY** Suitable for ironing 1400 In compliance with EC directive EN 50229 the cotton reference programme for the data entered in the Energy Label must be tested dividing the maximum washing load by two equal parts and drying with **DRYING TIME** each of them. Helpful hints and tips 21 Helpful hints and tips Sorting out the laundry Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens. Before loading the laundry Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash. New coloured items may run in the first wash; they should therefore be washed separately the first time. Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net. Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water.

For dried stains, soak overnight in water with a special detergent then rub in the soap and water. Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times. Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth. Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

Mould stains: treat with bleach, rinse well (whites and fast coloureds only). Grass: soap lightly and treat with bleach (whites and fast coloureds only).

@@@@Treat any residual marks with bleach. @@Treat any residual marks with bleach. @@@@ Follow the product manufacturers' instructions on quantities to use. Use less detergent if: · you are washing a small load · the laundry is lightly soiled · large amounts of foam form during washing. Degrees of water hardness Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you to add a water softener following always the manufacturer's instructions. When the degree of hardness is soft, readjust the quantity of the detergent.

Drying Hints Preparing the drying cycle As a dryer, the appliance works on the condensation principle. Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle. Attention! Before starting the drying programme, reduce the loads of washed laundry, in order to obtain good performances. Laundry not suitable for drying · Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bed covers, quilts, sleeping bags and duvets must not be machine dried. Care and cleaning 23 · Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff. · Remove the laundry when the appliance has finished drying. · To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers. · Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

· Also, fabrics containing residue of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours. @@@@ Your appliance incorporates a re-circulation system which allows an optimal use of the concentrated detergent.

Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Garment labels For drying, follow the indications given on the manufacturer's labels: = May be tumble dried · = Drying at high temperature · = Drying at reduced temperature · = Do not tumble dry. · Drying cycle duration The drying time may vary depending on: · speed of the final spin · dryness degree required (iron dry, store dry) · type of laundry · weight of the load size. The average drying time for a timed drying are indicated in the «Drying programmes» chapter. The experience will help you to dry your laundry in a more suitable way, according to the different fabrics.

Take note of the duration drying time of the already performed cycles. Additional drying If the laundry is still damp at the end of the drying programme, select a short drying cycle again. **WARNING!** Do not over dry the laundry in order to avoid creasing of fabrics or garment's shrinking. Care and cleaning You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. 24 Care and cleaning Descaling The water we use normally contains lime.

It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: · The drum should be empty of laundry. · Select the hottest cotton wash programme.

· Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Do not use methylated spirits, solvents or similar products to clean the cabinet. Detergent dispenser drawer The detergent dispenser drawer should be cleaned regularly. 1. Remove the detergent dispenser drawer by pulling it firmly. 2. Remove the conditioner insert from the middle compartment. 3. Clean all parts with water.

4. Put the conditioner insert in as far as it will go, so that it is firmly in place. 5. Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush. 6.

Insert the detergent dispenser drawer in the guide rails and push it in. Care and cleaning 25 Washing drum Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron. Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool. 1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.

2. Run a washing cycle without any washing to clean off any cleaning agent residues. Programme: Short Cotton Programme at maximum temperature and add approx. 1/4 measuring cup of detergent. Door seal Check from time to time the door seal and eliminate eventual possible objects that could be trapped in the fold. Drain pump The pump should be inspected regularly and particularly if: · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: 1. Disconnect the appliance. 2.

If necessary wait until the water has cooled down. 3. Open the pump door. 4. 5. Place a container close to the pump to collect any spillage. Release the emergency emptying hose, place it in the container and remove its cap cover. 26 Care and cleaning 6. When no more water comes out, unscrew the pump and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump.

7. Remove any objects from the pump impeller by rotating it. 8. Put the cap back on the emergency emptying hose and place the latter back in its seat. 9. Screw the pump fully in. 10. Close the pump door. **WARNING!** Care and cleaning 27 When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty.

When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filters If the appliance doesn't fill, takes long to fill water, the starting button blinks yellow or the display (if available) shows the relevant alarm (see chapter "What to do if..." for more details), check if the water inlet filters are blocked. To clean the water inlet filters: 1. Turn off the water tap. 2. Unscrew the hose from the tap. 3.

Clean the filter in the hose with a stiff brush. 4. Screw the hose back onto the tap. Make sure the connection is tight. 5. Unscrew the hose from the machine. Keep a rag nearby because some water may flow. 6. Clean the filter in the valve with a stiff brush or with the piece of cloth. 28 What to do if.

.. 7. Screw the hose back to the machine and make sure the connection is tight. 8.

Turn on the water tap. Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: 1. close the water tap and unscrew the water inlet hose from the tap; 2. place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out; 3. screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.

By doing this, any water remaining in the machine is removed, avoiding ice forming and consequently damage to the appliance. When you use the machine again, make sure that the ambient temperature is above 0°C. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: 1. pull out the plug from the power socket; 2. close the water tap; 3. if necessary, wait until the water has cooled down; 4. open the pump door; 5. place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl.

When the bowl is full, put the cap back on the hose.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

Empty the bowl. Repeat the procedure until water stops flowing out; 6. clean the pump if necessary as previously described; 7. replace the emergency emptying hose in its seat after having plugged it; 8. screw the pump again and close the door. What to do if... Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer.

Before contacting your local Service Centre, please carry out the checks listed below. What to do if... 29 During machine operation it is possible that the yellow pilot light of button 7 blinks, one of the following alarm codes appears on the display and at the same time some acoustic signals sound every 20 seconds to indicate that the machine is not working: · problem with the water supply · problem with the water draining · door open · anti-flooding system has activated · Once the problem has been eliminated, press the button 7 to restart the programme.

If after all checks, the problem persists, contact your local Service Centre. Problem Possible cause/Solution The door has not been closed. · Close the door firmly. The plug is not properly inserted in the power socket. · Insert the plug into the power socket.

There is no power at the socket. · Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse. The selector dial is not correctly positioned and the button 7 has not been pressed. · Please turn the selector dial and press the button 7 again. The delay start has been selected. · If the laundry is to be washed immediately, cancel the delay start. The Child safety lock has been activated. · Deactivate this device.

The water tap is closed. · Open the water tap. The inlet hose is squashed or kinked. · Check the inlet hose connection. The filter in the inlet hose or the inlet valve filter are blocked. · Clean the water inlet filters. (See "Cleaning the water inlet filters" for more details) The door is not properly closed. · Close the door firmly. The washing machine does not start: The machine does not fill: The end of the drain hose is too low. The machine fills then empties immediately: · Refer to relevant paragraph in «Water drainage» section.

30 What to do if... Problem Possible cause/Solution The drain hose is squashed or kinked. · Check the drain hose connection.

The drain filter is clogged. · Clean the drain filter. An option or a programme that ends with the The machine does not empty and/or does not water still in the tub or a that eliminates all the spin: spinning phases has been selected. · Select the draining or the spinning programme. The laundry is not evenly distributed in the drum.

· Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The drain or the inlet hose is damaged. · Replace it with a new one. The cap on the filter has not been replaced or the filter has not been properly screwed in after cleaning action. · Refit the cap on the filter or screw the filter fully in.

Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load. · Reduce the laundry load. The programme is still running. · Wait the end of washing cycle.

The door lock has not been released. · Wait until the symbol 7.5 has gone off. There is water in the drum. · Select drain or spin programme to empty out the water.

There is water on the floor: Unsatisfactory washing results: The door will not open: What to do if... Problem Possible cause/Solution 31 The machine vibrates or is noisy: The transit bolts and packing have not been removed. · Check the correct installation of the appliance.

The support feet have not been adjusted · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum. · Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears. Spinning starts late or the machine does not pears and normal spinning can resume. If, after some minutes, the laundry is still not evenly spin: distributed in the drum, the machine will not spin. · The laundry load is perhaps too little, add more items, redistribute the load manually and then select the spinning programme.

The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. · Anti-flooding system has activated. · Disconnect the appliance and contact the Service Force Centre The machine makes an unusual noise: No water is visible in the drum: The display shows the alarm code 32 Technical data If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. Technical data Dimensions Width Height Depth 60 cm 82 cm 63 cm Electrical connection Voltage - Overall power - Fuse Water Supply Pressure Maximum Load Maximum Dry Load Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door. Minimum Maximum Cotton Cotton Cotton Big Capacity Synthetic Maximum 0,05 MPa 0,8 MPa 8 kg 4 Kg 6 Kg 3 Kg 1400 rpm Spin Speed Consumption values Programme White Cottons 95° Cottons 60° Cotton Energy Saving Programme 60° 1) Cottons 40° Synthetics 40°

Delicates 40° Energy consumption (KWh) 2.5 1.7 1.

2 0.97 0.55 0.53 Water consumption (litres) 62 63 57 62 51 67.7 For the duration of the programmes, please refer to the display on the control panel.

Programme duration (Minutes) Installation Programme Wool/ Handwash 30° Energy consumption (KWh) 0.32 Water consumption (litres) 64 33 Programme duration (Minutes) 1) «Cotton Energy Saving programme » at 60°C with a load of 8 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. Installation instructions Installation Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

1. After removing all the packaging, carefully lay machine on its back to remove the polystyrene base from the bottom. 34 Installation 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 3. Unscrew and remove the central rear bolt A with the supplied spanner. A 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C . Remove the bracket D . C D C B B Installation 5.

Tighten up the six smaller bolts C . Slide out the relevant plastic spacer E . 35 E C C 6. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. 7. Connect the water inlet hose as described under the paragraph «Water inlet». @@@@Before placing it on small tiles, apply a rubber coating. @@@@The machine must not be installed in rooms where the temperature can drop below 0°C. The water inlet hose and the drain hose must not be kinked. Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown.

Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. 36 Installation Water inlet An inlet hose is supplied and can be found inside the machine drum. This appliance must be connected to a cold water supply. Do not use the hose from your previous machine to connect to the water supply.

1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. @@@Set the hose correctly by loosening the ring nut. @@@4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. @@@@Check the minimum water pressure required for safe operation of the appliance in the chapter "Technical Data". Installation 37 Water-stop device The inlet hose is provided with a water stop device, which protects against damage caused by water leaks in the hose which could develop due to natural ageing of the hose. This fault is shown by a red sector in the window «A» . Should this occur, turn the water tap off and refer to your Service Centre to replace the hose. Water drainage The end of the drain hose can be positioned in three ways: 1.

Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. 2. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. 3. Directly into a drain pipe at a height of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be ventilated, i.e.

the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked. 38 Electrical connection The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre. Electrical connection Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use. WARNING! Connect the machine to an earthed socket. WARNING! The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution. WARNING! The power supply cable must be easily accessible after installing the machine. WARNING! Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.

Environment concerns The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. 39 Packaging materials The materials marked with the symbol are recyclable. >PE<=polyethylene >PS<=polystyrene

>PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. · Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

132 957 780 - 00 - 282009 www.electrolux.com .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 14950 A user guide](http://yourpdfguides.com/dref/2634516)
<http://yourpdfguides.com/dref/2634516>