



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L 60460 FL. You'll find the answers to all your questions on the AEG-ELECTROLUX L 60460 FL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX L 60460 FL**  
**User guide AEG-ELECTROLUX L 60460 FL**  
**Operating instructions AEG-ELECTROLUX L 60460 FL**  
**Instructions for use AEG-ELECTROLUX L 60460 FL**  
**Instruction manual AEG-ELECTROLUX L 60460 FL**

L 60460 FL  
L 60468 FL  
L 60660 FL

WASHING MACHINE

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 60460 FL user guide](http://yourpdfguides.com/dref/3945259)  
<http://yourpdfguides.com/dref/3945259>

**Manual abstract:**

@@@@@Please spend a few minutes reading to get the very best from it. **ACCESSORIES AND CONSUMABLES** In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: [www.aeg.com/shop](http://www.aeg.com/shop) **VISIT OUR WEBSITE FOR:** - Products - Brochures - User manuals - Trouble shooter - Service information [www.aeg.com](http://www.aeg.com) **4 SAFETY INFORMATION** Before the installation and use, read this manual carefully: · For your safety and the safety of your property · To help the environment · For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or give it to a different person. The manufacturer is not responsible if an incorrect installation and use causes damage. products in, near or on the appliance. Risk of explosion or fire. @@@@Hard and sharp material can cause damage to the appliance.

@@@They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. · Keep all packaging away from children. There is the risk of suffocation or injury. · Keep all detergents away from children. · Keep children and pets away from the appliance when the door is open.

· Before you close the appliance door, make sure that children and pets are not into the drum. · If the appliance has a child safety device, we recommend to activate it. **CARE AND CLEANING** · Deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes water leakages. **INSTALLATION** · The appliance is heavy, be careful when you move it. · Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions. · Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts.

· Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury. · Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is **GENERAL SAFETY** · Do not use the appliance for professional use. The appliance is only for domestic use. · Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance. · Do not put flammable products or items that are wet with flammable **ENGLISH** 5 air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet.

**Water connection** · Do not connect the appliance with old hoses already used. Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose.

· The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages. · Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. **DISCARD THE APPLIANCE** 1. Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it. 3.

Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances). **Electrical connection** · Make sure that the appliance is earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. **6 ENVIRONMENT CONCERNS PACKAGING MATERIALS** Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. on the product or on its The symbol packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. **ECOLOGICAL HINTS** To help the environment, use less water and energy, obey these instructions: · Set a programme without the prewash phase to wash laundry with normal soil. · Always start a washing programme with the maximum load of laundry. · If necessary, use a stain remover when you set a programme with a low temperature.

· To use the correct quantity of the detergent, check the water hardness of your domestic system **TECHNICAL INFORMATION** Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 522 mm 540 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 6 kg 1400 rpm (L 60460 FL) 1400 rpm (L 60468 FL) 1600 rpm (L 60660 FL) 1) Connect the water inlet hose to a water tap with a 3/4" thread.

**ENGLISH** 7 **PRODUCT DESCRIPTION** 1 2 3 8 9 10 4 5 6 7 11 12 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Rating plate 6 Drain pump 7 Feet for the appliance level 8 Water drain hose 9 Water inlet valve 10 Mains cable 11 Transit bolts 12 Feet for the appliance level **ACCESSORIES** 1 2 4 3 1 Spanner To remove the transit bolts. 2 Plastic caps To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink.



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/3945259)

[ELECTROLUX L 60460 FL user guide](http://yourpdfguides.com/dref/3945259)

<http://yourpdfguides.com/dref/3945259>

8 CONTROL PANEL 1 2 3 9 8 7 6 5 4 1 On/Off button (Aan/Uit) 2 Programme knob 3 Display 4 Start/Pause button (Start/Pauze) 5 Delay start button (Startuistel) 6 Time saving button (Tijd Besparen) 7 Extra rinse button (Extra Spoelen) 8 Spin button (TPM) 9 Temperature button (Temp. °C) ON OFF BUTTON 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated. The AUTO Stand-by function automatically deactivates the appliance to decrease the energy consumption when: · You do not use the appliance for 5 minutes before you press button 4. All settings are cancelled. Press button 1 to activate the appliance again. Set again the washing programme and all possible options. · After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'. PROGRAMME KNOB 2 Turn this knob to set a programme. DISPLAY 3 A B C ENGLISH 9 The display shows: A · The programme time When the programme starts, the time decreases with steps of 1 minute.

· The delay start When you press the delay start button, the display shows the delay start time. · Alarm codes If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter. · Err The display shows this message for some seconds if: You set a function that is not applicable for the programme. You change the programme while it operates. The indicator of the Start/Pause button 4 flashes. · When the programme is completed. B Door lock You cannot open the appliance door when the symbol is on. You can open the door only when the symbol goes off. If the programme is completed but the symbol stays on: · There is water in the drum.

· The 'Rinse Hold' function is on. C The child lock symbol The symbol comes on when you activate this device. START/PAUSE BUTTON 4 Press button 4 to start or interrupt a programme. EXTRA RINSE BUTTON 7 Press button 7 to add rinsing phases to a programme. Use this function for persons allergic to detergents and in areas where the water is soft.

DELAY START BUTTON 5 Press button 5 to delay the start of a programme from 30 minutes to 20 hours. SPIN BUTTON 8 Press this button to: · Decrease the maximum speed of the spin phase of the programme. · Activate the 'Rinse Hold' function. Set this function to prevent fabric creases. The appliance does not drain the water when the programme is completed.

'Rinse Hold' function is on. TIME SAVE BUTTON 6 Press the button 6 to decrease the programme duration. @@@@ @@@@ · You deactivate the appliance. · You press the buttons. · The programme is completed. · The appliance has a malfunction. @@@@ @@@@ @@@@ @@@@ They are suitable to clean normally soiled cotton laundry and they are the most efficient programmes in terms of combined energy and water consumption for washing that type of cotton laundry. They agree with EN60456. The actual water temperature may differ from the declared cycle temperature. 14 BEFORE FIRST USE 1.

To activate the drain system, put 2 litre of water in the main wash compartment of the detergent dispenser. 2. Put a small quantity of detergent in the main wash compartment of the detergent dispenser. Set and start a programme for cotton at the highest temperature without laundry. This removes all possible dirt from the drum and the tub. USING THE APPLIANCE 1. Open the water tap. 2. Connect the mains plug to the mains socket. 3. Press button 1 to activate the appliance. 4. Put the laundry in the appliance. 5. Use the correct quantity of detergent and additives.

6. Set and start the correct programme for the ts and unfold the items. @@ · Remove hard stains. · Wash with a special detergent heavy soil stains. · Be careful with the curtains.

Remove the hooks or put the curtains in a washing bag or pillowcase. @@ Use a washing bag to wash small items. @@@@ · Do not mix different types of detergents. @@ · Obey the instructions that you find on the on packaging of these products. · Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. · If you use liquid detergents, do not set the prewash phase. · If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. WATER HARDNESS If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener. To know the water hardness in your area, contact your local water authority.

Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness: · German degrees (°dH). · French degrees (°TH). · mmol/l (millimol for each litre - international unit for the hardness of water). · Clarke degrees. STUBBORN STAINS For some stains, water and detergent is not sufficient. We recommend that you remove these stains before you put the items in the appliance. Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric. 20 Water hardness table Level 1 2 3 4 Type soft medium hard very hard Water hardness °dH 0-7 8-14 15-21 > 21 °T.

H. 0-15 16-25 26-37 > 37 mmol/l 0-1.5 1.6-2.5 2.

6-3.7 >3.7 Clarke 0-9 10-16 17-25 >25 ENGLISH 21 CARE AND CLEANING WARNING! Disconnect the appliance from the mains supply before you clean it. CAUTION! Do not use alcohol, solvents or chemical products. MAINTENANCE WASH With the low temperature programmes it is possible that some detergent stays in the drum.

Make regularly a maintenance wash. To do this: · Empty the laundry from the drum. · Set the hottest cotton wash programme · Use a correct quantity of powder detergent with biological properties. After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out.

DESCALING The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales. Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer. Do this separately from the laundry wash. EXTERNAL

CLEANING Clean the appliance only with soap and warm water.

@@@ Only use special products to remove rust particles from the drum. @@@@ Press the lever. 2. Pull the dispenser out. 3. 4. Remove the top part of the liquid additive compartment. Clean all the parts with water. 5. 6.

Clean the dispenser recess with a brush. @@ Clean the pump if: · The appliance does not drain the water. · The drum cannot turn. @@@@ 1. Disconnect the mains plug from the mains socket.

2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot.



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/3945259)

[ELECTROLUX L 60460 FL user guide](http://yourpdfguides.com/dref/3945259)

<http://yourpdfguides.com/dref/3945259>

@@@@@@@@@Pull back the drainage duct and turn the filter to remove it. 5.

2 1 6. Remove fluff and objects from the pump. 7. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre. 24 8. 1 2  
9. Clean the filter under the water tap and put it back in the pump into the special guides. Make sure that you tighten correctly the filter to prevent leakages.  
11.

Close the drain pump door. THE INLET HOSE FILTER AND THE VALVE FILTER It could be necessary to clean the filters when: · The appliance does not fill with water. · The appliance fills with the water for a long time. To clean the water inlet filters: · The indicator of button 4 flashes and the display shows the related alarm. Refer to 'Troubleshooting'. WARNING! Disconnect the mains plug from the mains socket. 1. Close the water tap. 2. Remove the water inlet hose from the water tap.

3. Clean the filter in the inlet hose with a stiff brush. 4. 5. Remove the inlet hose behind the appliance.

Clean the filter in the valve with a stiff brush or a towel. ENGLISH 25 6. 7. 45° Install again the inlet hose. Make sure that the couplings are tight to prevent leakages.

Open the water tap. 35° EMERGENCY DRAIN Because of a malfunction, the appliance cannot drain the water. If this occurs, do steps (1) through (6) of 'To clean the drain pump'. If necessary, clean the pump. Put the drainage duct back and close the drain pump flap. When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. 0 °C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3. Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Refer to the emergency drain procedure 6.

When the drain pump is empty, install the inlet hose again. WARNING! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. FROST PRECAUTIONS If the appliance is installed in an area where the temperature can be less than 26 TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table).

If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: · - The appliance does not fill with water. Problem The appliance does not fill with water. Possible cause The water tap is closed. - The appliance does not drain the water.

· - The appliance door is open or not closed correctly. WARNING! Deactivate the appliance before you do the checks. · Possible solution Open the water tap. The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked . and cleaning'. The water tap is blocked or is furred with limescale. The connection of the water inlet hose is not correct.

Clean the water tap. Make sure that the connection is correct. The water pressure is too Contact your local water authorilow. ty. The appliance does not drain the water. The water drain hose is damaged. The filter of the drain pump is blocked. The connection of the water drain hose is not correct. A washing programme without the drain phase is set. The function Rinse & Hold is on.

The appliance door is open or not closed correctly. Make sure that the water drain hose has no damages. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct.

Set the drain programme. Set the drain programme. @@The filter of the drain pump is blocked. @@Clean the filter of the drain pump. Refer to 'Care and cleaning'.

Adjust manually the items in the tub and start the spin phase again. @@@@4. The delay start is set. The Child Lock function is activated. There is water on the floor. Leakages from the couplings of the water hoses. Leakages from the drain pump. The water drain hose is damaged. You cannot open the appliance door. To start immediately the programme, cancel the delay start.

Deactivate the Child Lock function. Make sure that the couplings are tight. Make sure that the drain pump filter is tight. Make sure that the water inlet hose has no damages. The washing programme Let the washing programme end. is in operation. There is water in the drum. Set the drain or the spin programme. Adjust the level of the appliance. Refer to 'Installation'.

Remove the packaging and/or the transit bolts. Refer to 'Installation'. Add more laundry in the drum. Make sure that the drain hose is in the correct position. Increase the detergent quantity or use a different one.

The appliance makes an unusual noise. Incorrect level of the appliance. You did not remove the packaging and/or the transit bolts. The load is very small. The appliance fills with water and drain immediately.

The washing results are not satisfactory. The end of the drain hose is too low. @@Incorrect temperature was set. @@Make sure that you set the correct temperature. Decrease the laundry load. @@The programme continues from the point of interruption. @@Use the gloves. Remove the external film. If necessary, use a cutter. 2.

3. Remove the cardboard top. Remove the polystyrene packaging materials. 4. Remove the internal film. 5. Open the door and remove all the items from the drum. 30 6. Put the front piece on the floor behind the appliance. Carefully put down the appliance with the rear side on it.

Make sure not to damage the hoses. 7. 8. 1 Remove the polystyrene protection from the bottom. Pull up the appliance in vertical position.

2 9. Remove the power supply cable and the drain hose from the hose holders. 10. Remove the three bolts. Use the key supplied with the appliance.

11. Pull out the plastic spacers. ENGLISH 31 12. Replace the plastic spacers with the plastic caps. You can find these caps in the user manual bag. We recommend that you keep the packaging and the transit bolts for when you move the appliance. If the appliance is delivered in the winter months when there are minus temperatures. Store it at room temperature for 24 hours before using for the first time. POSITIONING AND LEVELLING · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance.

· Make sure that the appliance does not touch the wall or other units · Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L 60460 FL user guide](http://yourpdfguides.com/dref/3945259)  
<http://yourpdfguides.com/dref/3945259>

x4 32 · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.  
THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right. Loosen the ring nut to set it in the correct position. 35 O 45 O ·  
Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings. Do not use an extension  
hose if the inlet hose is too short.

Contact the service centre for the replacement of the inlet hose. ENGLISH 33 Water-stop device The inlet hose has a water stop device. This device prevents  
water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault . If this occurs, close the water tap and contact the  
service centre to replace the hose.

A WATER DRAINAGE There are different procedures to connect the drain hose: With the plastic hose guide. · On the edge of a sink. · Make sure that the  
plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall. · To a stand pipe with vent-hole.  
Refer to the illustration. Directly into a drain pipe at a height of not less than 60 cm and not more than 100 cm. The end of the drain hose must always be  
ventilated , i.e. the inner diameter of the drainpipe must be larger than the external diameter of the drain hose. 34 Without the plastic hose guide. · To a sink  
spigot. Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip. Make sure that the drain hose makes a loop to prevent that  
remaining particles go in the appliance from the sink.

· Directly to a built-in drain pipe in the room wall and tighten it with a clip. You can extend the drain hose to maximum 400 cm. Contact the service centre for  
the other drain hose and the extension. ENGLISH 35 www.aeg.com/shop 132933220-A-212011 .



[You're reading an excerpt. Click here to read official AEG-  
ELECTROLUX L 60460 FL user guide  
http://yourpdfguides.com/dref/3945259](http://yourpdfguides.com/dref/3945259)