



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L705500. You'll find the answers to all your questions on the AEG-ELECTROLUX L705500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L705500
User guide AEG-ELECTROLUX L705500
Operating instructions AEG-ELECTROLUX L705500
Instructions for use AEG-ELECTROLUX L705500
Instruction manual AEG-ELECTROLUX L705500

LAVAMAT 705500 - 725500



User manual

Washing machine

PERFEKT IN FORM UND FUNKTION



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

Manual abstract:

It will enable you to navigate all processes perfectly and most efficiently. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance. We wish you much joy with your new appliance. The following symbols are used in this manual: Important information concerning your personal safety and information on how to avoid damaging the appliance General information and tips Environmental information Contents 3 Contents Instructions for the user Safety information Product description Detergent dispenser drawer Control panel Display Indicator pilot lights 6 6 9 9 10 11 12 First use Personalization Acoustic signals Child safety lock 13 13 13 13 Daily use Load the laundry Measure out the detergent and the fabric softener Select the required programme by means of programme selector dial Select the spin speed reduction or the RINSE HOLD option Programme option button Select the PREWASH option Select the STAIN option Select the SENSITIVE option Select the TIME option Select the START/PAUSE Select the DELAY START Select an additional rinse Altering an option or a running programme Interrupting a programme Cancelling a programme 14 14 14 15 15 16 16 16 16 16 17 17 18 18 18 18 4 Contents Opening the door after the programme has started At the end of the programme 19 19 Washing programmes Programme information Preparing the wash cycle Sorting out the laundry Before loading the laundry Maximum loads Laundry weights Removing stains Detergents and additives Quantity of detergent to be used Degrees of water hardness 20 22 23 23 23 23 24 25 25 26 Care and cleaning Descaling After each wash Maintenance wash External cleaning Detergent dispenser drawer Washing drum Door seal Drain pump Water inlet filter Emergency emptying out Frost precautions 27 27 27 27 27 28 28 29 30 30 31 What to do if... @@@@ Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. @@ Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine.

If parts are damaged, contact your supplier. If the appliance is delivered in the winter months when there are minus temperatures: Store the washing machine at room temperature for 24 hours before using for the first time. General safety It is dangerous to alter the specifications or attempt to modify this product in any way. During high temperature wash programmes the door glass may get hot. Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check inside the drum before using. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.

Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Safety information 7 Do not use your washing machine to wash articles with whalebones, material without hems or torn material. Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Installation When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.

Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. Do not overload the appliance. See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened.

Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. 8 Safety information Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.

Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Child Safety This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. Keep all detergents in a safe place out of children's reach. Make sure that children or pets do not climb into the drum. To prevent children or pets becoming trapped inside the drum the machine incorporates special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal.

If necessary use a coin.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. Product description 9 Product description Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The ECO valve system allows total use of detergent and reduces water consumption therefore saving energy. 1 2 3 Detergent dispenser drawer Control panel Door opening handle 4 5 6 Rating plate Drain pump Adjustable feet Detergent dispenser drawer Compartment for detergent used for prewash. The prewash detergent is added at the beginning of the wash programme. Compartment for powder or liquid detergent used for main wash. Compartment for liquid additives (fabric softener, starch). Compartment for stain remover used for main wash with STAIN-option. 10 Control panel Control panel Below is a picture of the programme selector dial, the buttons and the display will be indicated with the numbers given in this table.

1 1 2 3 4 5 6 7 8 9 10 2 3 4 5 6 7 8 9 10 Programme selector dial SPIN button (RPM) PREWASH button (PRELAVADO) STAIN button (MANCHAS) SENSITIVE button (SENSIBLE) TIME button (TIEMPO) Display START/PAUSE button (START/PAUSA) DELAY START button (INICIO DIFERIDO) Indicator pilot lights Symbols: = Rinse Hold, = Cold wash, = Handwash, = Child safety lock Control panel 11 Display (7) 7.1 7.5 7.2 7.3 7.4 7.1 Child safety lock - symbol 7.2 Duration of selected programme After selecting a programme, the duration is displayed in hours and minutes (for example 2.05). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric.

After the programme has started, the time remaining is updated every minute. Alarm codes In the event of operating problems, some alarm codes can be displayed, for example E20 (see chapter «What to do if...»). End of programme When the programme has finished a flashing zero 0 is displayed, the symbol 7.5 disappears from the display, the pilot light of button 8 goes out and the door can be opened. Incorrect option selection If an option which is not compatible with the set wash programme is selected, the message Err is displayed for about 2 seconds and the yellow pilot light of button 8 light starts flashing. Delay Start The selected delay (20 hours max) set by means of the relevant button appears on the display for about 3 seconds, then the duration of the previously selected programme is displayed. The symbol 7.

3 will appear on the display. The delay time value decreases by one unit every hour. When only 1 hour remains, the time decreases every minute. 7.3 Delay Start - symbol 12 Control panel 7.4 Programme progress display The display shows the different washing programme phases. After the appliance starts operating, the display show the relevant symbol of the washing phase which is running: WASHING, RINSING, DRAINING, SPINNING. 7.5 Door symbol This symbol indicates if the door can be opened: symbol on: the door cannot be opened. The appliance is running. symbol off: the door can be opened. The washing programme is finished. Indicator pilot lights (10) If the OVERDOSAGE pilot light 10.1 goes on at the end of the programme, it indicates that too much detergent has been used. When the appliance is performing additional rinses, the EXTRA RINSE pilot light 10.2 comes on. To add an additional rinse, please see chapter «Select an additional rinse». 10.1 10.2 If your laundry is not removed during 10 minutes after the programme is finished, the backlight of the display switches off and the energy saving system will be enabled.

Only the button 8 pilot light flashes to indicate that the appliance has to be switched off. By pressing any button the appliance will come out from the energy saving status and you could set another washing programme or switch off the appliance. Use 13 First Use Ensure that the electrical and water connections comply with the installation instructions. Remove the polystyrene block and any material from the drum. Pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 90° or 95°C, with 7.5 appears on the display, the pilot light of button 8 is off and the door is locked to indicate that the water must be emptied out. To empty the water out please read chapter «At the end of the programme». 16 Use Programme option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the button 8.

When these buttons are pressed, the corresponding pilot lights come on. When they are on 8. After you have closed the door, press the button 8 again. The button 9 can not be selected with DRAIN programme. Select an additional rinse This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water (extra rinse). Press simultaneously the buttons 2 and 3 for some seconds: the pilot light 10.2 comes on. This function stays permanently on. To disable it press the same buttons again until the pilot light 10.2 goes off. Altering an option or a running programme It is possible to change some options before the programme carries it out. Before you make any change, you must pause the washing machine by pressing the button 8. Changing a running programme is possible only by resetting it. Turn the programme selector dial to O/OFF and then to the new programme position.

Start the new programme by depressing the button 8 again. The washing water in the tub will not be emptied out. Interrupting a programme Depress the button 8 to interrupt a programme which is running, the corresponding light starts flashing. Depress the button again to restart the programme. Cancelling a programme Turn the selector dial to O/OFF to cancel a programme which is running.

Now you can select a new programme. Use 19 Opening the door after the programme has started First set the machine to pause by pressing the button 8. After some minutes the door can be opened. If the DOOR remains locked, this means that the machine is already heating and that the water level is too high. In this case the door can not be opened. If you cannot open the door but you need to open it, you have to switch the machine off by turning the selector dial to O/OFF. After some minutes the door can be opened (pay attention to the water level and temperature!). After closing the door, it is necessary to select the programme and options again and to press button 8. At the end of the programme The machine stops automatically, the pilot light of button 8 and the symbol 7.5 goes off and a flashing 0 will appear on the display.

If a programme or an option that ends with water still in the tub has been selected, the symbol 7.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

5 remains on, a flashing 0 will appear on the display, the pilot light of button 8 goes off and the door remains locked to indicate that the water must be emptied out before opening the door. Follow the below instructions to empty out the water: turn the programme selector dial to O/OFF select the DRAINING or SPINNING programme reduce the spin speed if needed, by means of the relevant button press button 8 when the programme has finished the display shows a flashing 0. The symbol 7.5 disappears and the door can be opened. Turn the programme selector dial to O/OFF to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. 20 Washing programmes Washing programmes Programme/ Temperature COTTONS (ALGODÓN) 95°-30° Type of laundry Options SPIN, RINSE HOLD, PREWASH, STAIN*, SENSITIVE, TIME**, EXTRA RINSE SPIN, RINSE HOLD, PREWASH, STAIN, SENSITIVE, EXTRA RINSE SPIN, RINSE HOLD, PREWASH, STAIN*, SENSITIVE, TIME**, EXTRA RINSE SPIN, RINSE HOLD, PREWASH, EXTRA RINSE Description of programme Main wash Rinses Long spin at maximum spin speed Max.

load kg 7 ** Red. load kg 3,5 Main wash Rinses Long spin at maximum spin speed Max. load kg 7 Main wash Rinses Short spin Max. load kg 3,5 ** Red. load kg 1,5 Main wash Rinses Short spin Max.

load kg 1,5 White and coloured cotton (normally soiled items) 40-60 MIX 40° Coloured cotton: work garments, sheets, household linen, underwear, towels Synthetic or mixed fabrics: underwear, SYNTHETICS (SINTÉTICOS) 60°-30° coloured garments, non-shrink shirts, blouses EASY IRON PLUS (PLANCHA FÁCIL Synthetics to be gently washed and spun PLUS) 40° DELICATES (DELICADOS) 40°-30° Delicate fabrics: for example curtains Main wash SPIN, RINSE HOLD, Rinses PREWASH, STAIN*, Short spin TIME**, EXTRA RINSE Max. load kg 3,5 ** Red. load kg 1,5 WOOL PLUS HANDWASH (LANA PLUS) 30°-COLD Special programme for hand washing fabrics and special programme for wool garments bearing the «Pure new wool, non-shrink, machine washable» label SPIN, RINSE HOLD Main wash Rinses Short spin Max. load kg 2 * STAIN option can be selected only at the temperature of 40°C or higher.

** If you select the SUPER QUICK option by means of TIME button, we recommend that you reduce the maximum load as indicated.

(Red. load = reduced load). Full loading is possible however with somewhat reduced cleaning results. Washing programmes 21 Washing programmes Programme/ Temperature DELICATE RINSES (ACLARADO DELICADOS) DRAIN (DESCARGA) Type of laundry Separate rinse cycle for hand washed items For emptying out the last rinse water in programmes with the Rinse Hold option Separate spin for cotton fabric Options SPIN, RINSE HOLD, EXTRA RINSE Description of programme Rinses Short spin Max. load kg 7 Draining of water Max. load kg 7 Drain and long spin at maximum spin speed Max. load kg 7 Main wash Rinses Short spin Max. load kg 2,5 Main wash Rinses Short spin Max. load kg 3 Main wash Rinses Long spin Max. load kg 5 Main wash Rinses Long spin at maximum spin speed Max.

@@In this way ironing is easier. Furthermore the machine will perform additional rinses. @@@@Washing programme for a single synthetic blanket, bedspread etc. The washing temperature is 40°C. @@@@Programme duration: 20 minutes. Quick washing programme, to be used for lightly soiledwhite/fast coloured cottons. @@The temperature will decrease and the washing time will be extended. This allows you to obtain a good washing efficiency by saving energy. @@@@Whites may lose their "whiteness" in the wash. @@Make sure that no metal objects are left in the laundry (e.

g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes. Remove persistent stains before washing.

@@Treat curtains with special care. @@It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water.

@@@@@Treat any residual marks with bleach. @@Treat any residual marks with bleach.

@@@@@The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme. If using concentrated powder or liquid detergents, a programme without prewash must be selected. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Quantity of detergent to be used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Follow the product manufacturers' instructions on quantities to use. Use less detergent if: · you are washing a small load, · the laundry is lightly soiled, · large amounts of foam form during washing. 26 Preparing the wash cycle Degrees of water hardness Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

Note: A water softener must be added when water has a medium-high degree of hardness (from degree of hardness II). Follow the manufacturer's instructions. The quantity of detergent can then always be adjusted to degree of hardness I (= soft). Level 1 2 3 4 Characteristic soft medium hard very hard Degrees of water hardness German French °dH °T.H. 0-7 0-15 8-14 16-25 15-21 26-37 > 21 > 37 Care and cleaning 27 Care and cleaning You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash: · The drum should be empty of laundry. · Select the hottest cotton wash programme. · Use a normal measure of detergent, must be a powder with biological properties.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Important: do not use methylated spirits, solvents or similar products to clean the cabinet.

Detergent dispenser drawer The detergent dispenser drawer should be cleaned regularly. 1. Remove the detergent dispenser drawer by pulling it firmly. 28 Care and cleaning Remove the conditioner insert from the middle compartment. Clean all parts with water. Put the conditioner insert in as far as it will go, so that it is firmly in place. @ @6. @ @3. 4. @ @Important! @ @1.

@ @2. @ @ @ @ @ @ blocking the pump. Proceed as follows: 1. Disconnect the appliance. 2. If necessary wait until the water has cooled down. 3. Open the pump door. 4. Place a container close to the pump to collect any spillage.

5. @ @6. When no more water comes out, unscrew the pump and remove it. @ @7. @ @Put the cap back on the emergency emptying hose and place the latter back in its seat.

9. Screw the pump fully in. 10. Close the pump door. Warning! When the appliance is in use and depending on the programme selected there can be hot water in the pump.

Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Water inlet filter If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked. 1. Turn off the water tap. 2. Unscrew the hose from the tap. 3. Clean the filter in the hose with a stiff brush. 4.

Screw the hose back onto the tap. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: 1. pull out the plug from the power socket; 2. close the water tap; 3. if necessary, wait until the water has cooled down; 4. open the pump door; 5. place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose.

Empty the bowl. Repeat the procedure until water stops flowing out; 6. clean the pump if necessary as previously described; Care and cleaning 31 7. replace the emergency emptying hose in its seat after having plugged it; 8. screw the pump again and close the door.

Frost precautions If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows: 1. Close the water tap and unscrew the water inlet hose from the tap. 2. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. 3.

Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. By doing this, any water remaining in the machine is removed, avoiding ice forming and consequently damage to the appliance. When you use the machine again, make sure that the ambient temperature is above 0°C. Important! Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device. 32 What to do if.. What to do if..

. Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the yellow pilot light of button 8 flashes, one of the following alarm codes appears on the display and at the same time some acoustic signals sound every 20 seconds to indicate that the machine is not working: · E10 : problem with the water supply · E20 : problem with the water draining · E40 : door open. Once the problem has been eliminated, press the button 8 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. Problem Possible cause/Solution The door has not been closed. E40 · Close the door firmly. The plug is not properly inserted in the power socket. · Insert the plug into the power socket.

There is no power at the socket. · Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse. The selector dial is not correctly positioned and the button 8 has not been pressed.

· Please turn the selector dial and press the button 8 again. The delay start has been selected. · If the laundry is to be washed immediately, cancel the delay start. The CHILD SAFETY LOCK has been activated. · Deactivate this device.

The water tap is closed. E10 · Open the water tap. The inlet hose is squashed or kinked. E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close the door firmly. The washing machine does not start: The machine does not fill: What to do if..

. 33 Problem The machine fills then empties immediately: Possible cause/Solution The end of the drain hose is too low. · Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20 · Check the drain hose connection. The drain filter is clogged. E20 · Clean the drain filter. An option or a programme that ends with the water still in the tub or a that eliminates all the spinning phases has been selected. · Select the draining or the spinning programme. The laundry is not evenly distributed in the drum.

· Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.

· Check the water inlet hose connection. The drain or inlet hose is damaged. · Replace it with a new one. The cap on the emergency emptying hose has not been replaced or the filter has not been properly screwed in after cleaning action. · Refit the cap on the hose or screw the filter fully in.

Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load. · Reduce the laundry load. The machine does not empty and/or does not spin: There is water on the floor: Unsatisfactory washing results: 34 What to do if..

. Problem Cause possible/Solution The programme is still running. · Wait until the end of washing cycle. The door lock has not been released.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

· Wait until the DOOR symbol 7.5 disappears. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance.
The support feet have not been adjusted. · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. May be there is very little laundry in the drum.
· Load more laundry. The door will not open: The machine vibrates or is noisy: The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation Spinning starts late or the machine of the drum. This may happen several times before the unbalance disappears and normal spinning can does not spin: resume. If, after some minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.
· Redistribute the laundry. Machines based on modern technology operate very economically using very little water without affecting performance. No water is visible in the drum: Technical data 35 If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

.... Mo Pro d.
d. No
.
.. Se r. No Mod.

.....
Prod. No. ...
.....
... P0042 BD Ser. No.

.... Technical Data Dimensions Width Height Depth (door included) Power supply Voltage/frequency Total power absorbed Minimum fuse protection
Minimum Maximum Cotton 60 cm 85 cm 63 cm Electrical connection 220-230 V/50 Hz 2200 W 10 A 0,05 MPa 0,80 MPa 7 kg Water supply pressure
Maximum Load Spin Speed Maximum 1000 rpm (L 705500) 1200 rpm (L 725500) 36 Consumption value Consumption value Programme Water consumption
(litres) Energy consumption (KWh) Programme duration (Minutes) White Cottons 95° Cottons 60° (*) Cotton ECONOMY 60° Cottons 40° Synthetics 60°
Delicates 40° Wool/ Handwash 30° 65 60 49 60 65 63 55 2,1 1,4 1,19 0,77 0,45 0,6 0,25 The consumption data shown on this chart is to be considered purely
indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. (*) «Cottons
Economy» at 60°C with a load of 7 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. For the
duration of the programmes, please refer to the display on the control panel. Installation 37 Installation Unpacking All transit bolts and packing must be
removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 1.
After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. HEC0008 2. Remove the power supply
cable and the draining hose from the hose holders on the rear of the appliance. HEC0030 3. Unscrew the three bolts with the supplied spanner.
38 Installation 4. Slide out the relevant plastic spacers. 5. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted on
the door seal. HEC0010 6.

Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. 7. Connect
the water inlet hose as described under the paragraph «Water inlet». All the different plug caps are supplied with the appliance in the plastic bag containing
the instruction booklet. HEC0005 Installation 39 Positioning and levelling Install the machine on a flat hard floor. Make sure that air circulation around the
machine is not impeded by carpets, rugs etc. Before placing it on small tiles, apply a rubber coating. Never try to correct any unevenness in the floor by
putting pieces of wood, cardboard or similar materials under the machine. @@@@HEC007S The water inlet hose and the drain hose must not be kinked.
@@@@Do not use the hose from your old machine to connect to the water supply.

This appliance must be connected to a cold water supply. 1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to
the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. HEC0006 40 Installation
3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.
4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. Installation should comply with local water authority and
building regulations requirements. @@@@This fault is shown by a red sector in the window "A".

@@In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or
attaching it to the wall. In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60 cm above the ground. Directly into a
drain pipe at a height of not less than 60 cm and not more than 90 cm.

The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The
drain hose must not be kinked. Installation 41 P1118 Important! The drain hose may be extended to a maximum of 4 metres. An additional drain hose and
joining piece is available from your local Service Centre. Electrical connection Information on the electrical connection is given on the rating plate on the
inner edge of the appliance door and in the chapter «Technical Data». Check that your domestic electrical installation can take the maximum load required,
also taking into account any other appliances in use. Connect the machine to an earthed socket. The manufacturer does not accept any responsibility for
damage or injury through failure to comply with the above safety precaution.

The power supply cable must be easily accessible after installing the machine. Should the appliance power supply cable need to be replaced, this must be
carried out by a Service Centre. Permanent connection In the case of a permanent connection it is necessary that you install a double pole switch between the
appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in
compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. This operation must be performed
by a qualified electrician. 42 Environmental concerns Environmental concerns Packaging materials The materials marked with the symbol are recyclable.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.

· Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. Notes 43 www.aeg-electrolux.es 132 961 431-00-432008 Subject to change without notice www.electrolux.com .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L705500 user guide](http://yourpdfguides.com/dref/2631238)
<http://yourpdfguides.com/dref/2631238>