



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L75480WD. You'll find the answers to all your questions on the AEG-ELECTROLUX L75480WD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L75480WD
User guide AEG-ELECTROLUX L75480WD
Operating instructions AEG-ELECTROLUX L75480WD
Instructions for use AEG-ELECTROLUX L75480WD
Instruction manual AEG-ELECTROLUX L75480WD

L 75480 WD

WASHER DRYER

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)
<http://yourpdfguides.com/dref/4253051>

Manual abstract:

@@@General information and tips Environmental information Subject to change without notice. ENGLISH 3 FOR PERFECT RESULTS Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. ACCESSORIES AND CONSUMABLES In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: www.aeg.com/shop

CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. @@The information can be found on the rating plate.

@@@@@The appliance is only for domestic use. · Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.

· Do not dry not washed items in the appliance. · Do not use the drying programme if you have used industrial chemicals for cleaning. · When you load the appliance make sure that no gas lighters or matches are accidentally left in the garments pockets . · Wash in hot water with extra detergent before you dry the items that have stains of substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers . · Do not dry in this appliance items such as foam rubber (latex foam), shower caps, waterproof textiles (if there is no special drying programme), rubber backed articles and clothes or pillows fitted with foam rubber pads.

· Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a drying programme. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oilaffected items can prevent heat from escaping and so create a fire hazard. If you can not avoid that you dry fabrics that contain vegetable or cooking oil or products contaminated by hair care, first wash them in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The final part of the drying programme occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Do not install the appliance behind a lockable door, a sliding door, a door CHILDREN AND VULNERABLE PEOPLE SAFETY WARNING! Risk of suffocation, injury or permanent disability. · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

· Do not let children play with the appliance. · Keep all packaging away from children. · Keep all detergents away from children. · Keep children and pets away from the appliance door when it is open. · If the appliance has a child safety device, we recommend you activate it. CHILD SAFETY DEVICE · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. ENGLISH 5 with a hinge on the opposite side in such a way that a full opening of the door is restricted.

· Fabric softener or equivalent products must be used as specified by the fabric softener manufacturer. · Obey the safety instructions on the detergent packaging to prevent burns to eyes, mouth and throat. · Plastic items are not heat resistant. If you use a detergent ball, remove it before you set the drying programme. Do not use a detergent ball when you set a non-stop programme.

WARNING! Risk of explosion or fire. · Do not put flammable products or items that are wet with flammable products in, near or on the appliance. if it is not possible to avoid it, fully rinse with extra water items cleaned with flammable products. · To prevent from the risk of self combustion do not stop the drying programme before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. WARNING! Risk of burns! · When you interrupt the drying programme, the laundry and the drum may be hot.

Remove the laundry carefully. · Do not touch the glass of the door while a programme operates. The glass can be hot. cleaning pads, solvents or metal objects. INSTALLATION · Remove all the packaging. · Do not install or use a damaged appliance. · Do not install or use the appliance where the temperature is less than 0 °C. · Obey the installation instruction supplied with the appliance. · Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean. · Do not install the appliance where the appliance door can not be fully opened.

· Always be careful when you move the appliance because it is heavy. Always wear safety gloves. · Make sure that there is air circulation between the appliance and the floor. · Adjust the feet to have the necessary space between the appliance and the carpet. Water connection · Make sure not to cause damage to the water hoses. · Use only new hoses to connect the appliance to the water supply. Do not use old hoses again. · Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. · The first time you use the appliance, make sure that there is no leakage.

CARE AND CLEANING WARNING! Risk of injury or damage to the appliance.

· Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use water spray and steam to clean the appliance. · Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive Electrical connection

WARNING! Risk of fire and electrical shock.

· The appliance must be earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician. · Always use a correctly installed shockproof socket. · Do not use multi-plug adapters and extension cables.

6 www.aeg.com · Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable. · Connect the mains plug to the mains socket only at the end of the installation.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)

<http://yourpdfguides.com/dref/4253051>

Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. · Do not touch the mains cable or the mains plug with wet hands. DISPOSAL WARNING! Risk of injury or suffocation.

· Disconnect the appliance from the mains supply. · Cut off the mains cable and discard it. · Remove the door catch to prevent children and pets to get closed in the appliance. TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 605 mm 640 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum wash load Maximum dry load Spin speed Cotton Cotton Synthetics Maximum 1) Connect the water inlet hose to a water tap with a 3/4" thread. Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 8 kg 6 kg 3 kg 1400 rpm ENGLISH 7 PRODUCT DESCRIPTION 1 2 3 8 9 10 4 5 11 6 7 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Rating plate 6 Drain pump 7 Feet for the appliance level 8 Water drain hose 9 Water inlet valve 10 Mains cable 11 Transit bolts 12 Feet for the appliance level 12 ACCESSORIES 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. 8 www.aeg.com CONTROL PANEL 1 2 3 Risp.

Energia Super Eco Non Stop 60 Min. Cotoni Sintetici Lana Centrifuga/ Scarico Risciacquo On/Off Cotoni + Prelavaggio Sintetici + Prelavaggio Stiro Facile Delicati Lana/Seta 20 Min. - 3 kg Temp. °C Livello Asciugatura Risparmio Partenza Tempo Ritardata Giri/Min. Asciugatura a tempo Avvio/Pausa 10 1 On/Off button 2 Programme knob 3 Display 4 Start Pause button (Avvio/Pausa) 5 Delay start button (Partenza Ritarda- 9 8 7 6 5 4 ta) 6 Time save button (Risparmio Tempo) 7 Drying time button (Asciugatura a tempo) 8 Automatic drying button (Livello Asciugatura) 9 Spin reduction button (Giri/Min.) 10 Temperature button (Temp. °C) The AUTO Stand-by function automatically deactivates the appliance to decrease the energy consumption when: · You do not use the appliance for 5 minutes before you press button 4 . All settings are cancelled. Press button 1 to activate the appliance again. Set again the washing programme and all possible options.

· After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'. PROGRAMME KNOB 2 ON OFF BUTTON 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated. Turn this knob to set a programme. The related programme indicator comes on. DISPLAY 3 A B C D The display shows: A · The maximum temperature of the programme. ENGLISH 9 B C · The default spin speed of the programme. · 'No Spin'1) and 'Rinse Hold' symbols. Dryness levels symbols:2) Iron dry Store dry Extra dry The display symbols:3) Washing phase Drying phase Extra rinse Child lock You cannot open the appliance door when the symbol is on.

You can open the door only when the symbol goes off. If the programme is completed but the symbol stays on: · There is water in the drum. · The 'Rinse Hold' function is on. Delay start D · The programme time (washing and/or drying phase) When the programme starts, the time decreases with steps of 1 minute. · The delay start When you press the delay start button, the display shows the delay start time. · Alarm codes If the appliance has a malfunction, the display shows alarm codes. Refer to 'Troubleshooting' chapter. · Err The display shows this message for some seconds if: You set a function that is not applicable for the programme. You change the programme while it operates. The indicator of the Start/Pause button 4 flashes.

· When the pro normal soil. The wash and spin phase is soft to prevent the creases of the laundry. The appliance adds some rinses. max. 4 kg Wash Rinses Short spin Prewash Wash Rinses Short spin Wash Rinses Short spin Sintetici + Prelavaggio 60° - Cold Stiro Facile 2) 60° - Cold Delicati 40° - Cold Delicate fabrics as Wash acrylics, viscose, poly- Rinses ester items with norShort spin mal soil.

max. 4 kg Machine washable wool. Hand washable wool and delicate fabrics with «hand washing» care symbol. max. 2 kg Wash Rinses Short spin SPIN REDUCTION RINSE HOLD EXTRA RINSE TIME SAVE1) SPIN REDUCTION RINSE HOLD Lana / Seta 40° - Cold 20 Min. - 3 kg 40° - 30° Quick wash of sport Wash items or cotton and Rinses synthetic items , light- Short spin ly soiled or worn once. max. load 3 kg SPIN REDUCTION ENGLISH 13 Programme Temperature Risciacquo Type of load max. weight of load All 8 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. 16 www.aeg.com BEFORE FIRST USE To activate the drain system, put 2 litre of water in the main wash compartment of the detergent dispenser. 2. Put a small quantity of detergent in the main wash compartment of the 1.

detergent dispenser. Set and start a programme for cotton at the highest temperature without laundry. This removes all possible dirt from the drum and the tub. USING THE APPLIANCE - WASHING ONLY 1. 2. 3. Open the water tap. Connect the mains plug to the mains socket. Press button 1 to activate the appliance. 4.

5. Put the laundry in the appliance. Use the correct quantity of detergent and additives. 6. Set and start the correct programme for the type of laundry and soil.

LOADING THE LAUNDRY 1. 2. Open the appliance door. Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance.

Make sure not to put too much laundry in the drum. 3. Close the door. Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry. FILLING THE DETERGENT AND ADDITIVES ENGLISH 17 The detergent compartment for the prewash phase, the soak programme and for the stain function. Add the detergent for prewash, soak and stain remover before the start of the programme. The detergent compartment for the washing phase. If you use a liquid detergent, put it immediately before you start the programme.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)
<http://yourpdfguides.com/dref/4253051>

Liquid additives compartment (fabric conditioner, starch).

Put the product in the compartment before you start the programme. This is the maximum level for the quantity of liquid additives. Flap for powder or liquid detergent Turn it (up or down) in the correct position to use powder or liquid detergent. Always obey the instructions that you find on the packaging of the detergent products. Check the position of the flap 1. Pull out the detergent dispenser until it stops. 2. Press the lever down to remove the dispenser. 3. To use powder detergent, turn the flap up.

18 www.aeg.com 4. To use liquid detergent, turn the flap down. @@@@ Do not set the prewash phase.

Do not set the delay start function. 5. 6. Measure out the detergent and the fabric conditioner. Carefully close the detergent dispenser.

@@@2. Turn the programme knob. @@@@3. The display shows the default temperature and spin speed. @@4. Set the available functions. @@Press button 1 again to activate the appliance. Now, you can set a new washing programme. @@@@The indicator flashes. 2.

@@The indicator flashes. Press button 5 again and again until the display shows the number of minutes or hours. The related symbols comes on. Press button 4, the appliance starts the countdown of the delay start. 2. ENGLISH 19 When the countdown is completed, the programme starts automatically. Before you press button 4 to start the appliance, you can cancel or change the set of the delay start. You cannot set the delay start with the Steam programme. To open the appliance door: 1. Press button 4.

The door lock symbol in the display goes off. 2. Open the appliance door. 3. Close the appliance door and press button 4.

The programme or the delay start continues. If the temperature and level of the water in the drum are too high, the door lock symbol stays on and you cannot open the door. To open the door do the steps that follow: 1. Deactivate the appliance. 2.

Wait for some minutes. 3. Make sure that no water is in the drum. If you deactivate the appliance, it is necessary to set the programme again. CANCEL THE DELAY START 1. 2. 3. Press button 4. The related indicator flashes. Press button 5 again and again until the display shows 0'.

Press button 4. The programme starts. OPEN THE DOOR While a programme or the delay start operates, the appliance door is locked. AT THE END OF THE PROGRAMME · The appliance stops automatically. · The acoustic signals operate. · In the display comes on. · The indicator of the Start/Pause button 4 goes off. · The door lock symbol goes off. · Press button 1 to deactivate the appliance. @@@@Turn the programme knob to set a new cycle.

· Remove the laundry from the appliance. Make sure that the drum is empty. · Keep the door ajar, to prevent mildew and odours. · Close the water tap. @@ The door stays locked.

You must drain the water to open the door. To drain the water: 1. @@The appliance drain the water and spin. 3. @@Deactivate the appliance.

@@Open the water tap. Put the drain hose in the sink or connect to the drain pipe. · Load the laundry. @@@@The acoustic signals operate. · comes on. @@@@· Press button 1 to deactivate the appliance. @@· When the door locked symbol goes off, you can open the door. · Remove the laundry from the appliance. Make sure that the drum is empty. · Keep the door ajar, to prevent mildew and odours.

@@@@@@Do not put a plastic device/ball for the detergent into the drum. · Press button 1 to activate the appliance. · Load the laundry. · Measure out the detergent and fabric conditioner. · Turn the programme dial to the washing programme. The display shows the wash symbols. CAUTION! @@· Set the available options. @@@@· When the programme is completed, the appliance stops automatically. · The acoustic signals operate. · When the symbol goes off, you can open the door.

· Remove the laundry from the appliance. Make sure that the drum is empty. · Close the water tap. · Keep the door ajar, to prevent mildew and odours. NON-STOP PROGRAMME WASHING & TIMED DRYING CAUTION! Do not put a plastic device/ball for the detergent into the drum.

· Press button 1 to activate the appliance. · Load the laundry. · Measure out the detergent and the fabric conditioner. · Turn the programme dial to the washing programme. The display shows the wash symbols.

@@· Set the available options. · Press the button 7 to set the drying time value. The display shows a minimum time value. The iron dry level comes on. The cupboard dry level comes on. The extra dry level comes on. The drying symbol comes on. The time value on the display is the duration of the washing + drying cycles calculated on a default load size. · Press button 4 to start the programme. The set dryness level symbol stays on.

The others level symbols go off. The door locked symbol comes on. The display shows the new time value each minute. The drying symbol comes on. Set drying time value · After some seconds the display shows the total duration of the cycles. Final time value (washing + drying + anti-crease + cooling phases) 22 www.aeg.com If you set a drying time of only 10 minutes, the final time value includes also the anti-crease and the cooling phases. · Press button 4 to start the programme. · Press button 4 to start the programme.

The door is locked The display shows the new time value each minute. · When the programme is completed, the appliance stops automatically. · The acoustic signals operate. · When the door locked symbol goes off, you can open the door. · Remove the laundry from the appliance.

Make sure that the drum is empty. · Close the water tap. · Keep the door ajar, to prevent mildew and odours. FLUFF IN THE FABRICS During the washing and/or drying phase, some types of fabric, (sponge, wool, sweatshirt) could release fluff. The released fluff could stick to the fabrics during the next cycle.

This inconvenient increases with technical fabrics. To prevent the fluff in your laundry, we recommend that you: · To do not wash dark fabrics after you washed and dried light coloured fabrics (new sponge, wool, sweatshirt) and the contrary. · To dry this type of fabrics at open air when they are washed the first time. · To clean the drain filter. · After the drying phase, clean the empty drum, the gasket and the door with a wet cloth. To remove the fluff inside the drum, set a special programme: · Empty the drum. · Clean the drum, the gasket and the door with a wet cloth. · Set the rinse programme. · Press at the same time button 9 and button 7 to activate the cleaning function until the display shows CLE. ENGLISH 23 HELPFUL HINTS AND TIPS THE LAUNDRY LOAD · Divide the laundry in: white, coloured, synthetics, delicates and wool.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)
<http://yourpdfguides.com/dref/4253051>

@@ · Do not wash together white and coloured items. · Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. · Button up pillowcases, close zippers, hooks and poppers. Tie up belts. · Empty the pockets and unfold the items. @@ · Remove hard stains. · Wash with a special detergent heavy soil stains. · Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. @@ Use a washing bag to wash small items. @@@@ · Do not mix different types of detergents. @@@@ · If you use liquid detergents, do not set the prewash phase. @@@@ · Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness: · German degrees (°dH).

· French degrees (°TH). · mmol/l (millimol for each litre - international unit for the hardness of water). · Clarke degrees. **STUBBORN STAINS** For some stains, water and detergent is not sufficient. We recommend that you remove these stains before you put the items in the appliance. Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric. Water hardness table Level 1 Type soft Water hardness °dH 0-7 °T.H. 0-15 mmol/l 0-1.5 Clarke 0-9 24 www.aeg.com Level 2 3 4 Type medium hard very hard Water hardness °dH 8-14 15-21 > 21 °T.H. 16-25 26-37 > 37 mmol/l 1.

6-2.5 2.6-3.7 >3.7 Clarke 10-16 17-25 >25 **DRYING HINTS** Prepare the drying cycle · Open the water tap. · Do a check if the connection of the drain hose is correct. Refer to installation chapter for more information. · For the maximum laundry load of the drying programmes, refer to the drying programmes table. Do not set a drying programme for this laundry: Very delicate items. Synthetic curtains.

Woollen and silk items. Pieces of clothing with metal inserts. Nylon stockings. Quilts. Bed covers. Duvets. Anoraks. Sleeping bags Fabrics with residue of hair sprays, nail solvents or similar. Garments with foam-rubber or materials similar to foam-rubber. **DRYING CYCLE DURATION** The drying time can change depending on: · speed of the last spin · dryness level · type of laundry · weight of the load size **GENERAL TIPS** Refer to the «Drying programmes» table to find the average drying times.

The experience will help you to dry the laundry in a more correct way. Take note of the duration drying time of the cycles done before. To avoid the static charge at the end of the drying cycle: · Use fabric conditioner in the washing cycle. · Use special fabric conditioner for tumble dryers. When the drying programme is completed remove the laundry in a short time. **ADDITIONAL DRYING** If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again. **WARNING!** To avoid creases of fabrics or shrinks of the clothing do not over dry the laundry. **GARMENT LABELS** When you dry the laundry, obey the indications on the labels of the manufacturers: · = The item can be tumble dried · · = The drying cycle is at high temperature = The drying cycle is at reduced temperature = The item can not be tumble dried. **ENGLISH 25 CARE AND CLEANING WARNING!** Disconnect the appliance from the mains supply before you clean it. **CAUTION!** Do not use alcohol, solvents or chemical products.

MAINTENANCE WASH With the low temperature programmes it is possible that some detergent stays in the drum. Make regularly a maintenance wash. To do this: · Empty the laundry from the drum. · Set the hottest cotton wash programme · Use a correct quantity of powder detergent with biological properties. After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out. **DESCALING** The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales. Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer. Do this separately from the laundry wash.

EXTERNAL CLEANING Clean the appliance only with soap and warm water. Fully dry all the surfaces. **DOOR SEAL** Regularly examine the seal and remove all objects from the inner part. **DRUM** Regularly examine the drum to prevent limescale and rust particles. Only use special products to remove rust particles from the drum.

To do this: · Clean the drum with special product for stainless steel. · Start a short programme for cotton at the maximum temperature with a small quantity of detergent. 26 www.aeg.com **DETERGENT DISPENSER** To clean the dispenser: 1 1.

2. Press the lever. Pull the dispenser out. 2 3. 4. Remove the top part of the liquid additive compartment. Clean all the parts with water. 5. 6. Clean the dispenser recess with a brush.

Put back the dispenser in the recess. **DRAIN PUMP** Regularly examine the drain pump and make sure that it is clean. Clean the pump if: · The appliance does not drain the water. · The drum cannot turn. · The appliance makes an unusual noise because of the blockage of the drain pump. · The display shows an alarm code because of the problem with water drain. **WARNING!** 1. Disconnect the mains plug from the mains socket. 2. Do not remove the filter while the appliance operates.

Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump. **ENGLISH 27** To clean the drain pump: 1. Open the drain pump door. 2.

Pull the flap out to remove it. 3. 4. Put a container below the recess of the drain pump to collect the water that flows out. Press the two levers and pull forward the drainage duct to let the water flow out.

1 5. 6. When the container is full of water, put the drainage duct back again and empty the container. Do steps 4 and 5 again and again until no more water flows out from the drain pump. Pull back the drainage duct and turn the filter to remove it. 2 7. Remove fluff and objects from the pump. 8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre.

28 www.aeg.com 2 9. 1 Clean the filter under the water tap and put it back in the pump into the special guides. 10. Make sure that you tighten correctly the filter to prevent leakages. 11. Put the flap back and close the drain pump door. **THE INLET HOSE FILTER AND THE VALVE FILTER** It could be necessary to clean the filters when: · The appliance does not fill with water. · The appliance fills with the water for a long time.

To clean the water inlet filters: · The indicator of button 4 flashes and the display shows the related alarm. Refer to 'Troubleshooting'. **WARNING!** Disconnect the mains plug from the mains socket.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX L75480WD user guide](#)

<http://yourpdfguides.com/dref/4253051>

Close the water tap. Remove the water inlet hose from the water tap.

3. Clean the filter in the inlet hose with a stiff brush. 1. 2. 4.

5. Remove the inlet hose behind the appliance. Clean the filter in the valve with a stiff brush or a towel. 6. 7. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages. Open the water tap. 20° 45° If this occurs, do steps (1) through (6) of 'To clean the drain pump'. If necessary, clean the pump.

Put the drainage duct back and close the drain pump flap. EMERGENCY DRAIN Because of a malfunction, the appliance cannot drain the water. ENGLISH 29 When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. FROST PRECAUTIONS If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump. 1. Disconnect the mains plug from the mains socket. 2.

Close the water tap. 3. Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Refer to the emergency drain procedure 6. When the drain pump is empty, install the inlet hose again. WARNING! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

30 www.aeg.com TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: - - The appliance does not fill with water. . . . - The appliance does not drain the water. - The appliance door is open or not closed correctly. - The anti-flood device is on.

WARNING! Deactivate the appliance before you do the checks.

Problem The appliance does not fill with water. Possible cause The water tap is closed. Possible solution Open the water tap. The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked. and cleaning'.

The water tap is blocked or is furred with limescale. The connection of the water inlet hose is not correct.

Clean the water tap. Make sure that the connection is correct. The water pressure is too Contact your local water authorilow. ty. The appliance does not drain the water.

The water drain hose is damaged. The filter of the drain pump is blocked. The connection of the water drain hose is not correct. A washing programme without the drain phase is set. The function Rinse & Hold is on.

The appliance door is open or not closed correctly. Make sure that the water drain hose has no damages. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct. Set the drain programme. Set the drain programme. Close the door correctly. ENGLISH 31 Problem The anti-flood device is on. The spin phase does not operate.

Possible cause Possible solution · Disconnect the appliance. · Close the water tap. · Contact the service centre. The spin phase is off. The filter of the drain pump is blocked. Balance problems with the laundry load. Set the spin programme. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again.

Put in the mains plug. The programme does not start. The mains plug is not connected in the mains socket. Blow out fuse in the household fuse box. Replace the fuse.

You did not press button Press button 4 . 4. The delay start is set. The Child Lock function is activated. There is water on the floor.

Leakages from the couplings of the water hoses. Leakages from the drain pump. The water drain hose is damaged. You cannot open the appliance door. To start immediately the programme, cancel the delay start. Deactivate the Child Lock function. Make sure that the couplings are tight. Make sure that the drain pump filter is tight. Make sure that the water inlet hose has no damages. The washing programme Let the washing programme end.

is in operation. There is water in the drum. Set the drain or the spin programme. Adjust the level of the appliance. Refer to 'Installation'. Remove the packaging and/or the transit bolts. Refer to 'Installation'. @@You did not remove the packaging and/or the transit bolts. @@@@The detergent you used was not sufficient or correct. You did not remove the stubborn stains before you wash the laundry.

Incorrect temperature was set. @@Increase the detergent quantity or use a different one. Use special products to remove the stubborn stains. Make sure that you set the correct temperature. Decrease the laundry load.

Turn the tap on. The appliance does not dry or does not dry correctly. The water tap is not turned on. The drain filter is clogged. There is too much laundry in the drum.

You have set a wrong dryness level or drying time. Clean the drain filter. Reduce the laundry load. Set additional drying time. The laundry is full The fabrics washed in the · The drying phase helps to reof different colours cycle before released move some fluff. fluff. fluff of different colours. · Clean the laundry with a fluff remover. If there is a big quantity of fluff in the drum repeat this procedure again and again: · Clean the empty drum, the gasket and the door with a wet cloth. @@@@The programme continues from the point of interruption.

If the problem occurs again, contact the service centre. @@@@Follow the instructions supplied with the kit. UNPACKING 1. Use the gloves. Remove the external film. If necessary, use a cutter. 2. 3. Remove the cardboard top. Remove the polystyrene packaging materials.

4. Remove the internal film. 34 www.aeg.com 5.

Open the door. Remove the polystyrene piece from the door seal and all the items from the drum. 6. Put one of the polystyrene packaging elements on the floor behind the appliance. Carefully put down the appliance with the rear side on it.

Make sure not to damage the hoses. 7. 8. Remove the polystyrene protection from the bottom. Pull up the appliance in vertical position. 1 2 9. Remove the power supply cable and the drain hose from the hose holders. ENGLISH 35 10. Remove the three bolts. Use the key supplied with the appliance.

11. Pull out the plastic spacers. 12. Put the plastic caps in the holes. You can find these caps in the user manual bag. WARNING! Remove all the packaging and the transit bolts before you install the appliance. We recommend that you keep the packaging and the transit bolts for when you move the appliance.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)

<http://yourpdfguides.com/dref/4253051>

POSITIONING AND LEVELLING · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance. ·

Make sure that the appliance does not touch the wall or other units · Loosen or tighten the feet to adjust the level.

A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation. x4 36 www.aeg.com · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.

THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right. Loose the ring nut to set it in the correct position. 20 O 45 O ·

Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings.

Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose. ENGLISH 37 Water-stop device The inlet hose has a water stop device. This device prevents water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault . If this occur, close the water tap and contact the service centre to replace the hose. A WATER DRAINAGE There are different procedures to connect the drain hose: With the plastic hose guide. · On the edge of a sink. · Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall.

· To a stand pipe with vent-hole. Refer to the illustration. Directly into a drain pipe at a height of not less than 60 cm and not more than 100 cm. The end of the drain hose must always be ventilated , i.e. the inner diameter of the drainpipe must be larger than the external diameter of the drain hose. 38 www.aeg.com Without the plastic hose guide. · To a sink spigot.

Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip. Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink. · Directly to a built-in drain pipe in the room wall and tighten it with a clip. You can extend the drain hose to maximum 400 cm.

Contact the service centre for the other drain hose and the extension. ENGLISH 39 www.aeg.com/shop 132928280-B-042012 .



[You're reading an excerpt. Click here to read official AEG-](http://yourpdfguides.com/dref/4253051)

[ELECTROLUX L75480WD user guide](http://yourpdfguides.com/dref/4253051)

<http://yourpdfguides.com/dref/4253051>