



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L87695WD. You'll find the answers to all your questions on the AEG-ELECTROLUX L87695WD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L87695WD
User guide AEG-ELECTROLUX L87695WD
Operating instructions AEG-ELECTROLUX L87695WD
Instructions for use AEG-ELECTROLUX L87695WD
Instruction manual AEG-ELECTROLUX L87695WD

L 87695 WD

W WASHING MACHINE

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)
<http://yourpdfguides.com/dref/4253041>

Manual abstract:

@@@General information and tips Environmental information Subject to change without notice. ENGLISH 3 FOR PERFECT RESULTS Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. ACCESSORIES AND CONSUMABLES In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: www.aeg.com/shop

CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. @@The information can be found on the rating plate.

@@@The appliance is only for domestic use. · Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.

· Do not dry not washed items in the appliance. · Do not use the drying programme if you have used industrial chemicals for cleaning. · When you load the appliance make sure that no gas lighters or matches are accidentally left in the garments pockets . · Wash in hot water with extra detergent before you dry the items that have stains of substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers . · Do not dry in this appliance items such as foam rubber (latex foam), shower caps, waterproof textiles (if there is no special drying programme), rubber backed articles and clothes or pillows fitted with foam rubber pads.

· Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a drying programme. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oilaffected items can prevent heat from escaping and so create a fire hazard. If you can not avoid that you dry fabrics that contain vegetable or cooking oil or products contaminated by hair care, first wash them in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The final part of the drying programme occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Do not install the appliance behind a lockable door, a sliding door, a door CHILDREN AND VULNERABLE PEOPLE SAFETY WARNING! Risk of suffocation, injury or permanent disability. · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.

· Do not let children play with the appliance. · Keep all packaging away from children. · Keep all detergents away from children. · Keep children and pets away from the appliance door when it is open. · If the appliance has a child safety device, we recommend you activate it. CHILD SAFETY DEVICE · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. ENGLISH 5 with a hinge on the opposite side in such a way that a full opening of the door is restricted.

· Fabric softener or equivalent products must be used as specified by the fabric softener manufacturer. · Obey the safety instructions on the detergent packaging to prevent burns to eyes, mouth and throat. · Plastic items are not heat resistant. If you use a detergent ball, remove it before you set the drying programme. Do not use a detergent ball when you set a non-stop programme.

WARNING! Risk of explosion or fire. · Do not put flammable products or items that are wet with flammable products in, near or on the appliance. if it is not possible to avoid it, fully rinse with extra water items cleaned with flammable products. · To prevent from the risk of self combustion do not stop the drying programme before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. WARNING! Risk of burns! · When you interrupt the drying programme, the laundry and the drum may be hot.

Remove the laundry carefully. · Do not touch the glass of the door while a programme operates. The glass can be hot. cleaning pads, solvents or metal objects. INSTALLATION · Remove all the packaging. · Do not install or use a damaged appliance. · Do not install or use the appliance where the temperature is less than 0 °C. · Obey the installation instruction supplied with the appliance. · Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean. · Do not install the appliance where the appliance door can not be fully opened.

· Always be careful when you move the appliance because it is heavy. Always wear safety gloves. · Make sure that there is air circulation between the appliance and the floor. · Adjust the feet to have the necessary space between the appliance and the carpet. Water connection · Make sure not to cause damage to the water hoses. · Use only new hoses to connect the appliance to the water supply. Do not use old hoses again. · Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. · The first time you use the appliance, make sure that there is no leakage.

CARE AND CLEANING WARNING! Risk of injury or damage to the appliance.

· Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use water spray and steam to clean the appliance. · Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive Electrical connection

WARNING! Risk of fire and electrical shock.

· The appliance must be earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician. · Always use a correctly installed shockproof socket. · Do not use multi-plug adapters and extension cables.

6 www.aeg.com · Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable. · Connect the mains plug to the mains socket only at the end of the installation.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)

<http://yourpdfguides.com/dref/4253041>

Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. · Do not touch the mains cable or the mains plug with wet hands. DISPOSAL WARNING! Risk of injury or suffocation.

· Disconnect the appliance from the mains supply. · Cut off the mains cable and discard it. · Remove the door catch to prevent children and pets to get closed in the appliance. TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 605 mm 640 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum wash load Maximum dry load Spin speed Cotton Cotton Synthetics Maximum 1) Connect the water inlet hose to a water tap with a 3/4" thread. Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 9 kg 7 kg 3 kg 1600 rpm ENGLISH 7 PRODUCT DESCRIPTION 1 2 3 8 9 10 4 5 11 6 7 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Rating plate 6 Drain pump 7 Feet for the appliance level 8 Water drain hose 9 Water inlet valve 10 Mains cable 11 Transit bolts 12 Feet for the appliance level 12 ACCESSORIES 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. 8 www.aeg.com CONTROL PANEL 1 2 3 Glätten Auffrischen Energiesparen Super Eco Non Stop 60 Min.

Koch/Bunt Pflegeleicht Wolle Koch/Bunt Pflegeleicht Leichtbügeln Feinwäsche Wolle/Seide 20 Min. - 3 kg Spülen Schleudern/ Pumpen Flecken/ U./Min. Vorw. Extra Spülen Zeit Sparen Zeitvorwahl Trockengrad Trockenzeit 4 5 Ein/Aus Temp.

Start/Pause 12 1 On/Off button (Ein / Aus) 2 Programme knob 3 Display 4 Automatic drying button (Trockengrad) 5 Drying time button (Trockenzeit) 6 Start/Pause button (Start /Pause) 11 10 9 8 7 6 7 Delay Start button (Zeit vorwahl) 8 Time Save button (Zeit Sparen) 9 Extra Rinse button (Extra Spülen) 10 Stains/Prewash button (Flecken/Vor- wäsche) 11 Spin reduction button (U./Min.) 12 Temperature button (Temp.) ON OFF BUTTON 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated.

The AUTO Stand-by function automatically deactivates the appliance to decrease the energy consumption when: · You do not use the appliance for 5 minutes before you press button 6. All settings are cancelled. Press button 1 to activate the appliance again. Set again the washing programme and all possible options. · After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'. PROGRAMME KNOB 2 Turn this knob to set a programme. The related programme indicator comes on. ENGLISH 9 DISPLAY 3 A B C D E F GH I J K P O N M L The display shows: The temperature of the set programme A Cold water The spin speed of the set programme B No Spin symbol 1) Rinse Hold symbol 1) Only available for SPIN/DRAIN programme. Prewash phase Washing phase Rinses phase Spin phase C The phase symbols · When a programme is set, all the symbols of the phases related to the programme come on.

· When the programme starts, only the symbol of the phase in operation flashes. · When the programme is completed, the symbol of the last phase is on. The drying symbol comes on when you set a drying programme. The steam symbol comes on when you set a Steam programme. D E 10 www.aeg.com F The anti-crease symbol comes on when you set a drying programme. You cannot open the appliance door when the symbol is on. You can open the door only when the symbol goes off. G If the programme is completed but the symbol stays on: · The 'Rinse Hold' function is on.

· There is water in the drum. The child safety lock symbol comes on when this devic comes on in the display. STAIN · Use this function for laundry with hard stains to remove. When you set this function, put the . stain remover into compartment This function increases the programme duration.

This function is not available with a temperature lower than 40° C. PREWASH · Use this function to add a prewash phase before the washing phase. We recommend that you use this function when you have laundry with a high level of soil. The set of this function increases the programme duration. CHILD LOCK FUNCTION This function prevents children to play with the control panel.

· To activate the function, press button 12 and button 11 at the same time until the display shows the symbol. · To deactivate the function, press button 12 and button 11 at the same time until the symbol goes off. You can activate the function: · Before you press the Start/Pause button 6 : the appliance cannot start.

· his programme is not compatible with the drying. 16 www.aeg.com 5) Press EXTRA RINSE button to add rinses. With a low spin speed the appliance performs delicate rinses and a short spin. 6) To set the DRAIN programme only, set the function NO SPIN. 7) This programme is suitable for detergents that are effective at low temperatures.

8) Cotton Energy Saving programme » at 60°C with a load of 9 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards. Programme 1) Auffrischen Type of load Cotton and synthetic items This cycle removes odours from the laundry. Steam does not remove animal odours. Max. load up to 1.5 Kg STEAM PROGRAMMES Glätten Cotton and synthetic items This cycle helps to dewrinkle the laundry. up to 1.5 Kg Steam can be used for dried, washed or worn once laundry. These programmes can reduce creases and odours and make your laundry more smooth. Do not use any detergent.

If necessary, remove stains by washing or using localized stain removal. Steam programmes do not perform any hygienic cycle. Do not set the Steam programme for this type of items: · items where it is not specified on the care label as being suitable for tumble-drying · all items that have plastic, metal, wooden parts or alike. 1) If you set a Steam programme with dried laundry, at the end of the cycle the laundry feels humid. It is better to expose items to the open air for about 10 minutes to remove the humidity.

When the programme is completed, quickly remove the laundry from the drum. After a steam cycle, items may to be ironed anyway, but with less effort! WOOLMARK CERTIFICATE The wool wash of this machine has been tested and approved by The Woolmark Company for the washing of wool containing garments labeled as «hand wash» provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)
<http://yourpdfguides.com/dref/4253041>

M1144 In UK, Eire, Hong Kong and India the Woolmark symbol is a certification trademark. ©The Woolmark Company Pty Ltd. ENGLISH 17
PROGRAMMES FOR AUTOMATIC DRYING Level of dryness Extra dry For towelling materials Type of fabric Cotton and linen (bathrobes, bath towels,
etc) Cotton and linen (bathrobes, bath towels, etc) Store dry For items to put away Synthetics and mixed fabrics (jumpers, blouses, underwear, household
linen) Cotton and linen (sheets, tablecloths, shirts, etc.

) Load up to 7 kg up to 7 kg up to 3 kg Iron dry For ironing up to 7 kg PROGRAMMES FOR TIMED DRYING Degree of drying Extra dry For towelling
materials Cupboard dry1) For items to put away Cupboard dry For items to put away Type of fabric Cotton and linen (bathrobes, bath towels, etc) Cotton
and linen (bathrobes, bath towels, etc) Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) Load (Kg) 7 5 2 7 5 2 3 1 Spin speed
(rpm) 1600 1600 1600 1600 1600 1600 1200 1200 1600 1600 1600 1200 Suggested times (mins) 240 - 250 140 - 160 85 - 95 230 - 240 130 - 150 75 - 85 135 -
145 40 - 50 210 - 230 100 - 120 65 - 75 110 - 130 Iron dry Suitable for ironing Wool dry 7 Cotton and linen (sheets, tablecloths, shirts, 5 etc.) 2 Wool
(jumpers) 1 1) Hints for test institute The test performance, in accordance with EN 50229, must be carried out with the a FIRST drying load of 6 kg (load
composition : pillowcase and towels) by setting the AUTOMATIC CUPBOARD DRY programme for Cotton. The SECOND drying load of 3 kg (load
composition: 3 sheets and towels) must be tested by setting the AUTOMATIC CUPBOARD DRY programme for Cotton. 18 www.aeg.com CONSUMPTION
VALUES Programme Energy consumption (KWh) 2.5 1.60 0.99 1.0 0.

60 0.70 0.35 Water consumption (litres) 73 69 63 69 48 58 57 For the duration of the programmes, please refer to the display on the control panel.
Programme duration (minutes) White Cottons 95° Cottons 60° Cotton Energy Saving Programme 60° 1) Cottons 40° Synthetics 40° Delicates 40° Wool/
Handwash 30° 1) «Cotton Energy Saving programme » at 60°C with a load of 9 kg is the reference programme for the data entered in the energy label, in
compliance with EEC 92/75 standards. The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the
quantity and type of laundry, on the inlet water temperature and on the ambient temperature. ENGLISH 19 BEFORE FIRST USE To activate the drain
system, put 2 litre of water in the main wash compartment of the detergent dispenser. 2. Put a small quantity of detergent in the main wash compartment of the

1. detergent dispenser. Set and start a programme for cotton at the highest temperature without laundry.

This removes all possible dirt from the drum and the tub. USING THE APPLIANCE - WASHING ONLY 1. 2. 3. Open the water tap.

Connect the mains plug to the mains socket. Press button 1 to activate the appliance. 4. 5. Put the laundry in the appliance.

Use the correct quantity of detergent and additives. 6. Set and start the correct programme for the type of laundry and soil. LOADING THE LAUNDRY 1. 2.
Open the appliance door. Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance. Make sure not to put too much
laundry in the drum. 3.

Close the door. Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry. FILLING
DETERGENT AND ADDITIVES 20 www.aeg.com The detergent compartment for the prewash phase, the soak programme and for the stain function. @@The
detergent compartment for the washing phase. @Liquid additives compartment (fabric conditioner, starch). Put the product in the compartment before you
start the programme. This is the maximum level for the quantity of liquid additives.

@@@2. @@@@ Do not set the prewash phase. Do not set the delay start function. 5. 6.

Measure out the detergent and the fabric conditioner. Carefully close the detergent dispenser. @@2. Turn the programme knob. @@2.

The indicator of button 6 flashes with red colour. 3. @@4. @@5. Set the available functions. 6. Press button 6 . The indicator flashes. Press button 6 again.
The washing programme continues.

CANCEL A PROGRAMME 1. Press button 1 to cancel the programme and to deactivate the appliance. Press button 1 again to activate the appliance. Now,
you can set a new washing programme. The appliance does not drain the water. Press button 6 to start the programme. The indicator of button 6 is on.

@@@The indicator flashes. 2. @@@@When the countdown is completed, the programme starts automatically.

@@@The door lock symbol in the display goes off. 2. Open the appliance door. 3. Close the appliance door and press button 6 .

The programme or the delay start continues. @@To open the door do the steps that follow: 1. Deactivate the appliance. 2. Wait for some minutes.
3. Make sure that no water is in the drum. @@2. 3. Press button 6 . The related indicator flashes. Press button 7 again and again until the display shows 0'.
Press button 6 . @@ . The acoustic signals operate. · In the display comes on.

· The indicator of the Start/Pause button 6 goes off. · The door lock symbol goes off. · Press button 1 to deactivate the appliance. @@@@Turn the
programme knob to set a new cycle. · Remove the laundry from the appliance. Make sure that the drum is empty. · Keep the door ajar, to prevent mildew and
odours. · Close the water tap. @@ The door stays locked. You must drain the water to open the door.

To drain the water: 1. @@The appliance drain the water and spin. 3. @@Deactivate the appliance. @@Open the water tap.

Put the drain hose in the sink or connect to the drain pipe. · Load the laundry. @@@@The anti-crease symbol comes on. @@You can dry your laundry
in two ways: The drying symbol comes on. The anti-crease symbol comes on.

The drying time symbol comes on. @@@@the cupboard dry level comes on. The Iron dry level comes on. @@If the amount of your laundry is more or less
than the default size, the appliance adjusts automatically the time value during the cycle. · Press button 6 to start the programme. Final time value · Press
button 6 to start the programme. The display shows the new time value every minute. The drying symbol starts to flash. The door locked symbol comes on. If
you set the time value of only 10 minutes, the appliance performs only a cooling phase.

At the end of the programme · The appliance stops automatically. · The acoustic signals operate. · comes on. In the display · The indicator of the Start/Pause
button 6 goes off. The door locked symbol comes on. The drying symbol starts to flash. 24 www.aeg.com · The last minutes of the drying cycle the appliance
performs the anti-crease phase. The anti-crease symbol flashes.

The door is still locked.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)
<http://yourpdfguides.com/dref/4253041>

· Press button 1 to deactivate the appliance. After some minutes from the end of the programme, the energy saving function automatically deactivates the appliance. · goes When the door locked light off you can open the door. · Remove the laundry from the appliance.
 Make sure that the drum is empty. · Keep the door ajar, to prevent mildew and odours. · Close the water tap. ENGLISH 25 USING THE APPLIANCE - WASHING & DRYING NON-STOP PROGRAMME WASHING & AUTOMATIC DRYING CAUTION! Do not put a plastic device/ball for the detergent into the drum. · Press button 1 to activate the appliance.

· Load the laundry. · Measure out the detergent and fabric conditioner. · Turn the programme dial to the washing programme. The display shows the symbols of the different washing phases. CAUTION! Do not set a spin speed lower than the automatic speed of the set programme. · Set the available options. · Press the button 8 until the black line appears under one of the dryness level symbol. The display shows the new time value each minute. The last minutes of the drying cycle the appliance performs the anti-crease and the cooling phases. @@ · The acoustic signals operate.

· goes off, you When the symbol can open the door. · Remove the laundry from the appliance. Make sure that the drum is empty. · Close the water tap. · Keep the door ajar, to prevent mildew and odours. NON-STOP PROGRAMME WASHING & TIMED DRYING CAUTION! Do not put a plastic device/ball for the detergent into the drum. · Press button 1 to activate the appliance. · Load the laundry. · Measure out the detergent and the fabric conditioner. · Turn the programme dial to the washing programme.

The display shows the symbols of the different phases of the washing cycle. Do not set a spin speed lower than the automatic speed of the set programme. · Set the available options. · Press the button 5 to set the drying time value. The iron dry level comes on The cupboard dry level comes on.

The extra dry level comes on. The drying symbol comes on. The anti-crease symbol comes on. The time value on the display is the duration of the washing + drying cycles calculated on a default load size. · Press button 6 to start the programme.

The drying symbol comes on. The anti-crease symbol comes on. @@The others level symbols go off. @@@@ · Clean the drum, the gasket and the door with a wet cloth. · Set the rinse programme. @@@@ · The acoustic signals operate. · When the door locked symbol goes off, you can open the door. · Remove the laundry from the appliance. Make sure that the drum is empty. · Close the water tap.

@@The released fluff could stick to the fabrics during the next cycle. This inconvenient increases with technical fabrics. @@@@ · To clean the drain filter. @@@@ · Do not wash together white and coloured items. · Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. · Button up pillowcases, close zippers, hooks and poppers. Tie up belts. · Empty the pockets and unfold the items. · Turn inside out multilayered fabrics, wool and items with painted illustrations.

· Remove hard stains. · Wash with a special detergent heavy soil stains. · Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. · Do not wash in the appliance : Laundry without hems or with cuts Underwired bras.

Use a washing bag to wash small items. · A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again. DETERGENTS AND ADDITIVES · Only use detergents and additives specially made for washing machines. · Do not mix different types of detergents.

· To help the environment, do not use more than the correct quantity of detergent. · Obey the instructions that you find on the on packaging of these products. · Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. · If you use liquid detergents, do not set the prewash phase. · If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. WATER HARDNESS If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener. To know the water hardness in your area, contact your local water authority. Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness: · German degrees (°dH).

· French degrees (°TH). · mmol/l (millimol for each litre - international unit for the hardness of water). · Clarke degrees. STUBBORN STAINS For some stains, water and detergent is not sufficient. We recommend that you remove these stains before you put the items in the appliance. Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric. Water hardness table Level 1 Type soft Water hardness °dH 0-7 °T.H. 0-15 mmol/l 0-1.

5 Clarke 0-9 28 www.aeg.com Level 2 3 4 Type medium hard very hard Water hardness °dH 8-14 15-21 > 21 °T.H. 16-25 26-37 > 37 mmol/l 1. 6-2.5 2.6-3.7 >3.7 Clarke 10-16 17-25 >25 ECOLOGICAL HINTS To help the environment, use less water and energy, obey these instructions: · Set a programme without the prewash phase to wash laundry with normal soil.

· Always start a washing programme with the maximum load of laundry. · If necessary, use a stain remover when you set a programme with a low temperature. · To use the correct quantity of the detergent, check the water hardness of your domestic system GARMENT LABELS When you dry ther laundry, obey the indications on the labels of the manufacturers: · = The item can be tumble dried · · = The drying cycle is at high temperature = The drying cycle is at reduced temperature = The item can not be tumble dried. DRYING CYCLE DURATION The drying time can change depending on: · speed of the last spin · dryness level · type of laundry · weight of the load size GENERAL TIPS Refer to the «Drying programmes» table to find the average drying times. The experience will help you to dry the laundry in a more correct way. Take note of the duration drying time of the cycles done before. To avoid the static charge at the end of the drying cycle: · Use fabric conditioner in the washing cycle. · Use special fabric conditioner for tumble dryers. When the drying programme is completed remove the laundry in a short time.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)
<http://yourpdfguides.com/dref/4253041>

DRYING HINTS Prepare the drying cycle · Open the water tap.

· Do a check if the connection of the drain hose is correct. Refer to installation chapter for more information. · For the maximum laundry load of the drying programmes, refer to the drying programmes table. Do not set a drying programme for this laundry: Very delicate items. Synthetic curtains. Woollen and silk items. Pieces of clothing with metal inserts. Nylon stockings. Quilts. Bed covers.

Duvets. Anoraks. Sleeping bags Fabrics with residue of hair sprays, nail solvents or similar. Garments with foam-rubber or materials similar to foam-rubber. **ADDITIONAL DRYING** If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again.

WARNING! To avoid creases of fabrics or shrinks of the clothing do not over dry the laundry. **ENGLISH 29 CARE AND CLEANING WARNING!** Disconnect the appliance from the mains supply before you clean it. **CAUTION!** Do not use alcohol, solvents or chemical products. **MAINTENANCE WASH** With the low temperature programmes it is possible that some detergent stays in the drum. Make regularly a maintenance wash.

To do this: · Empty the laundry from the drum. · Set the hottest cotton wash programme · Use a correct quantity of powder detergent with biological properties. After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out. **DESCALING** The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales. Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer. Do this separately from the laundry wash. **EXTERNAL CLEANING** Clean the appliance only with soap and warm water. Fully dry all the surfaces.

DOOR SEAL Regularly examine the seal and remove all objects from the inner part. **DRUM** Regularly examine the drum to prevent limescale and rust particles. Only use special products to remove rust particles from the drum. To do this: · Clean the drum with special product for stainless steel. · Start a short programme for cotton at the maximum temperature with a small quantity of detergent. 30 www.aeg.com **DETERGENT DISPENSER** To clean the dispenser: 1 1. 2. Press the lever.

Pull the dispenser out. 2 3. 4. Remove the top part of the liquid additive compartment. Clean all the parts with water.

5. 6. Clean the dispenser recess with a brush. Put back the dispenser in the recess. **DRAIN PUMP** Regularly examine the drain pump and make sure that it is clean.

Clean the pump if: · The appliance does not drain the water. · The drum cannot turn. · The appliance makes an unusual noise because of the blockage of the drain pump. · The display shows an alarm code because of the problem with water drain. **WARNING!** 1. Disconnect the mains plug from the mains socket. 2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump.

ENGLISH 31 To clean the drain pump: 1. Open the drain pump door. 2. Pull the flap out to remove it. 3. 4. Put a container below the recess of the drain pump to collect the water that flows out. Press the two levers and pull forward the drainage duct to let the water flow out. 1 5. 6.

When the container is full of water, put the drainage duct back again and empty the container. Do steps 4 and 5 again and again until no more water flows out from the drain pump. Pull back the drainage duct and turn the filter to remove it. 2 7. Remove fluff and objects from the pump.

8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre. 32 www.aeg.com

2 9. 1 Clean the filter under the water tap and put it back in the pump into the special guides. 10. Make sure that you tighten correctly the filter to prevent leakages. 11. Put the flap back and close the drain pump door. **THE INLET HOSE FILTER AND THE VALVE FILTER** It could be necessary to clean the filters when: · The appliance does not fill with water. · The appliance fills with the water for a long time. To clean the water inlet filters: · The indicator of button 6 flashes and the display shows the related alarm. Refer to 'Troubleshooting'.

WARNING! Disconnect the mains plug from the mains socket. Close the water tap. Remove the water inlet hose from the water tap. 3. Clean the filter in the inlet hose with a stiff brush. 1. 2. 4. 5. Remove the inlet hose behind the appliance.

Clean the filter in the valve with a stiff brush or a towel. 6. 7. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages. Open the water tap. 20° 45° If this occurs, do steps (1) through (6) of 'To clean the drain pump'. If necessary, clean the pump. Put the drainage duct back and close the drain pump flap. **EMERGENCY DRAIN** Because of a malfunction, the appliance cannot drain the water.

ENGLISH 33 When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. **FROST PRECAUTIONS** If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump. 1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3.

Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Refer to the emergency drain procedure 6. When the drain pump is empty, install the inlet hose again. **WARNING!** Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. 34 www.aeg.com

TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: · - The appliance does not fill with water. · · · - The appliance does not drain the water.

- The appliance door is open or not closed correctly. - The anti-flood device is on. **WARNING!** Deactivate the appliance before you do the checks. Problem The appliance does not fill with water. Possible cause The water tap is closed.

Possible solution Open the water tap. The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked . and cleaning'. The water tap is blocked or is furred with limescale.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L87695WD user guide](http://yourpdfguides.com/dref/4253041)
<http://yourpdfguides.com/dref/4253041>

The connection of the water inlet hose is not correct. Clean the water tap. Make sure that the connection is correct.

The water pressure is too low. Contact your local water authority. The appliance does not drain the water. The water drain hose is damaged. The filter of the drain pump is blocked. The connection of the water drain hose is not correct. A washing programme without the drain phase is set. The function Rinse & Hold is on. The appliance door is open or not closed correctly. Make sure that the water drain hose has no damages.

Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct. Set the drain programme. Set the drain programme. Close the door correctly. ENGLISH 35 Problem The anti-flood device is on. The spin phase does not operate. Possible cause Possible solution · Disconnect the appliance. · Close the water tap.

· Contact the service centre. The spin phase is off. The filter of the drain pump is blocked. Balance problems with the laundry load. Set the spin programme. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again. Put in the mains plug. The programme does not start.

The mains plug is not connected in the mains socket. Blow out fuse in the household fuse box. Replace the fuse. You did not press button Press button 6 . 6. The delay start is set. The Child Lock function is activated. There is water on the floor. Leakages from the couplings of the water hoses. Leakages from the drain pump.

The water drain hose is damaged. You cannot open the appliance door. To start immediately the programme, cancel the delay start. Deactivate the Child Lock function. Make sure that the couplings are tight.

Make sure that the drain pump filter is tight. Make sure that the water inlet hose has no damages. The washing programme Let the washing programme end. is in operation. There is water in the drum.

Set the drain or the spin programme. Adjust the level of the appliance. Refer to 'Installation'. Remove the packaging and/or the transit bolts. Refer to 'Installation'. @@You did not remove the packaging and/or the transit bolts. @@@@The detergent you used was not sufficient or correct. You did not remove the stubborn stains before you wash the laundry. Incorrect temperature was set. @@Increase the detergent quantity or use a different one.

Use special products to remove the stubborn stains. Make sure that you set the correct temperature. Decrease the laundry load. Turn the tap on. The appliance does not dry or does not dry correctly. The water tap is not turned on. The drain filter is clogged. There is too much laundry in the drum. You have set a wrong dryness level or drying time. Clean the drain filter.

Reduce the laundry load. Set additional drying time. The laundry is full The fabrics washed in the · The drying phase helps to reof different colours cycle before released move some fluff. fluff. fluff of different colours.

· Clean the laundry with a fluff remover. If there is a big quantity of fluff in the drum repeat this procedure again and again: · Clean the empty drum, the gasket and the door with a wet cloth. @@@@The programme continues from the point of interruption. If the problem occurs again, contact the service centre. @@@@Follow the instructions supplied with the kit.

UNPACKING 1. Use the gloves. Remove the external film. If necessary, use a cutter. 2. 3. Remove the cardboard top. Remove the polystyrene packaging materials. 4. Remove the internal film.

38 www.aeg.com 5. Open the door. Remove the polystyrene piece from the door seal and all the items from the drum. 6. Put one of the polystyrene packaging elements on the floor behind the appliance. Carefully put down the appliance with the rear side on it. Make sure not to damage the hoses. 7.

8. Remove the polystyrene protection from the bottom. Pull up the appliance in vertical position. 1 2 9. Remove the power supply cable and the drain hose from the hose holders.

ENGLISH 39 10. Remove the three bolts. Use the key supplied with the appliance. 11. Pull out the plastic spacers.

12. Put the plastic caps in the holes. You can find these caps in the user manual bag. WARNING! Remove all the packaging and the transit bolts before you install the appliance. We recommend that you keep the packaging and the transit bolts for when you move the appliance. POSITIONING AND LEVELLING · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance. · Make sure that the appliance does not touch the wall or other units · Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation. x4 40 www.

aeg.com · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level. THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right. Loose the ring nut to set it in the correct position. 20 O 45 O · Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings. Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose.

ENGLISH 41 Water-stop device The inlet hose has a water stop device. This device prevents water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault . If this occur, close the water tap and contact the service centre to replace the hose. A WATER DRAINAGE There are different procedures to connect the drain hose: With the plastic hose guide.

· On the edge of a sink. · Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall. · To a stand pipe with vent-hole. Refer to the illustration.

Directly into a drain pipe at a height of not less than 60 cm and not more than 100 cm. The end of the drain hose must always be ventilated , i.e. the inner diameter of the drainpipe must be larger than the external diameter of the drain hose. 42 www.aeg.com Without the plastic hose guide. · To a sink spigot. Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip.

Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink. · Directly to a built-in drain pipe in the room wall and tighten it with a clip. You can extend the drain hose to maximum 400 cm. Contact the service centre for the other drain hose and the extension.

ENGLISH 43 www.aeg.com/shop 132924120-B-122012 .



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX L87695WD user guide](#)

<http://yourpdfguides.com/dref/4253041>