



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L98699FL2. You'll find the answers to all your questions on the AEG-ELECTROLUX L98699FL2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L98699FL2
User guide AEG-ELECTROLUX L98699FL2
Operating instructions AEG-ELECTROLUX L98699FL2
Instructions for use AEG-ELECTROLUX L98699FL2
Instruction manual AEG-ELECTROLUX L98699FL2

L 98699 FL2

W WASHING MACHINE

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](http://yourpdfguides.com/dref/4253061)
<http://yourpdfguides.com/dref/4253061>

Manual abstract:

@@@General information and tips Environmental information Subject to change without notice. ENGLISH 3 FOR PERFECT RESULTS Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. ACCESSORIES AND CONSUMABLES In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: www.aeg.com/shop

CUSTOMER CARE AND SERVICE We recommend the use of original spare parts. @The information can be found on the rating plate.

@@@The appliance is only for domestic use. · Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.

· Do not put flammable products or items that are wet with flammable products in, near or on the appliance. Risk of explosion or fire. · Obey the safety instructions on the detergent packaging to prevent burns to eyes, mouth and throat. · Make sure that you remove all metal objects from the laundry. Hard and sharp material can cause damage to the appliance.

· Do not touch the glass of the door while a programme operates. The glass can be hot (only for front-loading appliances). CHILDREN AND VULNERABLE PERSON SAFETY · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. Do not let children play with the appliance. · Keep all packaging away from children. There is the risk of suffocation or injury. · Keep all detergents away from children. · Keep children and pets away from the appliance when the door is open. · Before you close the appliance door, make sure that children and pets are not into the drum.

· If the appliance has a child safety device, we recommend to activate it. CARE AND CLEANING · Deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes water leakages. CHILD SAFETY DEVICE · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum.

To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical.

INTERNAL LAMP This appliance has an internal lamp that comes on when you open the door and goes off when the door is closed.

WARNING! Do not look directly into the beam of the lamp. ENGLISH 5 To replace the internal lamp, contact the service centre. Disconnect the mains plug from the mains socket before the replacement of the internal lamp. INSTALLATION · The appliance is heavy, be careful when you move it. · Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions.

· Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts. · Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury.

· Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet. · Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages. Electrical connection · Make sure that the appliance is earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables.

There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. DISCARD THE APPLIANCE 1. Water connection · Do not connect the appliance with old hoses already used.

Only use new hoses. · Make sure not to cause damage to the water hoses. Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it.

3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 600 mm 640 mm 230 V 2200 W 10 A 50 Hz 6 www.

aeg.com Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum IPX4 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 9 kg 1600 rpm 1) Connect the water inlet hose to a water tap with a 3/4" thread. ENGLISH 7 PRODUCT DESCRIPTION 1 2 3 9 10 11 4 5 6 7 8 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Internal lamp 6 Rating plate 7 Drain pump 8 Feet for the appliance level 9 Water drain hose 10 Water inlet hose 11 Mains cable 12 Transit bolts 13 Feet for the appliance level 12 13 INTERIOR ACCESSORIES 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 5 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Sound barrier To decrease the noise while the appliance operates. 4 Plastic hose guide To connect the drain hose on the edge of a sink. 5 Anti-flood inlet hose To prevent possible leakage. 8 www.aeg.com CONTROL PANEL 1 2 3 4 Laine/ Soie 5 12 1 Auto Off button 2 Programme knob 3 Display 4 Vapeur touch button 5 Mémoire touch buttons 6 Départ/Pause touch button 7 Départ/Différé touch button 11 10 9 8 7 6 8 Gain de Temps touch button 9 Rinçage Plus touch button 10 Taches/Prélavage/Trempage touch button 11 Spin reduction touch button (Essor- age) 12 Temperature touch button (Temp.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](http://yourpdfguides.com/dref/4253061)
<http://yourpdfguides.com/dref/4253061>

) **TOUCH SCREEN** Do not wear gloves when you touch the buttons. Make sure the touch screen and buttons are always clean and dry. **AUTO OFF BUTTON** 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated. The **AUTO OFF** function automatically deactivates the appliance to stop the energy consumption when: · You do not use the appliance for 5 minutes before you press button 6. All settings are cancelled. Press button 1 to activate the appliance again. Set again the washing programme and all possible options. · After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'.

PROGRAMME KNOB 2 Turn this knob to set a programme. The related programme indicator comes on. **ENGLISH 9 DISPLAY** 3 A B C D J I H G F E A The text bar: · Guides you in the use of the appliance. · Shows the programme status and phase. · Shows alarm messages.

Refer to 'Troubleshooting'. The symbols appear on the display when the related phase or function is set. B Child lock Door locked You cannot open the door when the symbol is on. You can open the door only when the symbol goes off. If the symbol stays on but the programme is completed: · There is water in the drum.

· The 'Rinse Hold' function is on. · The time of the day When you activate the appliance the display shows the time of the day for some seconds. To adjust the clock, refer to "Clock setting". · The programme duration When the washing programme starts, the programme time decreases every minute. D Programme duration symbol The symbol comes on when the digits shows the programme duration. · The end time of the washing programme · Programme end symbol The symbol comes on when the digits shows the programme end time. C 10 www.aeg.com · The time of delay When you set the delayed start the time of the programme end increases by steps of 30 minutes till 10 hours and by steps of one hour till 20 hours.

· The end of the programme The display shows a zero. This part comes on only if the door is open - Refer to 'Loading the laundry'. The programme maximum load E The weight of the laundry The indicator bar fills accordingly to the laundry weight. The indicator fully fills when you put the maximum load. If you need to set a function · An empty indicator bar comes on when the related function is available with the set programme. If an indicator bar does not come on, it means that it is not available. · The function symbol comes on when the function is set. · The indicator bar fills accordingly to the set function. · If you make an incorrect selection the text bar on the display tells that the selection is not possible. Time save The symbol comes on when you set the following functions: F Shortened duration Extra quick Extra rinsing G The indicator bar fills accordingly the numbers of rinses.

Stains Prewash H Soak The indicator bar fills accordingly to the set functions. The default spin speed of the programme. I ___ No spin 1) **ENGLISH 11 Rinse hold** 1) Only available for Spin/Drain programme. The default temperature of the programme. J Cold wash **BUTTON VAPEUR** 4 Touch button 4 to set the steam level.

This is possible only with programmes where the steam function is available. The duration of the steam phase changes accordingly to your selection.

BUTTON GAIN DE TEMPS 8 Touch button 8 to decrease the programme time. You can select: **SHORTENED DURATION** To wash items with daily soil.

EXTRA QUICK To wash quickly items with almost no soil.

Some programmes accept only one of these functions. **BUTTONS MEMORIE** 5 Touch one of the buttons 5 to memorise a programme or to set a memorised programme. Memorise a pSpin Reduction Arrêt Cuve Pleine Prélavage 2) Trempage Rinçage Plus Gain de Temps 3) Extra Silence 95° - Cold White and coloured cotton with normal level of soil. Maximum load 9 kg Wash Rinses Long spin Stop with water in the drum Synthétiques 60° - Cold Rinses Short spin Synthetic or mixed fabric items with normal soil. Maximum load 4 kg Wash Rinses Short spin Repassage Facile 60° - Cold Synthetic fabric Wash items with norRinses mal soil. It preShort spin vents the creases of the laundry. Maximum load 4 kg 14 www.aeg.com Programme Délicats Temperature Type of load Weight of load 40° - Cold Rinses Short spin Delicate fabrics as acrylics, viscose, polyester items with normal soil. Maximum load 4 kg Programme description Wash Rinses Short spin Functions Spin Reduction Arr&ecirssary, remove stains by washing or using localized stain removal.

Steam programmes do not perform any hygienic cycle. Do not set the Steam programme for this type of clothes: · Clothes which is not specified on the care label as being suitable for tumbling drying. · Clothes with inclusion of plastic, metal, wooden parts or alike. Touch the button 4 to change the duration of steam phase. 1) If you set a Steam programme with dried laundry, at the end of the cycle the laundry feel humid. It is better to expose clothes to the open air for about 10 minutes to let the humidity go away. Laundry should be removed from the drum as quick as possible. After a steam cycle, clothes may be ironed anyway, but with less effort! 2) For the programme time, refer to the display. **WOOLMARK CERTIFICATE** The wool wash of this machine has been tested and approved by The Woolmark Company for the washing of wool containing garments labeled as «hand wash» provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M 0000 In UK, Eire, Hong Kong and India the Woolmark symbol is a certification trademark.

@@@2. @@@@2. The hour digits flash. 3. @@@5.

The minute digits flash. 6. @@2. @@· Turn the programme knob to change the hour. · Touch button 6 to confirm the selection.

· The minute digits flash. · Turn the programme knob to change the minutes. @@2. Press button 1 to activate the appliance. @@The programme indicator comes on. 3. The indicator of button 6 flashes with red colour. 4. The display shows the default temperature and spin. @@5.

@@@@2. Open the appliance door. @@The text bar on the display tells to add the laundry. 3. Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance. 4. On the display the weight of the laundry updates by step of kg 0.5. The weight is indicative and changes with the type of the laundry.

@@@@@@The text bar on the display tells the percentage of detergent to use. @@@@The detergent compartment for the washing phase.

@Liquid additives compartment (fabric conditioner, starch). Put the product in the compartment before you start the programme. This is the maximum level for the quantity of liquid additives.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](http://yourpdfguides.com/dref/4253061)
<http://yourpdfguides.com/dref/4253061>

The compartment for the stain remover. @@@@2. @@@@ Do not set the prewash phase. Do not set the delay start function. 5. 6. Measure out the detergent and the fabric conditioner. Carefully close the detergent dispenser. @@@@The indicator of button 6 stops to flash and is on with red colour. If a delayed start is set, the appliance starts the countdown. 1. 1. Touch button 6. The indicator flashes. 2.

Change the function set. 3. Touch button 6 again. @@After approximately 15 minutes from the start of the programme, the display shows the new time value. OPEN THE DOOR While a programme or the delay start operates, the appliance door is locked. To open the appliance door: 1. INTERRUPT A PROGRAMME 1. 2. Touch button 6. The indicator flashes.

Touch button 6 again. The washing programme continues. Touch button 6. The door lock symbol in the display goes off and a message tells you that the door is unlocked. 2.

Open the appliance door. 3. Close the appliance door and touch button 6 again. The programme or the delay start continues. If the temperature and the level of the water is too high, the door lock symbol stays on.

You cannot open the door. If necessary, do the following procedure to open the door: 1. Deactivate the appliance. 2. Wait for some minutes. 3. Make sure that no water is in the drum. If you deactivate the appliance, it is necessary to set the programme again. CANCEL A PROGRAMME 1. Press button 1 to cancel the programme and to deactivate the appliance.

Press button 1 again to activate the appliance. Now, you can set a new washing programme. The appliance does not drain the water. 2. CHANGE A FUNCTION You can change only some functions before they operate. AT THE END OF THE PROGRAMME 1. 2. The appliance stops automatically. The acoustic signals operate, if it is active. 3.

In the display goes on and the message tells you that the programme is completed. The indicator of button 6 goes off. 4. ENGLISH 23 5. 6. The door lock symbol goes off. Press button 1 to deactivate the appliance. After five minutes from the end of the programme, the AUTO OFF function automatically deactivates the appliance. When you activate the appliance again, the display shows the end of the last set programme. Turn the programme knob to set a new cycle.

7. 8. 9. Remove the laundry from the appliance. Make sure that the drum is empty. Keep the door ajar, to prevent mildew and odours. Close the water tap. The washing programme is completed, but there is water in the drum: The drum turns regularly to prevent the creases in the laundry. The door stays locked. You must drain the water to open the door.

1. 2. To drain the water: If necessary, decrease the spin speed. Touch button 6. The appliance drains the water and spins. 3. When the programme is completed and the door lock symbol goes off, you can open the door 4. Press button 1 to deactivate the appliance. The appliance drain and spin automatically after approximately 18 hours. 24 www.

aeg.com HELPFUL HINTS AND TIPS THE LAUNDRY LOAD · Divide the laundry in: white, coloured, synthetics, delicates and wool. · Obey the washing instructions that are on the laundry care labels. · Do not wash together white and coloured items. · Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. · Button up pillowcases, close zippers, hooks and poppers. Tie up belts. · Empty the pockets and unfold the items. · Turn inside out multilayered fabrics, wool and items with painted illustrations.

· Remove hard stains. · Wash with a special detergent heavy soil stains. · Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. · Do not wash in the appliance : Laundry without hems or with cuts Underwired bras. Use a washing bag to wash small items. · A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again. DETERGENTS AND ADDITIVES · Only use detergents and additives specially made for washing machines. · Do not mix different types of detergents.

· To help the environment, do not use more than the correct quantity of detergent. · Obey the instructions that you find on the on packaging of these products. Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. · If you use liquid detergents, do not set the prewash phase. · If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. WATER HARDNESS If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. @@@@Obey the instructions that you find on the packaging of the products. @@ · French degrees (°TH). @@@@Special stain removers are available. @@@@Disconnect the appliance from the mains supply before you clean it.

CAUTION! @@Make regularly a maintenance wash. To do this: · Empty the laundry from the drum. @@After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out. DESCALING The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales.

Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer. Do this separately from the laundry wash. EXTERNAL CLEANING Clean the appliance only with soap and warm water. Fully dry all the surfaces.

DOOR SEAL Regularly examine the seal and remove all objects from the inner part. DRUM Regularly examine the drum to prevent limescale and rust particles. Only use special products to remove rust particles from the drum. To do this: · Clean the drum with special product for stainless steel. · Start a short programme for cotton at the maximum temperature with a small quantity of detergent. ENGLISH 27 DETERGENT DISPENSER To clean the dispenser: 1 1. 2. Press the lever. Pull the dispenser out. 2 3.

4. Remove the top part of the liquid additive compartment. Clean all the parts with water. 5. 6. Clean the dispenser recess with a brush. Put back the dispenser in the recess. DRAIN PUMP Regularly examine the drain pump and make sure that it is clean. Clean the pump if: · The appliance does not drain the water. · The drum cannot turn.

· The appliance makes an unusual noise because of the blockage of the drain pump. · The display shows an alarm code because of the problem with water drain. WARNING! 1. Disconnect the mains plug from the mains socket. 2.

Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](http://yourpdfguides.com/dref/4253061)
<http://yourpdfguides.com/dref/4253061>

com To clean the drain pump: 1. Open the drain pump door. 2. Pull the flap out to remove it. 3. 4. Put a container below the recess of the drain pump to collect the water that flows out. Press the two levers and pull forward the drainage duct to let the water flow out. 1 5. 6.

When the container is full of water, put the drainage duct back again and empty the container. Do steps 4 and 5 again and again until no more water flows out from the drain pump. Pull back the drainage duct and turn the filter to remove it. 2 7. Remove fluff and objects from the pump. 8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre. ENGLISH 29 2 9. 1 Clean the filter under the water tap and put it back in the pump into the special guides.

10. Make sure that you tighten correctly the filter to prevent leakages. 11. Put the flap back and close the drain pump door. THE INLET HOSE FILTER AND THE VALVE FILTER It could be necessary to clean the filters when: · The appliance does not fill with water.

· The appliance fills with the water for a long time. To clean the water inlet filters: · The indicator of button 6 flashes and the display shows the related alarm. Refer to 'Troubleshooting'. WARNING! Disconnect the mains plug from the mains socket. Close the water tap.

Remove the water inlet hose from the water tap. 3. Clean the filter in the inlet hose with a stiff brush. 1. 2. 4. 5. Remove the inlet hose behind the appliance. Clean the filter in the valve with a stiff brush or a towel. 6.

7. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages. Open the water tap. 20° 45° If this occurs, do steps (1) through (6) of 'To clean the drain pump'. If necessary, clean the pump. Put the drainage duct back and close the drain pump flap. EMERGENCY DRAIN Because of a malfunction, the appliance cannot drain the water. 30 www.aeg.

com When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. FROST PRECAUTIONS If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3.

Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Refer to the emergency drain procedure 6. When the drain pump is empty, install the inlet hose again. WARNING! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. ENGLISH 31 TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. Try to find a solution to the problem before you contact the service centre (refer to the table).

With some problems, the acoustic signals operate and the display shows an alarm message. WARNING! Deactivate the appliance before you do the checks. Problem The display tells to check the tap: the appliance does not fill with water. Possible cause The water tap is closed. Possible solution Open the water tap. The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked . and cleaning'.

The connection of the water inlet hose is not correct. The water pressure is too low. The water tap is blocked or is furred with limescale. The display tells to check the drain filter: the appliance does not drain the water. The water drain hose is damaged.

Make sure that the connection is correct. Contact your local water authority. Clean the water tap. Make sure that the water drain hose has no damages. The filter of the drain pump is blocked.

The connection of the water drain hose is not correct. The display tells to check the door. The display tells there is a water alert. The appliance door is open or not closed correctly. The anti-flood device is activated. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct. Close the door correctly. · Disconnect the appliance.

· Close the water tap. · Contact the service centre. 32 www.aeg.com PROBLEM WITHOUT ALARM MESSAGE Problem The appliance does not drain the water. Possible cause A washing programme without the drain phase is set. The function Rinse Hold is on. The spin phase The spin phase is off. does not operate. The filter of the drain pump is blocked.

Balance problems with the laundry load. The programme does not start. The mains plug is not connected in the mains socket. Blow out fuse in the household fuse box. Possible solution Set the drain programme.

Set the drain programme. Set the spin programme. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again.

Put in the mains plug. Replace the fuse. You did not touch button Touch button 6 . 6. The delay start is set. If necessary to wash the laundry immediately, cancel the delay start. Deactivate the Child Lock function. Make sure that the couplings are tight. Make sure that the drain pump filter is tight. Make sure that the water inlet hose has no damages.

The Child Lock function is activated. There is water on the floor. Leakages from the couplings of the water hoses. Leakages from the drain pump. The water drain hose is damaged. You cannot open the appliance door. The washing programme Let the washing programme end. is in operation. There is water in the drum. Set the drain or the spin programme.

Adjust the level of the appliance. Refer to 'Installation'. The appliance makes an unusual noise. Incorrect level of the appliance. ENGLISH 33 Problem Possible cause You did not remove the packaging and/or the transit bolts.

The load is very small. Possible solution Remove the packaging and/or the transit bolts. Refer to 'Installation'. Add more laundry in the drum. Make sure that the drain hose is in the correct position.

The appliance fills The end of the drain with water and hose is too low. drain immediately. The washing reThe detergent you used sults are not satis- was not sufficient or corfactory. rect. You did not remove the stubborn stains before you wash the laundry. You set a not correct temperature. Too much laundry load. The internal lamp is off. After a steam programme, garments are partially wet. After a steam programme, garments are not sufficiently smooth.

The lamp is burned. @@Use special products to remove the stubborn stains. Make sure that you set the correct temperature. Decrease the laundry load. To replace the lamp, contact the service centre.

[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](#)



<http://yourpdfguides.com/dref/4253061>

@@@Synthetic instead of Cotton). @@Press button 1 to deactivate the appliance. Empty the drum and obey to the necessary steps. (Refer to 'Loading the laundry') The drum is emp- It is necessary to set a ty and the display tare. shows there is some weight in .

The drum is full but the display shows 0.0 kg. You loaded the laundry before to activate the appliance. After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the service centre. If the display shows other alarm message, contact the service centre. 34 www.aeg.com
INSTALLATION FIXING PLATE KIT (405517114) Available from your authorized dealer.

If you install the appliance on a plinth, secure the appliance in the fixing plates. @@Remove the external film. If necessary, use a cutter. 2. 3. Remove the cardboard top. @@@@Carefully put down the appliance with the rear side on it. @@Do not use alcohol, solvents or chemical products. 36 www.aeg.com.

com 9. A Make sure to identify the different sizes and the positions of the sound barriers. Refer to the illustration: A (FRONT) = Front of the appliance B (BACK) = Rear of the appliance B 10. Remove the adhesive strip from x4 A the silent barriers. Attach the four barriers to bottom of the appliance. Refer to the illustration. Make sure that the barriers are securely attached. Attach the sound barriers at a room temperature. B 11. Pull up the appliance in vertical position.

12. Remove the power supply cable and the drain hose from the hose holders. ENGLISH 37 13. Turn the three bolts with the key supplied with the appliance. Pull out the plastic spacers.

14. Put the plastic caps in the holes. You can find these caps in the user manual bag. WARNING! Remove all the packaging and the transit bolts before you install the appliance. We recommend that you keep the packaging and the transit bolts for when you move the appliance.

POSITIONING AND LEVELLING · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance. · Make sure that the appliance does not touch the wall or other units · Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation. x4 38 www.aeg.com · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level. THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right.

Loose the ring nut to set it in the correct position. 20 O 45 O · Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings. Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose. ENGLISH 39 Water-stop device The inlet hose has a water stop device. This device prevents water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault. If this occur, close the water tap and contact the service centre to replace the hose. A WATER DRAINAGE There are different procedures to connect the drain hose: With the plastic hose guide.

· On the edge of a sink. · Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall. · To a stand pipe with vent-hole. Refer to the illustration.

Directly into a drain pipe at a height of not less than 60 cm and not more than 100 cm. The end of the drain hose must always be ventilated, i.e. the inner diameter of the drainpipe must be larger than the external diameter of the drain hose. 40 www.aeg.com

Without the plastic hose guide. · To a sink spigot. Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip. Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink. · Directly to a built-in drain pipe in the room wall and tighten it with a clip. You can extend the drain hose to maximum 400 cm. Contact the service centre for the other drain hose and the extension. ENGLISH 41 42 www.aeg.com.

www.aeg.com ENGLISH 43 www.aeg.com/shop 132924080-A-102012 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL2 user guide](http://yourpdfguides.com/dref/4253061)
<http://yourpdfguides.com/dref/4253061>