



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L98699FL. You'll find the answers to all your questions on the AEG-ELECTROLUX L98699FL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L98699FL
User guide AEG-ELECTROLUX L98699FL
Operating instructions AEG-ELECTROLUX L98699FL
Instructions for use AEG-ELECTROLUX L98699FL
Instruction manual AEG-ELECTROLUX L98699FL

L 98699 FL
L 98499 FL

WASHING MACHINE

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

Manual abstract:

The manufacturer is not responsible if an incorrect installation and use causes damage. **CHILDREN AND VULNERABLE PERSON SAFETY** · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. · Keep all packaging away from children. There is the risk of suffocation or injury. · Keep all detergents away from children. · Keep children and pets away from the appliance when the door is open. · Before you close the appliance door, make sure that children and pets are not into the drum. · If the appliance has a child safety device, we recommend to activate it.

CHILD SAFETY DEVICE · When you activate this device, you cannot close the door.

This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. **GENERAL SAFETY** · Do not use the appliance for professional use. The appliance is only for domestic use.

· Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance. · Do not put flammable products or items that are wet with flammable products in, near or on the appliance. Risk of explosion or fire. · Obey the safety instructions on the detergent packaging to prevent burns to eyes, mouth and throat.

· Make sure that you remove all metal objects from the laundry. Hard and sharp material can cause damage to the appliance. · Do not touch the glass of the door while a programme operates. The glass can be hot. **CARE AND CLEANING** · Deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes water leakages.

INTERNAL LAMP This appliance has an internal lamp that comes on when you open the door and goes off when the door is closed. **WARNING!** Visible led radiation, do not look directly into the beam.

ENGLISH 5 To replace the internal lamp, contact the service centre. Disconnect the mains plug from the mains socket before the replacement of the internal lamp. **INSTALLATION** · The appliance is heavy, be careful when you move it. · Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts. · Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury. · Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet.

Adjust the feet to have the necessary space between the appliance and the carpet. **WATER CONNECTION** · Do not connect the appliance with old hoses already used. Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time.

Let the water flow for some minutes, then connect the inlet hose. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages. **ELECTRICAL CONNECTION** · Make sure that the appliance is earthed. · Make sure that the electrical data on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket.

· Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. **DISCARD THE APPLIANCE 1.**

Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it. 3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation. **ENVIRONMENT CONCERNS PACKAGING MATERIALS** Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. on the product or on its The symbol packaging indicates that this product may not be treated as household waste.

Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic 6 equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. **PRODUCT DESCRIPTION** 1 2 3 8 9 10 4 5 6 7 8 12 11 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Internal lamp 6 Rating plate 7 Drain pump 8 Feet for appliance level 9 Water drain hose 10 Water inlet hose 11 Mains cable 12 Transit bolts 13 Feet for appliance level **ENGLISH 7 ACCESSORIES** 1 2 5 4 3 1 Spanner To remove the transit bolts. 2 Plastic caps To close the hoses on the rear side of the cabinet, when you remove the transit bolts.

3 Sound barrier To install on the bottom of the appliance to decrease the noise of the spin phase. 4 Plastic hose guide To connect the drain hose on the edge of a sink. 5 Anti-flood inlet hose To prevent possible leakage. **CONTROL PANEL** 1 2 3 Ontkreuk Opfrissen Eco Super Eco 20 Min. - 3 kg Outdoor Spoelen Centrifugeren/ Pompen Katoen Extra Stil Synthetica Strijkvrij Fijne Was Wol/Zijde Dekbed Auto Off Anti-Allergie Beladingsensor Stoom Geheugen 1 Geheugen 2 Temp.

°C TPM Vlekken/ Extra Tijd Voorw. Spoelen Besparen Startuitstel Start/Pauze 4 5 12 11 10 9 8 7 6 1 Auto Off button 2 Programme knob 3 Display 4 Dampf touch button 5 Memory touch buttons 6 Start/Pause touch button 7 Zeitvorwahl touch button 8 Zeit Sparen touch button 9 Extra Spülen touch button 10 Flecken/Vorwäsche/Einweichen touch button 11 Spin reduction touch button (U./ Min.) 12 Temperature touch button (Temp.) 8 **TOUCH SCREEN** Do not wear gloves when you touch the buttons. Make sure the touch screen and buttons are always clean and dry. **AUTO OFF BUTTON** 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

The AUTO OFF function automatically deactivates the appliance to decrease energy consumption when: DISPLAY 3 A · The washing programme is completed since five minutes. · You do not use the appliance for five minutes.

PROGRAMME KNOB 2 Turn this knob to set a programme. The related programme indicator goes on. B C D J I H G F E A The text bar: · Guides you in the use of the appliance. · Tells you about the programme status and phase. · Shows alarm messages. Refer to 'Trouble shooter and service'. The symbols appear on the display when the related phase or function is set. B Child lock Door locked The symbol comes on when the programme starts. You cannot open the door when the symbol is on. You can open the door only when the symbol goes on.

The symbol stays on, but the programme is completed: · There is water in the drum. · The ' Rinse Hold ' function is on. C ENGLISH 9 · The time of the day When you activate the appliance the display shows the time of the day for some seconds. To adjust the clock, refer to "Clock setting". · The programme duration When the washing programme starts, the programme time decreases every minute.

Programme duration symbol The symbol comes on when the digits shows the programme duration. D · The end time of the washing programme . Programme end symbol The symbol comes on when the digits shows the programme end time. · The time of delay When you set the delayed start the time of the programme end increases by steps of 30 minutes till 10 hours and by steps of one hour till 20 hours. · The end of the programme The display shows a zero. This part comes on only if the door is open - Refer to 'Loading the laundry'. The programme maximum load E The weight of the laundry The indicator bar fills accordingly the weight of the laundry. The indicator fully fills when you put the maximum load. If you need to set a function · An empty indicator bar comes on when the related function is available with the set programme. If an indicator bar does not come on, it means that it is not available. · The function symbol comes on when the function is set. · The indicator bar fills accordingly the function set. · If you make an incorrect selection the text bar on the display tells that the selection is not possible. Time save The symbol comes on when you set the following functions: F Shortened duration Extra quick 10 Extra rinsing G The indicator bar fills accordingly the numbers of rinses. Stains Prewash H Soak The indicator bar fills accordingly when you set the functions.

The default spin speed of the programme. I ___ No spin Rinse hold The default temperature of the programme. J DAMPF BUTTON 4 Touch the button 4 to set one of the three steam level in the programmes where steam function is available. The duration of the steam phase change accordingly your selection.

MEMORY BUTTONS 5 Touch one of the button 5 to memorise a programme or to set a memorised programme. Memorise a programme 1. Press the button 1 to activate the appliance. 2. Turn the programme knob (2) to your favourite programme. 3.

If it is necessary, set the one or more functions. 4. Hold touched one of the button 5 for some seconds. The buzzer sounds and the display tells that the programme is saved. Set a memorised programme 1.

Touch the button where you memorised the programme you want to set. Cold wash 2. The programme indicator comes on and the display shows all the information. To cancel a memorised programme you can only memorise a new programme. START/PAUSE BUTTON 6 Touch the button 6 to start or interrupt a programme.

ZEITVORWAHL BUTTON 7 Touch the button 7 to delay the start of a programme from 30 minutes to 20 hours. ZEIT SPAREN BUTTON 8 Touch the button 8 to dead Weight of load White and coloured cotton with heavy level of soil. Maximum load 9 kg Wash Rinses Long spin Functions SPIN REDUCTION OHNE SCHLEUDERN SPÜLSTOPP FLECKEN1) VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN ZEIT SPAREN3) DAMPF1) ENGLISH 13 Programme Extra Leise Temperature 95° - Cold Type of load Weight of load White and coloured cotton with normal level of soil. Maximum load 9 kg Wash Rinses Long spin Stop with water in the drum Functions SPÜLSTOPP FLECKEN1) VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN ZEIT SPAREN3) DAMPF1) SPIN REDUCTION OHNE SCHLEUDERN SPÜLSTOPP FLECKEN1) VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN ZEIT SPAREN3) DAMPF1) SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN DAMPF1) Pflegeleicht 60° - Cold Rinses Short spin Synthetic or mixed fabric items with normal soil. Maximum load 4 kg Wash Rinses Short spin Leichtbügeln 60° - Cold Synthetic fabric Wash items with norRinses mal soil. It preShort spin vents the creases of the laundry. Maximum load 1,5 kg 14 Programme Feinwäsche Temperature 40° - Cold Rinses Short spin Type of load Weight of load Delicate fabrics as acrylics, viscose, polyester items with normal soil. Maximum load 4 kg Wash Rinses Short spin Functions SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN VORWÄSCHE2) FLECKEN EINWEICHEN EXTRA SPÜLEN ZEIT SPAREN3) SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN Wolle / Seide 40° - Cold Rinses Short spin Machine wash- Wash ble wool as well Rinses as for hand wash- Short spin able woollens and delicate fabrics with «hand washing» care symbol. Maximum load 2 kg Special proWash gramme for one Rinses synthetic blanket, Short spin duvet, bedspread and so on. Maximum load 2 kg White cotton items4).

Maximum load 9 kg Wash at 60° Rinses Short spin Daunen 60° - 30° Rinses Short spin SPIN REDUCTION DAMPF1) Anti-Allergie 60° SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN FLECKEN VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN DAMPF1) ENGLISH 15 Programme Schleudern / Pumpen5) Temperature 0° Type of load Weight of load All fabrics. The maximum load of the laundry is related to the type of laundry. Hand washed items. Maximum load 9 kg Drainage of the water Spin phase at the maximum speed Rinse Long spin Functions SPIN REDUCTION OHNE SCHLEUDERN6) SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN EXTRA SPÜLEN SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN EXTRA RINSE SPIN REDUCTION OHNE SCHLEUDERN Spülen 0° Outdoor 40° - Cold Waterproof, sports and outdoor clothing. Do not use any fabric softener! Maximum load 2,5 kg Quick wash of sport items or cotton and synthetic items, lightly soiled or worn once. Maximum load 3 kg Mixed fabrics (cotton and synthetic items)7). Maximum load 3 kg Wash Rinses Short spin 20 min. - 3 kg 40° or 30° Wash Rinses Short spin Super Eco 0° Wash Rinses Long spin SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN EXTRA SPÜLEN 16 Programme Energiesparen Temperature 60° or 40° Type of load Weight of load White and fast coloured cotton with the normal soil8).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

Maximum load 9 kg Wash Rinses Short spin Functions SPIN REDUCTION SPÜLSTOPP OHNE SCHLEUDERN FLECKEN VORWÄSCHE2) EINWEICHEN EXTRA SPÜLEN ZEIT SPAREN3) 1) Not available with temperature lower than 40°C. 2) If you use liquid detergent, set a programme without PREWASH. 3) If you touch the button 8 to set the Extra Quick function, we recommend that you decrease the quantity of the load. It is possible to keep the full load but the washing results are not good. 4) This program removes the micro-organisms thanks to the washing by 60°C and adds on rinse. In this way the action is more effective. Important! Put into the compartment Stain a special additive for hygiene and select the option Stain. 5) The default spin speed is for cotton items. Set the spin speed applicable with your laundry. 6) If you select this function the appliance performs only a drain phase. 7) Use a special detergent for very low temperature. 8) Set this programme to have a good washing results and decrease the energy consumption. The time of the washing programme is extended. STEAM PROGRAMMES Programme 1) Dampf Auffrischen2) This cycle removes odour from the laundry. Steam does not remove animal odours. Dampf Glätten2) This programme helps to dewrinkle odour from the laundry. Type of load Cotton and synthetic items. Do not set the Steam programme for this type of clothes: · Clothes which is not specified on the care label as being suitable for tumble-drying. · Clothes with inclusion of plastic, metal, wooden parts or alike. Load up to 1,5 Kg up to 1,5 Kg Steam can be used for dried, washed or worn once laundry. These programmes can reduce creases and odours and make your laundry more smooth. Do not use any detergent.

If necessary, remove stains by washing or using localized stain removal. Steam programmes do not perform any hygienic cycle. Touch the button 4 to change the duration of steam phase. ENGLISH 17 1) If you set a Steam programme with dried laundry, at the end of the cycle the laundry feel humid. It is better to expose clothes to the open air for about 10 minutes to let the humidity go away. Laundry should be removed from the drum as quick as possible. After a steam cycle, clothes may be ironed anyway, but with less effort! 2) For the programme time, refer to the display. CONSUMPTION VALUES Programme1) White Cottons 95° C Cottons 60° Cotton economy at 60° C2) Cottons 40° Cotton economy at 40° C 2) Synthetics 40° Delicates 40° Wool/ Handwash 30° Energy consumption (KWh) 2.1 1.3 1. 02 0.75 0.75 0.5 0.55 0.

3 Water consumption (litre) 62 59 52 59 52 45 55 50 The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. 1) For the programme time, refer to the display. 2) This is the programme for the test institutes with a maximum load of cotton at the maximum spin speed agrees with the last approved version of the EN60456. BEFORE FIRST USE 1. Put 2 litre of water in the main wash compartment of the detergent dispenser to activate the drain system.

2. Put a small quantity of detergent in the main wash compartment of the detergent dispenser. Set and start a programme for cotton at the highest temperature without laundry. This removes all possible dirty from the drum and the tub. LANGUAGE SETTING The first time you activate the appliance, the display shows the default language and tells you to confirm it or change it: · Turn the programme knob to set the desired language. · When the display shows the necessary language, touch the button 6 to confirm the selection. CLOCK SETTING After you set the language, the display tells to set the clock: · The hour digits flash. · Turn the programme knob to change the hour. · Touch button 6 to confirm the selection. · The minute digits flash.

· Turn the programme knob to change the minutes. · Touch button 6 to confirm the selection. 18 USING THE APPLIANCE ACTIVATING THE APPLIANCE AND SETTING A PROGRAMME 1. Press the button 1 to activate the appliance. 2. @@The programme indicator comes on. 3. The indicator of the button 6 flashes with red colour. 4. The display shows the default temperature and spin.

@@@5. @@@@Open the appliance door. 2. @@The text bar on the display tells to add the laundry. 3.

Put the laundry in the drum, one item at a time. Shake the items before you put them in the appliance. 4. @@@@5. Close the door. The text bar on the display tells the quantity of detergent to put. This data is purely indicative and depends on the type of detergent. @@@@The detergent compartment for the washing phase. @@Liquid additives compartment (fabric conditioner, starch). Put the product in the compartment before you start the programme. This is the maximum level for the quantity liquid additives. The compartment for the stain remover. @@@@CHECK THE POSITION OF THE FLAP 1. Pull out the detergent dispenser until it stops. Press the lever down to remove the dispenser.

20 2. To use powder detergent, turn the flap up. 3. To use liquid detergent, turn the flap down. @@@@ Do not set the prewash phase. Do not set the delay start function. 4. Measure out the detergent and the fabric softener. 5. Carefully close the detergent dispenser.

SET THE DELAY START 1. Touch the button 7 again and again to set the desired delayed start. The display shows the expected end of the programme 2.

@@When the countdown is completed, the programme starts automatically. @@You cannot set the delay start with the Steam programme.

CANCEL THE DELAY START 1. Touch the button 6 . The related indicator flashes. 2. @@3.

Touch the button 6 . The programme starts. STARTING A PROGRAMME 1. Touch the button 6 to start the programme. @@If a delayed start is set, the appliance starts the countdown. ENGLISH 21 INTERRUPT A PROGRAMME 1. Touch the button 6 . The indicator flashes. 2. Touch the button 6 again.

The washing programme continues. CANCEL A PROGRAMME 1. Press the button 1 to cancel the programme and to deactivate the appliance. 2. Press the button 1 again to activate the appliance. Now, you can set a new washing programme. The appliance does not drain the water. CHANGE A FUNCTION You can change only some functions before they operate. 1. Touch the button 6 . The indicator flashes. 2. Change the function set. 3. Touch the button 6 again.

The washing programme continues. OPEN THE DOOR While a programme or the delay start operates, the appliance door is locked. To open the appliance door: 1. Touch the button 6 . The door lock symbol in the display goes off and a message tells you that the door is unlocked.

2. Open the appliance door. 3. Close the appliance door and touch the button 6 again. The programme or the delay start continues. If the heating element operates or the level of water in the drum is too high, the door lock symbol stays on. You cannot open the door, but it is necessary open it.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

1. Deactivate the appliance. 2.

Wait for some minutes. 3. Make sure that no water is in the drum. If you deactivate the appliance, it is necessary to set the programme again. AT THE END OF PROGRAMME 1. The appliance stops automatically. 2. The acoustic signals operate, if it is active. 3. In the display flashes and the message tells you that the programme is completed.

4. The indicator of the button 6 goes off. 5. The door lock symbol goes off from the display. 6.

Press the button 1 to deactivate the appliance. 7. Remove the laundry from the appliance. Make sure that the drum is empty. 8.

Keep the door ajar, to prevent mildew and odours. 9. Close the water tap. The washing programme is completed, but there is water in the drum: The drum turns regularly to prevent the creases in the laundry. The door stays locked. You must drain the water to open the door. To drain the water: 1. Press the button 1 to deactivate and activate the appliance. 2 2. Set the drain or spin programme.

If necessary, decrease the spin speed. 3. Touch the button 6 to start the programme. 4. When the programme is completed and the door lock symbol goes off, you can open the door 5. Press the button 1 deactivate the appliance. HELPFUL HINTS AND TIPS THE LAUNDRY LOAD · Divide the laundry in: white, coloured, synthetics, delicates and wool. · To wash correctly, obey the instructions that are on the laundry care labels. · Do not wash together white and coloured items. · Some coloured items can discolour in the first wash.

We recommend that you wash them separately for the first times. · Button up pillowcases, close zippers, hooks and poppers. Tie up belts. · Remove hard stains. · Wash with a special detergent areas with heavy soil.

· Be careful with the curtains. Remove the hooks or put the curtains in a bag. · Do not wash in the appliance : Laundry without hems or with cuts Underwired bras. Use a washing bag to wash small items. · A very small load can cause balance problems with the spin phase.

If this occurs, adjust manually the items in the tub and start the spin phase again. DETERGENTS AND ADDITIVES · Only use detergents and additives specially made for washing machines. · To help the environment, do not use more than the correct quantity of detergent. · Obey the instructions that you find on the on packaging of these products. · Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. · If you use liquid detergents, do not set the prewash phase. ECOLOGICAL HINTS To help the environment, use less water and energy, obey these instructions: · Set a programme without prewash phase to wash laundry with normal soil. · Always wash with the maximum load of the laundry. · To set a programme with lower temperature, use a stain remover before to wash. · To use the correct quantity of the detergent, check the water hardness of your domestic system WATER HARDNESS If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines.

In areas where the water hardness is soft it is not necessary to use a water softener. To know the water hardness in your area, contact your local water authority. Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness: · German degrees (°dH). · French degrees (°TH). · mmol/l (millimol for each litre - international unit for the hardness of water). · Clarke degrees. ENGLISH 23 Water hardness table
Level 1 2 3 4 Type soft medium hard very hard Water hardness °dH 0-7 8-14 15-21 > 21 °T.H. 0-15 16-25 26-37 > 37 mmol/l 0-1.
5 1.6-2.5 2.6-3.7 >3.

7 Clarke 0-9 10-16 17-25 >25 CARE AND CLEANING WARNING! Disconnect the appliance from the electricity supply before you clean it. DESCALING The water we use contains limescale. If it becomes necessary, use a water softener to remove limescales. Use a special product made for washing machines. Obey the instructions that you find on the packaging of the manufacturer.

Do this separately from the laundry wash. EXTERNAL CLEANING Clean the appliance only with soap and warm water. Fully dry all the surfaces. DOOR SEAL Regularly examine the seal and remove all objects from the inner part. CAUTION! Do not use alcohol, solvents or chemical products. MAINTENANCE WASH With the low temperature washes it is possible that some detergent stays in the drum. Make regularly a maintenance wash. To do this: · Empty the laundry from the drum. · Set the hottest cotton wash programme · Use a correct quantity of powder detergent with biological properties. After each wash, keep the door open for a while to prevent mould and to let unpleasant smells go out.

DRUM Regularly examine the drum to prevent limescale and rust particles. Only use special products to remove rust particles from the drum. To do this: · Clean the drum with special product for stainless steel. · Start a short programme for cotton at the maximum temperature with a small quantity of detergent. 24 DETERGENT DISPENSER To clean the dispenser: 1 1. Press the lever. 2. pull the dispenser out firmly. 2 3. Remove the top part of the liquid additive compartment.

4. Clean all the parts with water. 5. Clean the dispenser recess with a brush. 6.

Put back the dispenser in the recess. DRAIN PUMP Regularly examine the drain pump and make sure that it is clean. Clean the pump if: · The appliance does not drain the water. · The drum cannot turn. · The appliance makes an unusual noise because of the blockage of the drain pump.

· The display shows an alarm code because of the problem with water drain. WARNING! 1. Disconnect the mains plug from the socket. 2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump.

ENGLISH 25 To clean the drain pump: 1. Open the drain pump door. 2.

Pull the flap out to remove it. 3. Put a container below the recess of the drain pump to collect the water that flows out. 4. Press the two levers and pull forward the drainage duct to let the water flow out. 1 5. When the container is full of water, put the drainage duct back again and empty the container. Do previous step again until no more water flows out from the drain pump. 6. Pull back the drainage duct and turn the filter to remove it.

2 7. Remove fluff and objects from the pump. 8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre.

26 2 1 9. Clean the filter under the water tap and put it back in the pump into the special guides. 10. Make sure that you tighten correctly the filter to prevent leakages. 11.

Put the flap back and close the drain pump door. THE INLET HOSE FILTER AND THE VALVE FILTER It could be necessary to clean the filters when: · The appliance does not fill with water.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

· The appliance fills with the water for a long time. To clean the water inlet filters: · The indicator of the button 6 flashes and the display shows the related alarm. Refer to 'Trouble shooter and service'. **WARNING!** Disconnect the mains plug from the mains socket. 1. Close the water tap. 2. Remove the water inlet hose from the water tap.

3. Clean the filter in the inlet hose with a stiff brush. 4. Remove the inlet hose behind the appliance. 5. Clean the filter in the valve with a stiff brush or a towel. 6. Install again the inlet hose. Make sure that the couplings are tight to prevent leakages. 7.

Open the water tap. 45° 35° **EMERGENCY DRAIN** Because of a malfunction, the appliance cannot drain the water. If this occurs, do steps (1) through (6) of "Drain pump". Clean the pump, if it becomes necessary. Put the drainage duct back and close the drain pump flap.

ENGLISH 27 When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litre of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water. **FROST PRECAUTIONS** If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3. Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump. Obey the emergency drain procedure 6.

When the drain pump is empty, install the inlet hose again. **WARNING!** Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages that the very low temperature can do. **TROUBLE SHOOTER AND SERVICE** The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm message. Problem The display tells to check the tap: the appliance does not fill with water. Possible cause The water tap is closed. **WARNING!** Deactivate the appliance before you do the checks.

Possible solution Open the water tap. The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked . and cleaning'. The connection of the water inlet hose is not correct. The water pressure is too low. The water tap is blocked or is furred with limescale. Make sure that the connection is correct.

Contact your local water authority. Clean the water tap. 28 Problem The display tells to check the drain filter: the appliance does not drain the water.

Possible cause The water drain hose is damaged. Possible solution Make sure that the water drain hose has no damages. The filter of the drain pump is blocked. The connection of the water drain hose is not correct. The display tells to check the door. The display tells there is a water alert. The appliance door is open or not closed correctly.

The anti-flood device is activated. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct. Close the door correctly. · Disconnect the appliance. · Close the water tap. · Contact the service centre. **PROBLEM WITHOUT ALARM MESSAGE** Problem The appliance does not drain the water. Possible cause A washing programme without the drain phase is set.

The function Rinse Hold is on. The spin phase The spin phase is off. does not operate. The filter of the drain pump is blocked. Balance problems with the laundry load.

The programme does not start. The mains plug is not connected in the mains socket. Blow out fuse in the household fuse box. You did not press the 6 button. The delay start is set.

Possible solution Set the drain programme. Set the drain programme. Set the spin programme. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again. Put in the mains plug. Replace the fuse. press the 6 button. If necessary to wash the laundry immediately, cancel the delay start.

ENGLISH 29 Problem Possible cause The Child Lock function is activated. Possible solution Deactivate the Child Lock function. Make sure that the couplings are tight. Make sure that the drain pump filter is tight. Make sure that the water inlet hose has no damages. There is water on the floor. Leakages from the couplings of the water hoses. Leakages from the drain pump. The water drain hose is damaged. You cannot open the appliance door.

The washing programme Let the washing programme end. is in operation. There is water in the drum. Set the drain or the spin programme. Adjust the level of the appliance.

Refer to 'Installation'. Remove the packaging and/or the transit bolts. Refer to 'Installation'. Add more laundry in the drum. Make sure that the drain hose is in the correct position.

The appliance makes an unusual noise. Incorrect level of the appliance. You did not remove the packaging and/or the transit bolts. The load is very small. The appliance fills The end of the drain with water and hose is too low. drain immediately. The washing reThe detergent you used sults are not satis- was not sufficient or corfactory. rect. You did not remove the stubborn stains before you wash the laundry. You set a not correct temperature.

Too much laundry load. The internal lamp is off. After a steam programme, garments are partially wet. The lamp is burned. The appliance is not accurately levelled. Increase the detergent quantity or use a different one. Use special products to remove the stubborn stains. Make sure that you set the correct temperature. Decrease the laundry load. To replace the lamp, contact the service centre.

Check the levelling and adjust the appliance by raising or lowering the feet. 30 Problem After a steam programme, garments are not sufficiently smooth. Possible cause A wrong **STEAM** programme has been selected (e.g. Synthetic instead of Cotton).

Excessive laundry load. Possible solution Note the composition of the fabric. Reduce the laundry load Press the button 1 to deactivate the appliance and to activate it again. Press the button 1 to deactivate the appliance . Empty the drum and obey to the necessary steps.

(Refer to 'Loading the laundry') The drum is emp- It is necessary to set a ty and the display tare. shows there is some weight in . The drum is full but the display shows 0.0 kg. You loaded the laundry before to activate the appliance. After the check, activate the appliance. The programme continues from the point of interruption. If the problem occurs again, contact the service centre. **SERVICE** If the display shows other alarm message, contact the service centre.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>

· Refer to the information supplied with this appliance for guarantee condition and point of contact.

The information to give to the service is on the rating plate. We recommend that you write the information here: Model (MOD.)

.....

.....

Product number (PNC) Serial number (S.N.)

.....

.....

.....

..... TECHNICAL DATA Dimensions Electrical connection: Width / Height / Depth Voltage Overall power Fuse Frequency Minimum Maximum Water supply 1) 600 / 850 / 600 mm 230 V 2200 W 10 A 50 Hz 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water Water supply pressure ENGLISH 31 Maximum load Spin speed Cotton Maximum 9 kg 1400 rpm (L 98499 FL) 1600 rpm (L 98699 FL) 1) Connect the water inlet hose to a water tap with a 3/4" thread.

INSTALLATION UNPACKING 1.

Use the gloves. Remove the external film. Use a cutter, if it is necessary. 2. Remove the cardboard top. 3. Remove the polystyrene packaging materials. 4. Remove the internal film. 32 5.

Open the door. @@Put the polystyrene front piece on the floor behind the appliance. Carefully put down the appliance with the rear side on it. Make sure that the hoses are not damaged. 7.

Remove the polystyrene protection from the bottom. 1 2 8. Clean and dry fully the surfaces of the bottom of the appliance. @@@@ Remove the adhesive strip from the silent barriers. Attach the four barriers to surfaces of the bottom previously indicated.

Refer to the illustration. Make sure that the barriers are securely attached. x4 A B 11. Pull up the appliance in vertical position. 12. Remove the power supply cable and the drain hose from the hose holders. 34 13. Turn the three bolts with the key supplied with the appliance. Pull out the plastic spacers. 14.

Replace the plastic spacers with the plastic caps. You can find these caps in the user manual bag. WARNING! Remove all the packaging and the transit bolts before you install the appliance. POSITIONING AND LEVELLING We recommend that you keep the packaging and the transit bolts for when you move the appliance. x4 · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance. · Make sure that the appliance does not touch the wall or other kitchen units · Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation. ENGLISH 35 · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.

THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right. Loose the ring nut to set it in the correct position. 35 O 45 O · Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings.

Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose. 36 WATER-STOP DEVICE The inlet hose has a water stop device. This device prevents damage of water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault .

If this occur, close the water tap and contact the service centre to replace the hose. A WATER DRAINAGE There are some procedure to connect the drain hose: With the plastic hose guide. · On the edge of a sink. · Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall. · To a stand pipe with vent-hole. Refer to the illustration. Directly into a drain pipe at a height of not less than 60 cm and not more than 100 cm. The end of the drain hose must always be ventilated , i.e.

the inner diameter of the drainpipe must be larger than the external diameter of the drain hose. ENGLISH 37 Without the plastic hose guide. · To a sink spigot. Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip. Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink. · Directly to a built-in drain pipe in the room wall. You can extend the drain hose to maximum 400 mm. Contact the service centre for the other drain hose and the extension. 38 ENGLISH 39 www.

aeg-electrolux.com/shop 132940570-A-432010 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX L98699FL user guide](http://yourpdfguides.com/dref/3348003)
<http://yourpdfguides.com/dref/3348003>